



## Contents

<b>01 - Self-diagnosis</b> .....	<b>1</b>
<b>1 Self-diagnosis</b> .....	<b>1</b>
1.1 Self-diagnosis .....	1
1.2 Tools .....	1
1.3 Connecting fault reader .....	2
<b>2 Self-diagnosis of airbag system</b> .....	<b>5</b>
2.1 Self-diagnosis of airbag system .....	5
2.2 Function .....	5
2.3 Coding airbag control unit using fault reader V.A.G 1551 .....	20
2.4 Adaption (deactivating and activating) .....	22
2.5 Read measured value block .....	29
2.6 Test box VAS 5056 .....	35
2.7 Final control diagnosis .....	37
<b>3 Self-diagnosis for convenience system</b> .....	<b>38</b>
3.1 Self-diagnosis for convenience system .....	38
3.2 Functional description .....	38
3.3 Determining which source has possibly triggered the anti-theft alarm .....	39
3.4 Initiating self-diagnosis for the convenience system .....	39
3.5 Overview of the selectable functions .....	40
3.6 Interrogating control unit version .....	41
3.7 Coding convenience system control unit using fault reader V.A.G 1551 .....	42
3.8 Interrogating fault memory .....	43
3.9 Erasing fault memory .....	44
3.10 Ending output .....	45
3.11 Fault table .....	46
3.12 Final control diagnosis .....	48
3.13 Reading measured value block .....	49
3.14 Display group overview .....	50
3.15 Matching ignition keys to radio remote control .....	56
3.16 Matching a new additional key .....	58
3.17 Radio remote control functional variations .....	59
3.18 Removing and installing batteries for the main key with radio wave remote control .....	61
<b>4 Self-diagnosis for the interior monitoring system</b> .....	<b>63</b>
4.1 Self-diagnosis for the interior monitoring system .....	63
4.2 Description of the interior monitoring system .....	63
4.3 Anti-theft alarm system active indicator .....	63
4.4 Initiating self-diagnosis for the interior monitoring system .....	63
4.5 Overview of the selectable functions .....	64
4.6 Interrogating fault memory .....	65
4.7 Erasing fault memory .....	66
4.8 Ending output .....	67
4.9 Fault table .....	67
4.10 Final control diagnosis .....	68
4.11 Reading measured value block .....	70
4.12 Display group overview .....	71