



## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Gearbox identification</b> .....	<b>1</b>
1.1 Gearbox identification .....	1
1.2 Code letters, gearbox allocation, ratios, capacities .....	2
1.3 Code letters, gearbox allocation, ratios, capacities 2 .....	9
<b>2 Transmission layout</b> .....	<b>18</b>
2.1 Transmission layout .....	18
<b>3 Calculating overall ratio "i"</b> .....	<b>20</b>
3.1 Calculating overall ratio "i" .....	20
<b>4 General repair instructions</b> .....	<b>20</b>
4.1 General repair instructions .....	20
<b>30 - Clutch</b> .....	<b>22</b>
<b>1 Servicing clutch control</b> .....	<b>22</b>
1.1 Servicing clutch control .....	22
1.2 Checking clutch cable function .....	25
1.3 Removing and installing clutch cable (up to 26.04.95) .....	27
1.4 Modifications to clutch cable (from 27.04.95) .....	30
1.5 Removing and installing clutch cable (from 27.04.95) .....	31
1.6 Clutch cable on RHD vehicles (from 27.04.95) .....	35
1.7 Removing and installing clutch pedal .....	37
<b>2 Servicing clutch release mechanism</b> .....	<b>40</b>
2.1 Servicing clutch release mechanism .....	40
<b>3 Servicing clutch</b> .....	<b>45</b>
3.1 Servicing clutch .....	45
<b>34 - Controls, Housing</b> .....	<b>51</b>
<b>1 Servicing selector mechanism (rod selector mechanism)</b> .....	<b>51</b>
1.1 Servicing selector mechanism (rod selector mechanism) .....	51
1.2 I - Servicing gear stick housing and selector rod .....	52
1.3 Installing gear stick gaiter to gear stick knob .....	55
1.4 II - Servicing gear stick and cable .....	56
1.5 Removing and installing gear change mechanism .....	60
1.6 Adjusting selector mechanism (rod selector mechanism) .....	64
<b>2 Servicing selector mechanism (cable selector mechanism)</b> .....	<b>68</b>
2.1 Servicing selector mechanism (cable selector mechanism) .....	68
2.2 Installation position of gear selector mechanism .....	68
2.3 I - Servicing gear stick housing .....	70
2.4 Installing gear stick gaiter to gear stick knob .....	72
2.5 II - Servicing gear stick .....	73
2.6 III - Assembly overview - removing and installing - selector cables .....	76
2.7 Removing and installing gear selector mechanism .....	82
2.8 Adjusting gear selector mechanism (cable control gear selection) .....	84
<b>3 Removing and installing gearbox</b> .....	<b>87</b>
3.1 Removing and installing gearbox .....	87
<b>4 Checking gear oil</b> .....	<b>102</b>
4.1 Checking gear oil .....	102
<b>5 Dismantling and assembling gearbox</b> .....	<b>103</b>
5.1 Dismantling and assembling gearbox .....	103
5.2 Dismantling and assembling sequence .....	111
<b>6 Servicing clutch housing</b> .....	<b>125</b>
6.1 Servicing clutch housing .....	125



7	<b>Adjusting selector finger and selector sleeve</b> .....	134
7.1	Adjusting selector finger and selector sleeve .....	134
<b>35 - Gears, Shafts</b> .....		<b>136</b>
1	<b>Dismantling and assembling input shaft</b> .....	<b>136</b>
1.1	Dismantling and assembling input shaft .....	136
2	<b>Adjusting input shaft</b> .....	<b>145</b>
2.1	Adjusting input shaft .....	145
3	<b>Dismantling and assembling output shaft</b> .....	<b>148</b>
3.1	Dismantling and assembling output shaft .....	148
4	<b>Adjusting output shaft</b> .....	<b>163</b>
4.1	Adjusting output shaft .....	163
<b>39 - Final drive, Differential rear</b> .....		<b>166</b>
1	<b>Renewing selector shaft seal with gearbox in situ</b> .....	<b>166</b>
1.1	Renewing selector shaft seal with gearbox in situ .....	166
2	<b>Renewing oil seals for flanged shafts with gearbox installed</b> .....	<b>168</b>
2.1	Renewing oil seals for flanged shafts with gearbox installed .....	168
3	<b>Dismantling and assembling differential</b> .....	<b>170</b>
3.1	Dismantling and assembling differential .....	170
3.2	Removing and installing final drive gear wheel .....	177
4	<b>Adjustment overview</b> .....	<b>180</b>
4.1	Adjustment overview .....	180
5	<b>Adjusting differential</b> .....	<b>180</b>
5.1	Adjusting differential .....	180