



Contents

00 - Technical data	1
1 Gearbox identification	1
1.1 Gearbox identification	1
1.2 Code letters, gearbox allocation, ratios, capacities	2
2 Transmission layout	3
2.1 Transmission layout	3
3 Calculating overall ratio "i"	5
3.1 Calculating overall ratio "i"	5
4 General repair instructions	5
4.1 General repair instructions	5
30 - Clutch	8
1 Servicing clutch control	8
1.1 Servicing clutch control	8
1.2 Assembly overview - Pedal cluster	9
1.3 Removing and installing clutch pedal	13
1.4 Removing and installing over-centre spring	16
1.5 Assembly overview - Hydraulic system	18
1.6 Removing and installing master cylinder	21
1.7 Bleeding clutch system	25
2 Servicing clutch release mechanism	26
2.1 Servicing clutch release mechanism	26
3 Servicing clutch	29
3.1 Servicing clutch	29
34 - Controls, Housing	34
1 Servicing gear selector mechanism	34
1.1 Servicing gear selector mechanism	34
1.2 Installation position of gear selector mechanism	34
1.3 Removing and installing selector lever knob and gaiter	37
1.4 Servicing gear stick and gear stick housing	39
1.5 Assembly overview - removing and installing selector cables	43
1.6 Removing and installing gear selector mechanism	46
1.7 Adjusting gear selector mechanism	48
2 Removing and installing gearbox	52
2.1 Removing and installing gearbox	52
3 Checking gear oil	67
3.1 Checking gear oil	67
4 Dismantling and assembling gearbox	68
4.1 Dismantling and assembling gearbox	68
4.2 Overview	68
4.3 Assembly overview	70
4.4 Removing and installing cover for gearbox housing and 5th gear	71
4.5 Removing and installing gearbox housing and selector mechanism	74
4.6 Removing and installing input shaft, output shaft (pinion shaft), differential and selector forks	76
4.7 Assembly sequence	79
5 Servicing gearbox housing and clutch housing	97
5.1 Servicing gearbox housing and clutch housing	97
6 Dismantling and assembling gearbox selector mechanism	107
6.1 Dismantling and assembling gearbox selector mechanism	107
7 Dismantling and assembling selector forks	113



7.1	Dismantling and assembling selector forks	113
35	- Gears, Shafts	120
1	Dismantling and assembling input shaft	120
1.1	Dismantling and assembling input shaft	120
2	Adjusting input shaft	133
2.1	Adjusting input shaft	133
2.2	Table of adjustment shims	135
2.3	Performing measurement check	137
3	Dismantling and assembling output shaft	138
3.1	Dismantling and assembling output shaft	138
3.2	From gearbox build date 04 09 0 the synchronisation for 1st gear has been modified	164
4	Adjusting output shaft	168
4.1	Adjusting output shaft	168
5	Dismantling and assembling reverse shaft	171
5.1	Dismantling and assembling reverse shaft	171
39	- Final drive, Differential rear	176
1	Renewing oil seals for flanged shafts	176
1.1	Renewing oil seals for flanged shafts	176
1.2	Renewing oil seal for left flanged shaft	176
1.3	Renewing oil seal for right flanged shaft	179
2	Dismantling and assembling differential	182
2.1	Dismantling and assembling differential	182
3	Adjustment overview	195
3.1	Adjustment overview	195
4	Adjusting differential	196
4.1	Adjusting differential	196