



Contents

00 - Technical data	1
1 Identification of gearbox	1
1.1 Identification of gearbox	1
2 Information on "Automatic gearbox 001"	2
2.1 Information on "Automatic gearbox 001"	2
3 Code letters, gearbox allocation, ratios, equipment	3
3.1 Code letters, gearbox allocation, ratios, equipment	3
4 Capacities	8
4.1 Capacities	8
5 Repair instructions	8
5.1 Repair instructions	8
32 - Torque converter	12
1 Torque converter	12
1.1 Torque converter	12
1.2 Identification of torque converter	12
1.3 Draining torque converter	13
1.4 Removing and installing torque converter oil seal	13
1.5 Installing torque convertor	14
37 - Controls, Housing	15
1 Locations of electrical/electronic components	15
1.1 Locations of electrical/electronic components	15
1.2 Components in vehicle	15
1.3 Locations of diagnosis connections	22
1.4 Components on gearbox	23
2 Servicing gear change mechanism	28
2.1 Servicing gear change mechanism	28
2.2 Checking shift mechanism	29
2.3 Checking operation of the ignition key withdrawal lock	29
2.4 Removing and installing locking cable on vehicles with ignition key removal lock	30
2.5 Checking and adjusting selector lever cable on vehicles up to 06.99	34
2.6 Checking and adjusting selector lever cable on vehicles from 07.99	35
2.7 Dismantling and assembling selector mechanism on vehicles without key withdrawal lock up to 06.99	37
2.8 Dismantling and assembling selector mechanism on vehicles with ignition key removal lock from 06.99	46
2.9 Dismantling and assembling selector lever on vehicles with ignition key removal lock up to 06.99	52
2.10 Dismantling and assembling selector mechanism on vehicles from 07.99	59
2.11 Removing and installing selector lever handle on vehicles from 07.99	62
3 Removing and installing gearbox	65
3.1 Removing and installing gearbox	65
4 Checking ATF level and topping up	76
4.1 Checking ATF level and topping up	76
5 Gearbox with selector elements	81
5.1 Gearbox with selector elements	81
5.2 Position of coupling elements	82
6 Dismantling and assembling gearbox	84
6.1 Dismantling and assembling gearbox	84
6.2 Removing and installing ATF cooler and ATF filler tube	84
6.3 Dismantling and assembling planetary gearbox -Overview-	86
6.4 I - Removing and installing ATF pump up to large sun wheel	87



6.5	II - Removing and installing gearbox housing cover up to input gear	91
6.6	Dismantling and assembling planetary gearbox	96
6.7	Overview of all planetary gearbox adjustments	124
6.8	Adjusting reverse gear brake -B1-	125
6.9	Adjusting 2nd and 4th gear brake -B2-	129
6.10	Adjusting clutch play	132
38	- Gears, Hydraulic controls	139
1	Dismantling and assembling ATF pump	139
1.1	Dismantling and assembling ATF pump	139
2	Dismantling and assembling free-wheel	141
2.1	Dismantling and assembling free-wheel	141
3	Dismantling and assembling 1st to 3rd gear clutch -K1-	143
3.1	Dismantling and assembling 1st to 3rd gear clutch -K1-	143
4	Dismantling and assembling reverse gear clutch -K2-	147
4.1	Dismantling and assembling reverse gear clutch -K2-	147
5	Dismantling and assembling 3rd and 4th gear clutch -K3-	151
5.1	Dismantling and assembling 3rd and 4th gear clutch -K3-	151
6	Dismantling and assembling reverse gear brake	156
6.1	Dismantling and assembling reverse gear brake	156
6.2	Dismantling and assembling reverse gear brake -B1-	156
7	Dismantling and assembling piston for 2nd and 4th gear brake -B2-	160
7.1	Dismantling and assembling piston for 2nd and 4th gear brake -B2-	160
8	Removing and installing valve chest	164
8.1	Removing and installing valve chest	164
8.2	Vehicles up to 06.99	165
8.3	Vehicles from 07.99	170
9	Dismantling and assembling parking lock	175
9.1	Dismantling and assembling parking lock	175
39	- Final drive, Differential	180
1	Renewing oil seals for flanged shafts	180
1.1	Renewing oil seals for flanged shafts	180
1.2	Removing and installing left-hand flange shaft	181
1.3	Removing and installing right-hand flange shaft	184
2	Dismantling and assembling final drive	187
2.1	Dismantling and assembling final drive	187
2.2	Repair overview of final drive	187
2.3	Removing and installing differential	189
2.4	Removing and installing drive pinion	192
2.5	Dismantling and assembling differential	198
3	Adjusting final drive	204
3.1	Adjusting final drive	204
3.2	Overview of adjustments	204
3.3	Adjustments to be performed after replacing individual components	205
3.4	Adjusting differential	206
3.5	Adjusting drive pinion	209
4	Definitions	212
4.1	Definitions	212