



Contents

01 - Self-diagnosis	1
1 Self-diagnosis function	1
1.1 Self-diagnosis function	1
1.2 Data bus	1
1.3 Technical data of self-diagnosis	4
1.4 Self-diagnosis - Guide for automatic gearbox	4
2 Performing self-diagnosis	5
2.1 Performing self-diagnosis	5
2.2 Safety precautions	5
2.3 Locations of diagnosis connections	6
2.4 Connecting vehicle diagnosis, testing and information system VAS 5051	6
2.5 Connecting fault reader V.A.G 1551 and selecting functions	7
2.6 Automatic test sequence	7
2.7 List of selectable functions	9
2.8 Interrogating fault memory	9
3 Fault table	10
3.1 Fault table	10
4 Erasing fault memory	15
4.1 Erasing fault memory	15
5 Initiating basic setting	16
5.1 Initiating basic setting	16
6 Read measured value block	17
6.1 Read measured value block	17
6.2 Test table	18
7 End output	24
7.1 End output	24
8 Checking solenoid valves whilst driving	25
8.1 Checking solenoid valves whilst driving	25
8.2 For vehicles up to >09.99	25
8.3 On vehicles from 10.99 >	26
9 Gearbox: Electrical check	27
9.1 Gearbox: Electrical check	27
9.2 Electrical check for vehicles up to > 09.99 (with 45-pin control unit connector)	29
9.3 Test table for vehicles up to > 09.99 (with 45-pin control unit connector)	30
9.4 Electrical check for vehicles from 10.99 >(with 68-pin control unit connector)	35
9.5 Test table for vehicles from 10.99 > (with 68-pin control unit connector)	37
10 Definitions	42
10.1 Definitions	42