



Contents

01 - Self-diagnosis	1
1 Self-diagnosis	1
1.1 Self-diagnosis	1
1.2 Features of self-diagnosis	1
1.3 Technical data of self-diagnosis	1
1.4 Connecting fault reader V.A.G 1551 and selecting engine control unit	2
1.5 Connecting Vehicle Diagnosis, Testing and Information system VAS 5051 and selecting engine electronics control unit	4
2 Fault memory	7
2.1 Fault memory	7
2.2 Interrogating fault memory	7
2.3 Erasing fault memory	8
3 Fault table: Fault codes 00515...01282	9
3.1 Fault table: Fault codes 00515...01282	9
4 Fault table: Fault codes 16485...18076	11
4.1 Fault table: Fault codes 16485...18076	11
5 Final control diagnosis	21
5.1 Final control diagnosis	21
5.2 Performing final control diagnosis	21
6 Measured value blocks	24
6.1 Measured value blocks	24
6.2 Safety precautions	24
6.3 Reading measured value block	24
6.4 Measured values at idling speed	25
6.5 Measured values at full throttle	32
23 - Mixture preparation, Injection	37
1 Servicing Diesel direct injection system	37
1.1 Servicing Diesel direct injection system	37
1.2 Safety precautions	37
1.3 Rules for cleanliness	37
1.4 Fitting locations overview	38
1.5 Servicing intake manifold flap	41
1.6 Servicing unit injector	43
1.7 Removing and installing O rings for unit injector	46
1.8 Removing and installing unit injector	48
2 Checking components and functions	52
2.1 Checking components and functions	52
2.2 Checking Diesel direct injection system voltage supply	52
2.3 Checking engine speed sender	53
2.4 Checking intake manifold pressure sender and elevation sender	54
2.5 Checking coolant temperature sender	56
2.6 Checking brake light switch and brake pedal switch	58
2.7 Checking clutch pedal switch	59
2.8 Checking intake manifold temperature sender	61
2.9 Checking fuel temperature sender	63
2.10 Checking air mass meter	65
2.11 Checking intake manifold flap change-over	68
2.12 Checking unit injector valves	70
2.13 Checking camshaft position Hall sender	73
3 Checking additional signals	74
3.1 Checking additional signals	74
3.2 Checking speed signal	74



3.3	Checking signals from/to air conditioning system	76
3.4	Checking engine speed signal	78
3.5	Checking cruise control system (CCS)	79
3.6	Checking data bus	81
4	Replacing, coding and matching engine control unit	81
4.1	Replacing, coding and matching engine control unit	81
4.2	Replacing engine control unit	81
4.3	Coding engine control unit	82
4.4	Matching engine control unit to electronic immobilizer	83
28	Glow plug system	85
1	Checking glow plug system	85
1.1	Checking glow plug system	85
1.2	Checking glow plugs	86