



## Contents

<b>01 - Self-diagnosis</b> . . . . .	<b>1</b>
<b>1 Self-diagnosis</b> . . . . .	<b>1</b>
1.1 Self-diagnosis . . . . .	1
1.2 Features of self-diagnosis . . . . .	1
1.3 Technical data of self-diagnosis . . . . .	1
1.4 Connecting fault reader V.A.G 1551 and selecting engine control unit . . . . .	2
1.5 Interrogating and erasing fault memory . . . . .	3
1.6 Fault table . . . . .	5
1.7 Final control diagnosis . . . . .	10
1.8 Read measured value block and basic settings . . . . .	12
1.9 Display group overview engine codes AER, ALL . . . . .	13
1.10 Display group overview engine codes AEX, AKV, ANX, APQ . . . . .	16
<b>24 - Mixture preparation, Injection</b> . . . . .	<b>19</b>
<b>1 Servicing injection system</b> . . . . .	<b>19</b>
1.1 Servicing injection system . . . . .	19
1.2 Fitting locations overview . . . . .	19
1.3 General notes on injection . . . . .	21
1.4 Removing and installing parts of the injection system . . . . .	23
1.5 Dismantling and assembling fuel rail with injectors . . . . .	29
1.6 Dismantling and assembling intake manifold . . . . .	30
1.7 Dismantling and assembling air cleaner . . . . .	33
1.8 Safety precautions . . . . .	36
1.9 Rules for cleanliness . . . . .	36
1.10 Technical data . . . . .	36
1.11 Performing basic setting . . . . .	37
1.12 Checking Lambda probe and Lambda control . . . . .	38
1.13 Checking Lambda probe heating . . . . .	40
1.14 Checking engine operating mode . . . . .	41
1.15 Checking throttle valve control part . . . . .	43
1.16 Checking intake manifold pressure sender . . . . .	49
1.17 Testing speed signal . . . . .	50
1.18 Checking coolant temperature sender . . . . .	51
1.19 Checking intake air temperature sender . . . . .	54
1.20 Checking control unit voltage supply . . . . .	57
1.21 Matching engine control unit to electronic immobilizer . . . . .	58
1.22 Idling speed boost . . . . .	59
1.23 Checking air conditioner and air conditioner compressor signals . . . . .	61
1.24 Checking injectors . . . . .	63
1.25 Checking fuel pressure regulator and holding pressure . . . . .	65
1.26 Checking intake air system for leaks (unmetered air) . . . . .	68
1.27 Checking intake air preheating . . . . .	68
1.28 Wire routing engine wiring loom . . . . .	70
<b>28 - Ignition system</b> . . . . .	<b>72</b>
<b>1 Servicing ignition system</b> . . . . .	<b>72</b>
1.1 Servicing ignition system . . . . .	72
1.2 General notes on ignition system . . . . .	72
1.3 Removing and installing parts of the ignition system . . . . .	73
1.4 Dismantling and assembling distributor . . . . .	76
1.5 Safety precautions . . . . .	77
1.6 Adjustment data, Spark plugs . . . . .	77
1.7 Checking and adjusting ignition timing . . . . .	77
1.8 Checking Hall sender . . . . .	79



**Polo 1995 ➤**

**Motronic injection and ignition system - Edition 02.1998**

---

1.9	Checking ignition transformer and output stage . . . . .	80
1.10	Checking knock sensor . . . . .	82