



Contents

01 - Self diagnosis	1
1 Self diagnosis	1
1.1 Self diagnosis	1
1.2 Function	1
1.3 Technical data of self diagnosis	1
1.4 Connecting fault reader V.A.G 1551 and selecting engine electronics control unit	2
1.5 Interrogating fault memory	3
1.6 Fault table	4
1.7 Erasing fault memory	6
1.8 Final control diagnosis	7
1.9 Erasing values learnt by engine electronics control unit	10
1.10 Read measured value block and basic settings	11
1.11 Display group overview	11
24 - Mixture preparation, Injection	15
1 Mono-Motronic injection and ignition system	15
1.1 Mono-Motronic injection and ignition system	15
1.2 Fitting locations overview	15
1.3 Servicing injection part	17
1.4 Dismantling and assembling intake manifold	23
1.5 Dismantling and assembling air cleaner	24
1.6 Servicing injection unit	26
1.7 Safety precautions	31
1.8 Rules for cleanliness	31
1.9 Technical data	32
1.10 Idling speed check	32
1.11 Checking Lambda probe and Lambda control	33
1.12 Checking Lambda probe heating	36
1.13 Checking engine operating mode	36
1.14 Checking throttle valve positioner	38
1.15 Checking and adjusting idling switch	40
1.16 Checking sender for throttle valve positioner	43
1.17 Checking throttle valve potentiometer	44
1.18 Checking coolant temperature sender	46
1.19 Checking intake air temperature sender	48
1.20 Checking injector	51
1.21 Checking speed signal	53
1.22 Checking control unit voltage supply	54
1.23 Checking air conditioner and air conditioner compressor signals	55
1.24 Matching engine electronic control unit to electronic immobilizer	57
1.25 Adapting idling speed	58
1.26 Checking fuel pressure regulator and holding pressure	59
1.27 Checking intake air system for leaks (unmetered air)	61
1.28 Checking intake air preheating	62
1.29 Wire routing engine wiring loom	63
28 - Ignition system	65
1 Mono-Motronic injection and ignition system	65
1.1 Mono-Motronic injection and ignition system	65
1.2 Servicing ignition part	65
1.3 Dismantling and assembling distributor	69
1.4 Safety precautions	70
1.5 Adjustment data, Spark plugs	70
1.6 Checking and adjusting ignition timing	70



1.7	Checking ignition timing control	72
1.8	Checking Hall sender	72
1.9	Checking ignition transformer	73
1.10	Checking ignition transformer output stage	74
1.11	Checking knock sensor	76