



## Contents

<b>01 - Self-diagnosis</b> .....	<b>1</b>
<b>1 Self-diagnosis</b> .....	<b>1</b>
1.1 Self-diagnosis .....	1
1.2 Features of self-diagnosis .....	1
1.3 Technical data of self-diagnosis .....	1
1.4 Connecting fault reader V.A.G 1551 and selecting engine control unit .....	2
1.5 Connecting Vehicle Diagnosis, Testing and Information system VAS 5051 and selecting engine electronics control unit .....	4
1.6 Interrogating and erasing fault memory .....	6
1.7 Fault table .....	8
<b>2 Final control diagnosis</b> .....	<b>12</b>
2.1 Final control diagnosis .....	12
2.2 Performing final control diagnosis .....	12
<b>3 Measured value blocks</b> .....	<b>15</b>
3.1 Measured value blocks .....	15
3.2 Read measured value block and basic settings .....	15
3.3 Display group overview .....	16
<b>24 - Mixture preparation, Injection</b> .....	<b>19</b>
<b>1 Servicing injection system</b> .....	<b>19</b>
1.1 Servicing injection system .....	19
1.2 Fitting locations overview .....	19
1.3 General notes on injection .....	21
1.4 Removing and installing parts of the injection system .....	23
1.5 Dismantling and assembling fuel rail with injectors .....	29
1.6 Dismantling and assembling intake manifold .....	30
1.7 Dismantling and assembling air cleaner .....	32
1.8 Safety precautions .....	35
1.9 Rules for cleanliness .....	35
1.10 Technical data .....	35
<b>2 Check components and functions</b> .....	<b>36</b>
2.1 Check components and functions .....	36
2.2 Checking Lambda probe and Lambda control .....	36
2.3 Checking Lambda probe heating .....	38
2.4 Checking engine operating mode .....	39
2.5 Checking throttle valve control part .....	41
2.6 Checking intake manifold pressure sender .....	47
2.7 Checking coolant temperature sender .....	49
2.8 Checking intake air temperature sender .....	52
2.9 Checking injectors .....	55
2.10 Checking fuel pressure regulator and holding pressure .....	57
2.11 Checking intake air system for leaks (unmetered air) .....	60
2.12 Checking intake air preheating .....	60
2.13 Wire routing engine wiring loom .....	62
<b>3 Replacing and matching engine control unit</b> .....	<b>63</b>
3.1 Replacing and matching engine control unit .....	63
3.2 Replacing engine control unit .....	63
3.3 Performing basic setting .....	64
3.4 Matching engine control unit to electronic immobilizer .....	65
3.5 Checking control unit voltage supply .....	66
<b>4 Checking additional signals</b> .....	<b>67</b>
4.1 Checking additional signals .....	67
4.2 Testing speed signal .....	67



4.3	Checking air conditioner and air conditioner compressor signals . . . . .	69
<b>28</b>	<b>- Ignition system . . . . .</b>	<b>71</b>
<b>1</b>	<b>  Servicing ignition system . . . . .</b>	<b>71</b>
1.1	Servicing ignition system . . . . .	71
1.2	General notes on ignition system . . . . .	71
1.3	Removing and installing parts of the ignition system . . . . .	72
1.4	Dismantling and assembling distributor . . . . .	75
1.5	Safety precautions . . . . .	76
1.6	Adjustment data, Spark plugs . . . . .	76
1.7	Checking and adjusting ignition timing . . . . .	76
1.8	Checking Hall sender . . . . .	78
1.9	Checking ignition transformer and output stage . . . . .	79
1.10	Checking knock sensor . . . . .	81