



Contents

00 - Technical data	1
1 Technical data	1
1.1 Engine number	1
1.2 Engine data	1
10 - Removing and installing engine	3
1 Removing and installing engine	3
1.1 Tools	3
1.2 Notes on removing	4
1.3 Notes on installing	5
1.4 Specified torques	6
1.5 Assembly mountings	7
1.6 Additional notes and assembly work for vehicles with air conditioner	8
13 - Crankshaft group	9
1 Crankshaft group	9
1.1 Dismantling and assembling engine	9
1.2 Removing and installing poly V-belt	13
1.3 Removing, installing and tensioning toothed belt	14
1.4 Checking semi-automatic toothed belt tensioning roller	16
2 Dismantling and assembling cylinder block, crankshaft and flywheel	19
2.1 Cast iron cylinder block	19
2.2 Aluminium cylinder block	20
2.3 Renewing crankshaft oil seal - belt pulley end	22
2.4 Vehicles with Duocentric oil pump	23
2.5 Crankshaft dimensions	25
3 Dismantling and assembling pistons and conrods	26
3.1 Engine code	26
3.2 Piston and cylinder dimensions	31
15 - Cylinder head, valve gear	33
1 Cylinder head, valve gear	33
1.1 Assembly overview - cylinder head	33
1.2 Removing and installing cylinder head	35
1.3 Checking compression	39
2 Repairing valve gear	40
2.1 Assembly overview - valve gear	40
2.2 Reworking valve seats	43
2.3 Renewing camshaft oil seal	46
2.4 Checking hydraulic bucket tappets	48
2.5 Removing and installing camshaft	49
2.6 Checking valve guides	50
2.7 Renewing valve guides	51
2.8 Renewing valve stem seals	52
17 - Lubrication	55
1 Lubrication	55
1.1 Removing and installing parts of lubrication system	55
1.2 Removing and installing sump	60
1.3 Removing and installing Duocentric oil pump	62
1.4 Checking oil pressure and oil pressure switch	64
19 - Cooling	67



1	Cooling	67
1.1	Removing and installing parts of cooling system	67
1.2	Parts of cooling system, body side	67
1.3	Parts of cooling system, engine side	69
1.4	Draining and filling coolant	71
1.5	Removing and installing radiator	74
20	- Fuel supply system	76
1	Fuel supply system	76
1.1	Removing and installing parts of fuel supply system	76
1.2	Safety precautions when working on fuel supply system	79
1.3	Rules for cleanliness	79
1.4	Checking fuel pump	80
1.5	Removing and installing fuel delivery unit	85
1.6	Removing and installing fuel tank	86
1.7	Adjusting accelerator cable	87
1.8	Removing and installing parts of activated charcoal filter system	87
1.9	Checking fuel tank breather	89
26	- Exhaust system	92
1	Exhaust system	92
1.1	Removing and installing parts of exhaust system	92