



## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Technical data</b> .....	<b>1</b>
1.1 Technical data .....	1
1.2 Engine number .....	1
1.3 Engine data .....	1
<b>10 - Removing and installing engine</b> .....	<b>2</b>
<b>1 Removing and installing engine</b> .....	<b>2</b>
1.1 Removing and installing engine .....	2
1.2 Notes on removing .....	2
1.3 Notes on installing .....	4
1.4 Tightening torques .....	5
1.5 Assembly mountings .....	6
1.6 Additional information and removal instructions for vehicles with air conditioner .....	7
<b>13 - Crankshaft group</b> .....	<b>8</b>
<b>1 Dismantling and assembling engine</b> .....	<b>8</b>
1.1 Dismantling and assembling engine .....	8
1.2 Removing and installing ribbed belt .....	17
1.3 Checking valve timing .....	17
1.4 Removing and installing toothed belt .....	18
1.5 Checking semi-automatic toothed belt tensioning roller .....	21
<b>2 Dismantling and assembling cylinder block, crankshaft and flywheel</b> .....	<b>23</b>
2.1 Dismantling and assembling cylinder block, crankshaft and flywheel .....	23
2.2 Renewing crankshaft oil seal - pulley end - .....	26
2.3 Crankshaft dimensions .....	29
<b>3 Dismantling and assembling pistons and conrods</b> .....	<b>30</b>
3.1 Dismantling and assembling pistons and conrods .....	30
3.2 Piston and cylinder dimensions .....	35
<b>15 - Cylinder head, Valve gear</b> .....	<b>36</b>
<b>1 Removing and installing cylinder head</b> .....	<b>36</b>
1.1 Removing and installing cylinder head .....	36
1.2 Removing and installing cylinder head .....	38
1.3 Checking compressions .....	41
<b>2 Servicing valve gear</b> .....	<b>42</b>
2.1 Servicing valve gear .....	42
2.2 Reworking valve seats .....	48
2.3 Replacing camshaft oil seal .....	50
2.4 Checking hydraulic bucket tappets .....	51
2.5 Removing and installing camshaft .....	52
2.6 Checking valve guides .....	54
2.7 Renewing valve guides .....	54
2.8 Renewing valve stem seals .....	55
<b>17 - Lubrication</b> .....	<b>57</b>
<b>1 Removing and installing parts of the lubrication system</b> .....	<b>57</b>
1.1 Removing and installing parts of the lubrication system .....	57
1.2 Removing and installing oil sump .....	67
1.3 Removing and installing Duo-centric oil pump .....	69
1.4 Checking oil pressure and oil pressure switch .....	72
<b>19 - Cooling system</b> .....	<b>75</b>



<b>1</b>	<b>Removing and installing parts of cooling system</b> . . . . .	<b>75</b>
1.1	Removing and installing parts of cooling system . . . . .	75
1.2	Parts of cooling system body side . . . . .	76
1.3	Parts of cooling system - engine side . . . . .	78
1.4	Draining and filling cooling system . . . . .	83
1.5	Removing and installing radiator . . . . .	84
<b>20</b>	<b>Fuel supply system</b> . . . . .	<b>86</b>
<b>1</b>	<b>Removing and installing parts of fuel supply system</b> . . . . .	<b>86</b>
1.1	Removing and installing parts of fuel supply system . . . . .	86
1.2	Removing and installing fuel tank with its attachments . . . . .	87
1.3	Safety precautions when working on the fuel supply system . . . . .	92
1.4	Rules for cleanliness . . . . .	93
1.5	Checking fuel pump . . . . .	93
1.6	Removing and installing fuel delivery unit . . . . .	97
1.7	Removing and installing fuel tank . . . . .	98
1.8	Adjusting throttle cable . . . . .	99
1.9	Removing and installing parts of the activated charcoal filter system . . . . .	100
1.10	Checking fuel tank breather . . . . .	101
<b>26</b>	<b>Exhaust system</b> . . . . .	<b>104</b>
<b>1</b>	<b>Removing and installing parts of exhaust system</b> . . . . .	<b>104</b>
1.1	Removing and installing parts of exhaust system . . . . .	104
1.2	Exhaust gas recirculation system . . . . .	109
1.3	Removing and installing parts of exhaust gas recirculation system . . . . .	110
1.4	Checking exhaust gas recirculation valve . . . . .	111