



Contents

00 - Technical data	1
1 Technical data	1
1.1 Technical data	1
1.2 Engine number	1
10 - Removing and installing engine	3
1 Removing and installing engine	3
1.1 Removing and installing engine	3
1.2 Notes on removing	4
1.3 Securing engine to assembly stand	8
1.4 Notes on installing	8
1.5 Tightening torques	10
1.6 Assembly mountings	10
1.7 Additional information and removal instructions for vehicles with air conditioner	12
13 - Crankshaft group	13
1 Dismantling and assembling engine	13
1.1 Dismantling and assembling engine	13
1.2 Removing and installing ribbed belt	22
1.3 Checking valve timing	23
1.4 Removing, installing and tensioning toothed belts	25
1.5 Checking semi-automatic toothed belt tensioning roller	33
2 Removing and installing cylinder block, sealing flange and flywheel/drive plate	37
2.1 Removing and installing cylinder block, sealing flange and flywheel/drive plate	37
2.2 Aluminium cylinder block	38
2.3 Renewing crankshaft oil seal -belt pulley end-	41
2.4 Removing and installing drive plate	43
2.5 Renewing crankshaft sealing flange -flywheel end-	46
2.6 Crankshaft dimensions	55
3 Dismantling and assembling pistons and conrods	56
3.1 Dismantling and assembling pistons and conrods	56
3.2 Piston and cylinder dimensions	62
15 - Cylinder head, Valve gear	63
1 Removing and installing cylinder head	63
1.1 Removing and installing cylinder head	63
1.2 Removing and installing camshaft housing	67
1.3 Removing and installing cylinder head	70
1.4 Checking compression pressures	74
2 Servicing valve gear	76
2.1 Servicing valve gear	76
2.2 Reworking valve seats	84
2.3 Replacing camshaft oil seals	86
2.4 Checking valve guides	88
2.5 Renewing valve guides	88
2.6 Renewing valve stem seals	89
17 - Lubrication	92
1 Removing and installing parts of the lubrication system	92
1.1 Removing and installing parts of the lubrication system	92
1.2 Removing and installing oil sump	97
1.3 Removing and installing oil pump	99
1.4 Checking oil pressure and oil pressure switch	102



19 - Cooling system	104
1 Removing and installing parts of cooling system	104
1.1 Removing and installing parts of cooling system	104
1.2 Parts of cooling system body side	105
1.3 Parts of cooling system engine side	108
1.4 Coolant hose connection diagram	113
1.5 Draining and filling cooling system	114
1.6 Removing and installing radiator	116
1.7 Removing and installing coolant pump	118
20 - Fuel supply system	120
1 Removing and installing parts of fuel supply system	120
1.1 Removing and installing parts of fuel supply system	120
1.2 Removing and installing fuel tank with its attachments and fuel filter	121
1.3 Safety precautions when working on the fuel supply system	126
1.4 Rules for cleanliness	126
1.5 Removing and installing fuel delivery unit	127
1.6 Removing and installing fuel gauge sender	128
1.7 Removing and installing fuel tank	128
1.8 Crash fuel shut-off	129
1.9 Checking fuel pump	130
2 Accelerator mechanism	136
2.1 Accelerator mechanism	136
2.2 Servicing accelerator mechanism	137
2.3 Adjusting accelerator cable	137
3 Checking electronic power control (EPC)	140
3.1 Checking electronic power control (EPC)	140
3.2 Function of EPC system	141
3.3 Checking accelerator pedal position sender	142
4 Activated charcoal filter system	146
4.1 Activated charcoal filter system	146
4.2 Function	146
4.3 Servicing parts of the activated charcoal filter system	147
4.4 Checking activated charcoal filter solenoid valve 1	151
4.5 Checking fuel tank breather	153
26 - Exhaust system	155
1 Removing and installing parts of exhaust system	155
1.1 Removing and installing parts of exhaust system	155
1.2 Exhaust manifold, front exhaust pipe and catalyst with attachments	156
1.3 Exhaust manifold, front exhaust pipe and catalyst with attachments	158
1.4 Silencer with mountings	161
1.5 Checking catalyst	164
2 Exhaust gas recirculation system	166
2.1 Exhaust gas recirculation system	166
2.2 Servicing parts of exhaust gas recirculation system	167
2.3 Checking exhaust gas recirculation valve (mechanical)	169
2.4 Servicing parts of exhaust gas recirculation system	171
2.5 Checking potentiometer for exhaust gas recirculation (G212)	173