



Contents

| | |
|--|-----------|
| 01 - Self-diagnosis | 1 |
| 1 Self-diagnosis | 1 |
| 1.1 Features of self-diagnosis | 1 |
| 1.2 Technical data of self-diagnosis | 1 |
| 1.3 Connecting fault reader V.A.G 1551 and selecting engine electronics control unit | 2 |
| 2 Fault memory | 5 |
| 2.1 Reading fault memory | 5 |
| 2.2 Fault table | 6 |
| 2.3 Clear fault memory | 15 |
| 3 Final control diagnosis | 17 |
| 3.1 Performing final control diagnosis | 17 |
| 4 Measured value blocks | 20 |
| 4.1 Safety precautions | 20 |
| 4.2 Read measured value block | 20 |
| 4.3 Evaluating measured value blocks, engine codes AHG, AKU | 21 |
| 4.4 Evaluating measured value blocks, engine code AGD | 31 |
| | |
| 23 - Mixture preparation - injection | 41 |
| 1 Repairing diesel direct injection system | 41 |
| 1.1 Safety precautions | 41 |
| 1.2 Rules for cleanliness | 41 |
| 1.3 Fitting locations overview | 42 |
| 1.4 Repairing injection pump | 43 |
| 1.5 Repairing fuel filter | 45 |
| 1.6 Repairing accelerator mechanism | 46 |
| 1.7 Checking accelerator position sender G79 setting | 47 |
| 1.8 Setting engine to TDC No. 1 cylinder, engine removed | 48 |
| 1.9 Removing, installing and testing throttle valve housing | 48 |
| 1.10 Removing and installing injection pump | 49 |
| 1.11 Dynamically checking and adjusting commencement of injection | 54 |
| 1.12 Checking timing | 56 |
| 1.13 Removing and installing injectors | 57 |
| 1.14 Repairing injectors | 58 |
| 2 Sealing injection pump | 60 |
| 2.1 Sealing quantity adjuster | 60 |
| 2.2 Checking and adjusting quantity injected | 62 |
| 2.3 Sealing distributor head | 63 |
| 2.4 Sealing injection timing device cover | 64 |
| 3 Checking components and functions | 65 |
| 3.1 Line and component check with adapter cable (68-pin) V.A.G 1598/18A or adapter V.A.G 1598/22 | 65 |
| 3.2 Checking engine speed sender G28 | 65 |
| 3.3 Checking coolant temperature sender G62 | 67 |
| 3.4 Checking brake light switch F and brake pedal switch F47 | 69 |
| 3.5 Checking clutch pedal switch F36 | 70 |
| 3.6 Checking intake air temperature sender G42 | 72 |
| 3.7 Checking voltage supply for diesel direct injection system | 74 |
| 3.8 Checking fuel temperature sender G81 | 75 |
| 3.9 Checking modulating piston movement sender G149 and metering adjuster N146 | 77 |
| 3.10 Checking needle lift sender G80 | 82 |
| 3.11 Checking injection timing control range | 83 |
| 3.12 Checking throttle valve | 87 |



| | | |
|-----------|--|-----------|
| 3.13 | Checking exhaust gas recirculation valve N18 | 89 |
| 3.14 | Checking speedometer sender G22 | 91 |
| 3.15 | Checking accelerator position sender G79 | 92 |
| 4 | Renewing, coding and matching engine control unit | 96 |
| 4.1 | Renewing engine control unit | 96 |
| 4.2 | Coding engine control unit | 96 |
| 4.3 | Adapting engine control unit to electronic immobilizer | 97 |
| 28 | Glow plug system | 99 |
| 1 | Checking glow plug system | 99 |
| 1.1 | Checking glow plugs | 100 |