



## Contents

<b>01 - Self diagnosis</b> .....	<b>1</b>
<b>1 Self diagnosis</b> .....	<b>1</b>
1.1 Self diagnosis .....	1
1.2 Function .....	1
1.3 Technical data of self diagnosis .....	1
1.4 Connecting fault reader V.A.G 1551 and selecting engine electronics control unit .....	2
1.5 Interrogating fault memory .....	3
1.6 Fault table .....	4
1.7 Erasing fault memory .....	6
1.8 Final control diagnosis .....	7
1.9 Reading measured value block .....	10
<b>23 - Mixture preparation, Injection</b> .....	<b>12</b>
<b>1 Servicing fuel injection system</b> .....	<b>12</b>
1.1 Servicing fuel injection system .....	12
1.2 Safety precautions .....	12
1.3 Rules for cleanliness .....	12
1.4 Fitting locations overview .....	13
1.5 Servicing injection pump .....	15
1.6 Servicing fuel filter .....	21
1.7 Removing and installing injection pump .....	23
1.8 Checking and adjusting injection pump timing .....	30
1.9 Checking valve timing .....	33
1.10 Checking and adjusting idling speed, idling speed boost and governed speed .....	35
1.11 Idling speed boost actuator .....	36
1.12 Checking idling speed boost actuator .....	36
1.13 Removing and installing injectors .....	37
1.14 Servicing injectors .....	38
1.15 Checking injector nozzle valve tip for damage, injection pressure and for leakage. ....	39
1.16 Checking load signal potentiometer .....	40
1.17 Checking commencement of injection valve .....	42
1.18 Checking full throttle stop valve .....	43
1.19 Checking idling speed boost valve .....	44
1.20 Checking engine temperature sender .....	44
1.21 Resistance figures for engine temperature sender .....	47
1.22 Vacuum hose connection diagram .....	47
<b>28 - Glow plug system</b> .....	<b>49</b>
<b>1 Checking glow plug system</b> .....	<b>49</b>
1.1 Checking glow plug system .....	49
1.2 Checking glow plug current consumption .....	49
1.3 Checking glow plugs .....	50
1.4 Glow plugs with burned electrodes .....	50