



Contents

00 - Technical data	1
1 Technical data	1
1.1 Technical data	1
1.2 Engine number	1
1.3 Engine data	1
1.4 Engine data	2
10 - Removing and installing engine	3
1 Removing and installing engine	3
1.1 Removing and installing engine	3
1.2 Notes on removing	4
1.3 Securing engine to assembly stand	7
1.4 Notes on installing	7
1.5 Tightening torques	8
1.6 Assembly mountings	9
13 - Crankshaft group	11
1 Dismantling and assembling engine	11
1.1 Dismantling and assembling engine	11
1.2 Removing and installing ribbed belt	23
1.3 Checking semi-automatic toothed belt tensioning roller	24
1.4 Removing single part injection pump sprocket	25
2 Removing and installing sealing flange and flywheel	27
2.1 Removing and installing sealing flange and flywheel	27
2.2 Renewing crankshaft oil seal -pulley end	31
3 Removing and installing crankshaft	34
3.1 Removing and installing crankshaft	34
3.2 Crankshaft dimensions	37
4 Dismantling and assembling pistons and conrods	38
4.1 Dismantling and assembling pistons and conrods	38
4.2 Checking piston projection at TDC	45
4.3 Piston and cylinder dimensions	47
15 - Cylinder head, Valve gear	48
1 Removing and installing cylinder head	48
1.1 Removing and installing cylinder head	48
1.2 Removing and installing intake pipes	55
1.3 Removing, installing and tensioning toothed belt	57
1.4 Removing and installing cylinder head	67
1.5 Checking compression pressures	70
2 Servicing valve gear	74
2.1 Servicing valve gear	74
2.2 Reworking valve seats	80
2.3 Checking valve guides	82
2.4 Renewing valve guides	84
2.5 Renewing valve stem seals	85
2.6 Removing and installing camshaft	88
2.7 Checking hydraulic bucket tappets	90
2.8 Replacing swirl chambers	91
17 - Lubrication	93
1 Removing and installing parts of the lubrication system	93
1.1 Removing and installing parts of the lubrication system	93



1.2	Checking oil pressure and oil pressure switch	101
19 - Cooling system		104
1	Removing and installing parts of cooling system	104
1.1	Removing and installing parts of cooling system	104
1.2	Parts of cooling system body side	105
1.3	Parts of cooling system engine side	108
1.4	Removing and installing coolant pump and compact bracket	112
1.5	Draining and filling cooling system	115
1.6	Removing and installing radiator	117
20 - Fuel supply system		119
1	Removing and installing parts of fuel supply system	119
1.1	Removing and installing parts of fuel supply system	119
1.2	Removing and installing fuel tank with its attachments	120
1.3	Servicing fuel filter	126
1.4	Safety precautions when working on the fuel supply system	128
1.5	Rules for cleanliness	129
1.6	Removing and installing fuel tank	129
2	Accelerator mechanism: Engine code AEF	131
2.1	Accelerator mechanism: Engine code AEF	131
2.2	Servicing accelerator mechanism	131
3	Accelerator mechanism: > 09.99 (Engine codes AGD, AHG, AKU)	134
3.1	Accelerator mechanism: > 09.99 (Engine codes AGD, AHG, AKU)	134
3.2	Servicing accelerator mechanism	134
3.3	Checking accelerator pedal position sender adjustment	136
3.4	Checking accelerator pedal position sender	138
4	Accelerator mechanism: 10.99 > (Engine codes AGD, AKU, ASX)	142
4.1	Accelerator mechanism: 10.99 > (Engine codes AGD, AKU, ASX)	142
4.2	Servicing accelerator mechanism	143
4.3	Checking accelerator pedal position sender	143
4.4	Accelerator mechanism: 10.99 > (RHD vehicles)	146
4.5	Servicing accelerator mechanism	146
4.6	Checking accelerator pedal position sender	147
4.7	Adjusting pedal position sender	150
26 - Exhaust system		151
1	Removing and installing parts of exhaust system	151
1.1	Removing and installing parts of exhaust system	151
1.2	Exhaust manifold, front exhaust pipe and catalyst with attachments	151
1.3	Silencer with mountings	153
2	Exhaust gas recirculation system: Engine code AEF	155
2.1	Exhaust gas recirculation system: Engine code AEF	155
2.2	Removing and installing parts of exhaust gas recirculation system	156
2.3	Checking exhaust gas recirculation	157
2.4	Checking exhaust gas recirculation valve (mechanical)	159
2.5	Checking EGR valve (electrical)	159
3	Exhaust gas recirculation system: Engine codes AGD, AHG, AKU, ASX	160
3.1	Exhaust gas recirculation system: Engine codes AGD, AHG, AKU, ASX	160
3.2	Removing and installing parts of exhaust gas recirculation system	161
3.3	Connection diagram for vacuum hoses	163
3.4	Checking exhaust gas recirculation valve (mechanical)	164
3.5	Checking EGR valve	165
