

001 - Polo - Base equipment	1-16
1. Polo - Base equipment	1
2. Fresh air blower, fresh air blower switch	2
3. Ignition/starter switch, immobilizer	3
4. Dash panel insert, fuel gauge, coolant shortage and coolant temperature warning/gauge, optical and acoustic oil pressure warning, odometer display	4
5. Dash panel insert, rev. counter, digital clock	5
6. Interior light, luggage compartment light, handbrake warning switch and brake fluid level switch	6
7. Junction box for self diagnosis, radio connection, cigarette lighter	7
8. Headlight range control, hazard warning light system	8
9. Headlights, side light	9
10. Headlight dipper/flasher switch, turn signal switch, parking light switch	10
11. Turn signal, brake light, tail light	11
12. Lighting switch, rear fog light	12
13. Brake light switch, number plate light, heated windscreen washer jets	13
14. Reversing light, heated rear window, horn	14
15. Windscreen wpe/washer system	15
16. Rear window wipe/wash system	16
002 - 1.0 ltr./33 kW Mono-Motronic, engine code AEV, 1.3 ltr./40 kW Mono-Motronic, engine code ADX, 1.6 ltr./55 kW Mono-Motronic, engine code AEA	17-24
1. 1.0 ltr./33 kW Mono-Motronic, engine code AEV, 1.3 ltr./40 kW Mono-Motronic, engine code ADX, 1.6 ltr./55 kW Mono-Motronic, engine code AEA	17-18
2. Battery, alternator, starter, intake manifold preheating	19
3. Mono-Motronic control unit, ignition system, Hall sender, throttle valve positioner	20
4. Mono-Motronic control unit, throttle valve potentiometer, injector, knock sensor	21
5. Mono-Motronic control unit, Lambda probe, fuel supply system	22
6. Radiator fan, speedometer sender, oil pressure switch	23
7. Dash panel insert, fuel gauge, coolant shortage and coolant temperature warning/gauge, optical and acoustic oil pressure warning, odometer display	24
003 - Anti-locking brake system (ABS)	25-27
1. Anti-locking brake system (ABS)	25
2. ABS control unit, ABS warning lamp, ABS hydraulic pump, brake light switch	26
3. ABS control unit, speed sensor	27
004 - Airbag	28-29
1. Airbag	28
2. Airbag control unit, airbag warning lamp, airbag igniter, coil connector	29
005 - Radio system "alpha" with 2 loudspeakers	30-31
1. Radio system "alpha" with 2 loudspeakers	30
2. Radio, front loudspeaker, electronically amplified roof aerial, cigarette lighter	31
006 - Radio system "beta" with 4 loudspeakers	32-34
1. Radio system "beta" with 4 loudspeakers	32
2. Radio, cigarette lighter	33
3. Radio, front loudspeaker, electronically amplified roof aerial	34
007 - Fog lights	35-38
1. Fog lights	35
2. Headlights, side light	36
3. Lighting switch	37
4. Front and rear fog lights	38
008 - Air conditioning system	39-41
1. Air conditioning system	39
2. Fresh air blower switch, air conditioner switch, fresh air and air recirculation switch	40
3. Air conditioner pressure switch, idling speed boost, radiator fan control unit, air conditioner cut-off, radiator fan	41
009 - Central locking system	42-43
1. Central locking system	42
2. Pump with control unit for central locking, central locking switch, central locking actuators	43
010 - Window lifter, front	44-45
1. Window lifter, front	44
2. Window lifter, front	45
011 - Exterior mirror, heated and adjustable	46-48
1. Exterior mirror, heated and adjustable	46
2. Heated rear window switch, heated rear window	47
3. Mirror adjustment switch, mirror adjustment motor, heated exterior mirror	48
012 - Seat heating, driver's and passenger side	49-51
1. Seat heating, driver's and passenger side	49
2. Driver's seat heating	50

3. Front passenger's seat heating	51
013 - Headlight washer system	52-53
1. Headlight washer system	52
2. Headlight washer system	53
014 - Daylight driving lights and headlight washer system	54-58
1. Daylight driving lights and headlight washer system	54
2. Headlights, side light	55
3. Lighting switch	56
4. Headlight dipper/flasher switch, parking light switch, rear fog light	57
5. Headlight washer system	58
015 - Urban driving lights (Great Britain only)	59-62
1. Urban driving lights (Great Britain only)	59
2. Headlights, side light	60
3. Lighting switch	61
4. Fog light, rear fog light, Series resistance - town driving lights	62
016 - 1.9 ltr. - Cat. Diesel engine/47 kW, engine code AEF	63-69
1. 1.9 ltr. - Cat. Diesel engine/47 kW, engine code AEF	63
2. Battery, alternator, starter	64
3. Automatic glow period control unit, idling speed boost valve, EGR two-way valve, commencement of injection valve, load signal potentiometer, fuel cut-off valve	65
4. Automatic glow period control unit, engine temperature sender, coolant temperature sender, full load stop valve, glow plugs	66
5. Radiator fan, coolant shortage indicator sender	67
6. Fuel level sender, oil pressure switch, speedometer sender	68
7. Dash panel insert, fuel gauge, coolant shortage and coolant temperature warning/gauge, optical and acoustic oil pressure warning, odometer display, glow period warning lamp	69
017 - Fabric sunroof	70-71
1. Fabric sunroof	70
2. Fabric sunroof switch, folding sliding roof motor	71
018 - 1.4 ltr./44 kW Motronic, engine code AEX, 1.6 ltr. - 1AV /55 kW, engine code AEE	72-79
1. 1.4 ltr./44 kW Motronic, engine code AEX, 1.6 ltr. - 1AV /55 kW, engine code AEE	72
2. Battery, starter, alternator	73
3. 1AV control unit (injection system), ignition system, Hall sender, coolant temperature sender	74
4. 1AV control unit (injection system), throttle valve control part, intake air temperature sender, intake manifold pressure sender	75
5. 1AV control unit, (injection system), injectors, Lampda probe	76
6. 1AV control unit (injection system), knock sensor, activated charcoal filter system, fuel supply system	77
7. Radiator fan, speedometer sender, oil pressure switch	78
8. Dash panel insert, fuel gauge, coolant shortage and coolant temperature warning/gauge, optical and acoustic oil pressure warning, trip recorder	79
019 - Automatic gearbox	80-84
1. Automatic gearbox	80
2. Automatic gearbox control unit, starter inhibitor relay, multi-function switch	81
3. Automatic gearbox control unit, solenoid valves, solenoid valve preresistance	82
4. Automatic gearbox control unit, gearbox speed sender, road speed sender	83
5. Automatic gearbox control unit, Kick-down-switch, selector lever lock solenoid, EGR valve	84
020 - 1.9 ltr. - Cat. Diesel engine/47 kW, engine code AEF	85-91
1. 1.9 ltr. - Cat. Diesel engine/47 kW, engine code AEF	85
2. Battery, alternator, starter	86
3. Automatic glow period control unit, idling speed boost valve, EGR two-way valve, commencement of injection valve, load signal potentiometer, fuel shut-off valve	87
4. Automatic glow period control unit, engine temperature sender, coolant temperature sender, full load stop valve, glow plugs	88
5. Radiator fan, coolant shortage indicator sender	89
6. Fuel level sender, speedometer sender, oil temperature sender, oil pressure switch	90
7. Dash panel insert, fuel gauge, coolant shortage and coolant temperature warning/gauge, optical and acoustic oil pressure warning, odometer display, glow period warning lamp	91
021 - Air conditioning system	92-94
1. Air conditioning system	92
2. Fresh air blower switch, air conditioner switch, fresh air and air recirculation switch	93
3. Air conditioner pressure switch, idling speed boost, radiator fan control unit, air conditioner cut-off, radiator fan	94
022 - High level brake light	95-96
1. High level brake light	95
2. Left brake light. right brake light. high level brake light. heated rear window	96

024 - 1.9 ltr./47 kW Diesel engine, engine code AEY	97-104
1. 1.9 ltr./47 kW Diesel engine, engine code AEY	97
2. Alternator, starter	98
3. Diesel direct injection system control unit, engine speed sender, air mass meter	99
4. Diesel direct injection system control unit, needle lift sender, modulating piston movement sender	100
5. Diesel direct injection system control unit, accelerator pedal position sender, exhaust gas recirculation valve, glow plug coolant	101
6. Glow plug relay, diesel direct injection system control unit, commencement of injection valve, throttle valve, fuel shut-off valve	102
7. Engine temperature sender, oil pressure switch, speedometer sender	103
8. Dash panel insert, fuel gauge, coolant shortage and coolant temperature warning/gauge, optical and acoustic oil pressure warning	104
025 - Air conditioning system	105-109
1. Air conditioning system	105-106
2. Fresh air blower switch	107
3. Air conditioner switch, fresh and recirculating air flap switch	108
4. Air conditioner pressure switch, idling speed boost, radiator fan control unit, air conditioner shut-off, radiator fan	109
026 - Anti-locking brake system (ABS), LHD only	110-112
1. Anti-locking brake system (ABS), LHD only	110
2. ABS control unit, brake light switch	111
3. ABS control unit, injectors	112
027 - Anti-locking brake system (ABS), RHD only	113-115
1. Anti-locking brake system (ABS), RHD only	113
2. ABS control unit, brake light switch	114
3. ABS control unit, injectors	115
028 - 1.4 ltr./44 kW Motronic, engine code AEX, 1.6 ltr. - 1AV /55 kW, engine code AEE	116-124
1. 1.4 ltr./44 kW Motronic, engine code AEX, 1.6 ltr. - 1AV /55 kW, engine code AEE	116-117
2. Battery, starter, alternator	118
3. 1AV control unit (injection system), ignition system, Hall sender, coolant temperature sender	119
4. 1AV control unit (injection system), throttle valve control part, intake air temperature sender, intake manifold pressure sender	120
5. 1AV control unit (injection system), injectors, Lambda probe	121
6. 1AV control unit (injection system), knock sensor, activated charcoal filter system, fuel supply system	122
7. Radiator fan, speedometer sender, oil pressure switch	123
8. Dash panel insert, fuel gauge, coolant shortage and coolant temperature indicator, optical and acoustical oil pressure warning, odometer display	124
201 - -Fitting locations:Relay plate with fuse box and additional relay carrier	125-130
1. Relay plate with fuse box an additional relay carrier	125
2. Fuse locations	126
3. Relay locations	127
4. Additional relay carrier	128
5. Multi-pin connector assignment	129
6. -Fitting locations:Relay plate with fuse box and additional relay carrier	130
202 - -Fitting locations:Multi-pin connectors	131-134
1. Multi-pin connectors	131
2. On engine	132
3. On engine	133
4. On body	134
401 - -Fault finding programme:Battery discharges	135
1. Battery discharges (Leakage current suspected)	135
402 - -Fault finding programme:Starter does not turn	136
1. Starter does not turn	136
403 - -Fault finding programme:Starter turns too slowly to start engine	137
1. Starter turns too slowly to start engine	137
404 - -Fault finding programme:Checking headlight range control	138-139
1. Checking headlight range control	138
2. -Fault finding programme:Checking headlight range control	139
405 - -Fault finding programme:Alternator warning lamp does not go out as speed increases	140
1. Alternator warning lamp does not go out as speed increases	140
406 - -Fault finding programme:Alternator warning lamp does not light up with ignition switched on	141
1. Alternator warning lamp does not light up with ignition switched on	141
407 - -Fault finding programme:Checking alternator and voltage regulator with multimeter V.A.G 1715	142
1. Checkina alternator and voltaae reaulator with multimeter V.A.G 1715	142

408 - -Fault finding programme:Checking coolant temperature gauge	143-144
1. Checking coolant temperature gauge	143
2. -Fault finding programme:Checking coolant temperature gauge	144
409 - -Fault finding programme:Checking fuel gauge	145-148
1. Contents	145
2. Checking fuel gauge	146
3. Checking fuel gauge sender	147
4. -Fault finding programme:Checking fuel gauge	148
410 - -Fault finding programme:Checking radio system	149-154
1. Contents	149
2. Radio does not work, FM reception disturbed, poor or interrupted	150
3. Checking roof aerial	151
4. One or more loudspeakers do not work	152
5. LED for anti-theft coding does not flash when switched off, Cassette playback muffled or not clear	153
6. Autoreverse switches over continuously or too early	154
411 - -Fault finding programme:Checking dash panel insert	155-159
1. Contents	155
2. Calling up dash panel insert test mode	156
3. Checking dash panel insert voltage supply	157
4. Checking warning lamps in dash panel insert, Checking the wiring	158
5. -Fault finding programme:Checking dash panel insert	159
412 - -Fault finding programme:Checking central locking system (without Safe function)	160-161
1. Checking central locking system (without Safe function)	160
2. -Fault finding programme:Checking central locking system (without Safe function)	161
413 - -Fault finding programme:Checking window lifter	162-163
1. Checking window lifter	162
2. -Fault finding programme:Checking window lifter	163
414 - -Fault finding programme:Checking heated driver's seat	164-166
1. Checking heated driver's seat	164
2. -Fault finding programme:Checking heated driver's seat	165
3. -Fault finding programme:Checking heated driver's seat	166
415 - -Fault finding programme:Checking heated passenger seat	167-169
1. Checking heated passenger seat	167
2. -Fault finding programme:Checking heated passenger seat	168
3. -Fault finding programme:Checking heated passenger seat	169
416 - -Fault finding programme:Checking turn signal and hazard warning system	170-172
1. Checking turn signal and hazard warning system	170
2. -Fault finding programme:Checking turn signal and hazard warning system	171
3. -Fault finding programme:Checking turn signal and hazard warning system	172
417 - -Fault finding programme:Checking headlight washer system	173-174
1. Checking headlight washer system	173
2. -Fault finding programme:Checking headlight washer system	174
418 - -Fault finding programme:Checking fabric sunroof	175-176
1. Checking fabric sunroof	175
2. -Fault finding programme:Checking fabric sunroof	176
419 - -Fault finding programme:Checking glow plug system (engine code AEF), from November 1994	177-181
1. Contents	177
2. Description of glow plug system with door contact activation	178
3. Checking glow plug system	179
4. -Fault finding programme:Checking glow plug system (engine code AEF), from November 1994	180
5. -Fault finding programme:Checking glow plug system (engine code AEF), from November 1994	181
420 - -Fault finding programme:Checking dash panel insert	182-186
1. Contents	182
2. Calling up dash panel insert test mode	183
3. Checking dash panel insert voltage supply	184
4. Checking warning lamps in dash panel insert, Checking the wiring	185
5. -Fault finding programme:Checking dash panel insert	186