

001 - Basic equipment	1-17
1. Basic equipment	1
2. Battery, ignition/starter switch, X-contact relief relay, immobilizer	2
3. Dash panel insert, rev. counter, self-diagnosis connection, odometer	3
4. Dash panel insert, digital clock, main beam warning lamp, side light warning lamp, turn signal indicator lamp, handbrake warning, brake fluid level warning contact	4
5. Light switch, switch and instrument illumination regulator	5
6. Tail light, left brake light, rear fog light, number plate light, heated rear window	6
7. Right tail light, right brake light, reversing light, headlight dipper/flasher switch	7
8. Turn signal switch, parked light switch, front bulbs	8
9. Hazard warning light relay, hazard warning light switch	9
10. Headlight range control	10-11
11. Intermittent wiper switch, wiper motor, front and rear washer pump, intermittent wash and wipe relay, horn	12
12. Rear window wiper motor, luggage compartment light, heater element for washer jet	13
13. Connection for radio, switch for heated rear window, cigarette lighter, loudspeaker, aerial, aerial amplifier	14
14. Fresh air blower, fresh air blower switch, fresh air/recirculated air flap positioning motor	15
15. Interior light, door contact switch	16
16. Brake light switch	17
003 - 1.9 l/47 kW - diesel engine, engine code AGD	18-25
1. 1.9 l/47 kW - diesel engine, engine code AGD	18
2. Battery, starter, alternator, radiator fan	19
3. Diesel direct injection system control unit, engine speed sender, intake air temperature sender	20
4. Diesel direct injection system control unit, metering adjuster, needle lift sender, fuel temperature sender, modulating piston movement sender	21
5. Diesel direct injection system control unit, accelerator position sender, coolant heater element relay, coolant heater element, exhaust gas recirculation valve	22
6. Diesel direct injection system control unit, engine temperature sender, coolant temperature sender, fuel shut-off valve, terminal 30 voltage supply relay, commencement of injection valve, throttle valve module valve	23
7. Brake light switch, speedometer sender, fuel gauge sender, coolant shortage indicator sender, engine glow plugs, oil pressure switch	24
8. Dash panel insert, fuel gauge, coolant shortage and coolant temperature indicator, optical and acoustic oil pressure warning, odometer	25
004 - 1.9 l/47 kW - naturally aspirated diesel engine, engine code AEF	26-32
1. 1.9 l/47 kW - naturally aspirated diesel engine, engine code AEF	26
2. Battery, starter, alternator, radiator fan	27
3. Idling speed boost valve, exhaust gas recirculation valve, fuel shut-off valve	28
4. Automatic glow period control unit, commencement of injection valve, load signal potentiometer	29
5. Automatic glow period control unit, engine temperature sender, coolant temperature sender, full load stop valve, glow plugs, glow plug relay	30
6. Coolant shortage indicator sender, fuel gauge sender, speedometer sender, oil temperature sender, oil pressure switch	31
7. Dash panel insert, fuel gauge, coolant shortage and coolant temperature indicator, optical and acoustic oil pressure warning, alternator warning lamp, glow period warning lamp, odometer	32
005 -	33-44
1.	33
2. Battery, starter, alternator, radiator fan, starter inhibitor relay	34
3. 1AV control unit (injection system), ignition system, Hall sender, coolant temperature sender	35
4. 1AV control unit (injection system), throttle valve control part, intake air temperature sender, intake manifold pressure sender	36
5. 1AV control unit (injection system), injectors, Lambda probe	37
6. 1AV control unit (injection system), knock sensor, activated charcoal filter system, automatic gearbox control unit, multi-function switch	38
7. Automatic gearbox control unit, solenoid valves, solenoid valve series resistor	39
8. Automatic gearbox control unit, road speed sender, gearbox speed sender, selector lever lock solenoid valve, kick-down switch	40
9. Exhaust gas recirculation valve	41
10. Starten inhibitor switch, selector lever illumination	42
11. Speedometer sender, coolant shortage indicator sender, fuel supply, oil pressure switch	43
12. Dash panel insert, alternator warning lamp, fuel gauge, coolant shortage and coolant temperature warning lamp, optical and acoustical oil pressure warning, odometer display	44
006 - 1.4 ltr./74 kW 1AV, engine code AFH	45-52
1. 1.4 ltr./74 kW 1AV, engine code AFH	45
2. Batterv. starter. alternator. radiator fan	46

3. 1AV control unit (injection system), ignition system, Hall sender, coolant temperature sender, power assisted steering/pressure switch	47
4. 1AV control unit (injection system), throttle valve control part, intake air temperature sender, intake manifold pressure sender	48
5. 1AV control unit (injection system), injectors, Lambda probe	49
6. 1AV control unit (injection system), knock sensor, exhaust gas recirculation pulsed valve, activated charcoal filter system	50
7. Speedometer sender, coolant shortage indicator sender, fuel supply	51
8. Dash panel insert, alternator warning lamp, fuel gauge, coolant shortage and coolant temperature warning lamp, optical and acoustical oil pressure warning, odometer	52
007 - Anti-locking brake system (ABS)	53-56
1. Anti-locking brake system (ABS)	53
2. ABS control unit, fuses in fuse box / battery	54
3. ABS control unit, inlet valves, dash panel insert, self-diagnosis connection	55
4. Brake light switch	56
008 - Anti-locking brake system (ABS)	57-59
1. Anti-locking brake system (ABS)	57
2. ABS control unit, brake light switch, fuses in fuse box / battery	58
3. ABS control unit, inlet valves, dash panel insert, self-diagnosis connection	59
009 - Anti-lock brake system (ABS)	60-62
1. Anti-lock brake system (ABS)	60
2. ABS control unit, brake light switch, fuses on battery fuse holder	61
3. ABS control unit, inlet valves, dash panel insert, self-diagnosis connection	62
010 - Anti-locking brake system (ABS)	63-65
1. Anti-locking brake system (ABS)	63
2. ABS control unit, brake light switch, fuses in battery fuse holder	64
3. ABS control unit, inlet valves, dash panel insert, self-diagnosis connection	65
011 - Airbag	66-67
1. Airbag	66
2. Airbag control unit, airbag warning lamp, airbag igniter, airbag coil connector, self-diagnosis connector	67
012 - Exterior mirror, heated and adjustable	68-70
1. Exterior mirror, heated and adjustable	68
2. Mirror adjustment switch, mirror adjustment motor (driver's side), heated exterior mirror (driver's side)	69
3. Mirror adjustment change-over switch, mirror adjustment motor (passenger's side), heated exterior mirror (passenger's side)	70
013 - Fabric sunroof	71-72
1. Fabric sunroof	71
2. Folding sliding roof switch, folding sliding roof motor, folding sliding roof relay	72
014 - Window lifter, front	73-74
1. Window lifter, front	73
2. Window lifter, front	74
015 - Air conditioning system	75-78
1. Air conditioning system	75
2. Radiator fan control unit, air conditioning system pressure switch, ambient temperature sender	76
3. Radiator fan control unit, magnetic coupling for radiator fan	77
4. Fresh air blower switch, air conditioning system switch, fresh air/recirculated air flap switch	78
016 - Seat heating, driver's and passenger's side	79-81
1. Seat heating, driver's and passenger's side	79
2. Driver's seat heating	80
3. Front passenger's seat heating	81
017 - Headlight washer system	82-83
1. Headlight washer system	82
2. Headlight washer system	83
018 - Daylight driving lights	84-90
1. Daylight driving lights	84
2. Lighting switch, switches and instruments - lighting control, dash panel insert, rear fog light warning lamp, headlight dipper/flasher switch	85
3. Tail light, brake light, rear fog light, rear turn signal	86
4. Number plate light	87-88
5. Fog light bulbs	89
6. Front bulbs	90
019 - Central locking system	91-92
1. Central locking system	91
2. Central locking heater element for left lock cylinder	92

020 - 1.9 l/47 kW - diesel engine, engine code AGD	93-100
1. 1.9 l/47 kW - diesel engine, engine code AGD	93
2. Battery, starter, alternator, radiator fan	94
3. Diesel direct injection system control unit, engine speed sender, intake air temperature sender	95
4. Diesel direct injection system control unit, metering adjuster, needle lift sender, fuel temperature sender, modulating piston movement sender	96
5. Diesel direct injection system control unit, accelerator position sender, coolant heater element relay, coolant heater element, exhaust gas recirculation valve	97
6. Diesel direct injection system control unit, engine temperature sender, coolant temperature sender, fuel shut-off valve, terminal 30 voltage supply relay, commencement of injection valve, throttle valve module valve	98
7. Brake light switch, speedometer sender, fuel gauge sender, coolant shortage indicator sender, engine glow plugs	99
8. Dash panel insert, fuel gauge, coolant shortage and coolant temperature indicator, optical and acoustic oil pressure warning, odometer	100
021 - Basic equipment	101-118
1. Basic equipment	101
2. Battery, ignition/starter switch, X-contact relief relay	102
3. Dash panel insert, rev. counter, self-diagnosis connection, odometer, seat belt warning system	103
4. Dash panel insert, digital clock, main beam warning lamp, side light warning lamp, turn signal indicator lamp, handbrake warning, brake fluid level warning contact	104
5. Light switch, switch and instrument illumination regulator	105
6. Left tail light, left brake light, rear fog light, heated rear window	106
7. Right tail light, right brake light, reversing light, headlight dipper/flasher switch	107
8. Turn signal switch, parked light switch, front bulbs	108
9. Hazard warning light relay, hazard warning light switch	109
10. Headlight range control	110-111
11. Intermittent wiper wiper switch, wiper motor, front and rear washer pump, intermittent wash and wiper relay, horn	112
12. Rear window wiper motor, luggage compartment light, heater element for washer jet	113
13. Radio connection, heated rear window switch, cigarette lighter	114
14. Fresh air blower, fresh air blower switch, fresh air/recirculated air flap positioning motor	115
15. Interior light, door contact switch	116
16. Brake light switch, number plate light	117
17. Immobilizer, reversing light switch	118
022 - Airbag	119-120
1. Airbag	119
2. Airbag control unit, airbag warning lamp, airbag igniter, airbag coil connector, self-diagnosis connector	120
023 - Radio system "alpha" with 2 loudspeakers	121-122
1. Radio system "alpha" with 2 loudspeakers	121
2. Radio, front loudspeakers, electronically amplified roof aerials	122
024 - Radio system "beta" with 4 loudspeakers	123-124
1. Radio system "beta" with 4 loudspeakers	123
2. Radio, front loudspeakers, electronically amplified roof aerials	124
025 - 1.0 l/37 kW - Motronic, engine code ALL	125-132
1. 1.0 l/37 kW - Motronic, engine code ALL	125
2. Battery, starter, alternator, radiator fan	126
3. 1AV injection system control unit, ignition system, Hall sender, coolant temperature sender, power assisted steering pressure switch	127
4. 1AV injection system control unit, throttle valve module, intake air temperature sender, intake manifold pressure sender	128
5. 1AV injection system control unit, injectors, Lambda probe	129
6. 1AV injection system control unit, knock sensor, exhaust gas recirculation frequency valve, activated charcoal filter system	130
7. Speedometer sender, coolant shortage indicator sender, fuel supply	131
8. Dash panel insert, alternator warning lamp, fuel gauge, coolant shortage and coolant temperature indicator, optical and acoustic oil pressure warning, odometer	132
026 - 1.0 litre/37 kW Motronic, engine codes AER, ALL	133-140
1. 1.0 litre/37 kW Motronic, engine codes AER, ALL	133
2. Battery, starter, alternator, radiator fan	134
3. 1AV control unit (injection system), ignition system, Hall sender, coolant temperature sender, power assisted steering pressure switch	135
4. 1AV control unit (injection system), throttle valve control part, intake air temperature sender, intake manifold pressure sender	136
5. 1AV control unit (injection system). injectors. lambda probe	137

6. 1AV control unit (injection system), knock sensor, exhaust gas recirculation pulsed valve, activated charcoal filter system	138
7. Speedometer sender, coolant shortage indicator sender, fuel supply	139
8. Dash panel insert, alternator warning lamp, fuel gauge, coolant shortage and coolant temperature indicator, optical and acoustic oil pressure warning, odometer	140
027 - 1.6 l/88 kW - 4CV, engine codes AJV	141-149
1. 1.6 l/88 kW - 4CV, engine codes AJV	141
2. Battery, starter, alternator, radiator fan, radiator fan thermo-switch	142
3. 4CV control unit (injection system), ignition system, fuel pump relay	143
4. 4CV control unit (injection system), throttle valve control unit, intake air temperature sender, intake manifold pressure sender	144
5. 4CV control unit (injection system), engine speed sender, Hall sender	145
6. 4CV control unit (injection system), throttle valve control unit, intake air temperature sender, intake manifold pressure sender, exhaust gas recirculation valve, activated charcoal filter system solenoid valve 1	146
7. 4CV control unit (injection system), coolant shortage indicator sender, fuel pump (pre-supply pump), fuel gauge sender, knock sensor	147
8. Dash panel insert, fuel gauge, coolant shortage and coolant temperature indicator, oil pressure switch, speedometer sender	148
9. Rev. counter, oil pressure warning buzzer, alternator warning lamp, odometer display, dash panel insert	149
028 - Basic equipment	150-167
1. Basic equipment	150
2. Battery, ignition/starter switch, X-contact relief relay	151
3. Dash panel insert, rev. counter, self-diagnosis connection, odometer, seat belt warning system, data bus diagnostic interface	152
4. Dash panel insert, digital clock, main beam warning lamp, side light warning lamp, turn signal indicator lamp, handbrake warning, brake fluid level warning contact	153
5. Light switch, switch and instrument illumination regulator	154
6. Left tail light, left brake light, rear fog light, heated rear window	155
7. Right tail light, right brake light, reversing light, headlight dipper/flasher switch	156
8. Turn signal switch, parked light switch, front bulbs	157
9. Hazard warning light switch, turn signal relay, front turn signals	158
10. Headlight range control *	159
11. Intermittent wiper switch, wiper motor, front and rear washer pump, intermittent wash and wipe relay, horn, dual tone horn	160
12. Rear window wiper motor, luggage compartment light, heater element for washer jet, luggage compartment switch	161
13. Radio, heated rear window switch, cigarette lighter, aerial, loudspeaker, aerial amplifier, fuses	162
14. Fresh air blower, fresh air blower switch, fresh air/recirculated air flap positioning motor	163
15. Interior light, door contact switch, fog light	164
16. Brake light switch, number plate light	165
17. Immobilizer, reversing light switch, immobilizer reader coil, immobiliser control unit, reversing light switch	166
18. Horn plate, dual tone horn, treble tone horn, bass tone horn, dual tone horn relay, fuses	167
029 - 1.0 l/37 kW Motronic, engine codes ALD, AUC	168-177
1. 1.0 l/37 kW Motronic, engine codes ALD, AUC	168
2. Battery, alternator, voltage regulator, starter, radiator fan thermo-switch, radiator fan	169
3. Motronic control unit, engine speed sender, ignition transformer, spark plug connector, spark plugs, fuses	170
4. Motronic control unit, throttle valve control unit, pedal value sender, intake manifold pressure sender, intake air temperature sender, brake light switch, brake pedal switch	171
5. Motronic control unit, hall sender 1, coolant temperature sender, power assisted steering pressure switch, injectors	172
6. Motronic control unit, lambda probe I, lambda probe II, activated charcoal filter system solenoid valve, exhaust gas recirculation potentiometer, exhaust gas recirculation valve	173
7. Motronic control unit, knock sensor, fuel pump relay (crash)	174
8. Fuel pump, speedometer sender, fuel gauge sender, coolant shortage indicator sender	175
9. Dash panel insert, oil pressure warning, coolant temperature gauge, fuel gauge, rev. counter, warning lamps	176
10. Dash panel insert, self-diagnosis connection, data bus diagnostic interface	177
030 -	178-187
1.	178
2. Battery, alternator, voltage regulator, starter, radiator fan thermo-switch, radiator fan	179
3. 4LV control unit (injection system), engine speed sender, spark plug connector, spark plugs	180

4. 4LV control unit (injection system), throttle valve control unit, accelerator pedal position sender, intake manifold pressure sender, intake manifold temperature sender, brake light switch, brake pedal switch	181
5. 4LV control unit (injection system), hall sender 1, coolant temperature sender, injectors	182
6. 4LV control unit (injection system), lambda probe I, lambda probe II, activated charcoal filter system solenoid valve, immobilizer control unit	183
7. 4LV control unit (injection system), knock sensor, fuel pump relay (crash), exhaust gas recirculation potentiometer	184
8. Fuel pump, speedometer sender, fuel gauge sender, coolant shortage indicator sender	185
9. Dash panel insert, oil pressure warning, coolant temperature gauge, fuel gauge, rev. counter, heater element (crankcase breather), warning lamps	186
10. Dash panel insert, warning lamps, self-diagnosis connection, data bus diagnostic interface	187
031 - 1.6 l/92 kW Simos, engine codes ARC, AVY	188-198
1. 1.6 l/92 kW Simos, engine codes ARC, AVY	188
2. Battery, alternator, voltage regulator, starter, radiator fan thermo-switch, radiator fan	189
3. Simos control unit, engine speed sender, ignition transformer, spark plugs, spark plug connector, fuses	190
4. Simos control unit, throttle valve control unit, accelerator pedal position sender, intake manifold pressure sender, intake air temperature sender, oil temperature sender	191
5. Simos control unit, hall sender 1, coolant temperature sender, injectors	192
6. Simos control unit, lambda probe I, lambda probe II, activated charcoal filter system solenoid valve, immobilizer control unit	193
7. Simos control unit (injection system), knock sensor, clutch pedal switch, brake light switch, brake pedal switch, inlet camshaft timing adjustment valve, heater element (crankcase breather)	194
8. Simos control unit (injection system), fuel pump relay, fuel pump relay (crash), oil temperature sender	195
9. Fuel pump, speedometer sender, fuel gauge sender, coolant shortage indicator sender	196
10. Dash panel insert, oil pressure warning, coolant temperature gauge, fuel gauge, rev. counter, warning lamps	197
11. Dash panel insert, self-diagnosis connection, data bus diagnostic interface	198
032 - 1.9 ltr./ 47kW catalytic converter diesel engine, engine codes AEF	199-205
1. 1.9 ltr./ 47kW catalytic converter diesel engine, engine codes AEF	199
2. Battery, starter, alternator, radiator fan	200
3. Fuel shut-off valve, fuel shut-off valve control unit, fuel shut-off control unit (Crash)	201
4. Automatic glow period control unit, commencement of injection valve, load signal potentiometer, exhaust gas recirculation valve, idling speed boost valve	202
5. Automatic glow period control unit, engine temperature sender, coolant temperature sender, full load stop valve, glow plugs, glow plugs relay	203
6. Coolant shortage indicator sender, fuel gauge sender, speedometer sender, oil temperature sender, oil pressure switch	204
7. Dash panel insert, fuel gauge, coolant shortage/coolant temperature warning lamp, optical and acoustical oil pressure warning, alternator warning lamp, glow period warning lamp	205
033 -	206-215
1.	206
2. Battery, starter, alternator, radiator fan	207
3. Diesel direct injection system control unit, engine speed sender, intake air temperature sender, immobilizer control unit	208
4. Diesel direct injection system control unit, needle lift sender, exhaust gas recirculation valve, fuel shut-off control unit (Crash)	209
5. Diesel direct injection system control unit, metering adjuster, fuel temperature sender, modulating piston movement sender, clutch pedal switch	210
6. Diesel direct injection system control unit, accelerator pedal position sender, low heat output relay, high heat output relay, coolant heating elements	211
7. Diesel direct injection system control unit, engine and coolant temperature sender, fuel shut-off valve, voltage supply relay, commencement of injection valve, throttle butterfly valve	212
8. Brake light switch, speedometer sender, glow plugs - (engine), glow plug relay (engine), oil pressure switch, brake pedal switch	213
9. Dash panel insert, fuel gauge, coolant shortage and coolant temperature indicator, optical and acoustical oil pressure warning	214
10. Dash panel insert, self-diagnosis connection, data bus diagnostic interface	215
034 - 1.4 ltr./55 kW - Turbo diesel engine with unit injectors, engine codes AMF	216-227
1. 1.4 ltr./55 kW - Turbo diesel engine with unit injectors, engine codes AMF	216
2. Alternator, voltage regulator, starter	217
3. Diesel direct injection system control unit, voltage supply relay, kick-down switch, idling switch, accelerator pedal position sender	218
4. Diesel direct injection system control unit, coolant temperature sender, intake manifold pressure	219

sender, intake manifold temperature sender, engine speed sender	
5. Diesel direct injection system control unit, valve for unit injector, Hall sender (for camshaft position)	220
6. Diesel direct injection system control unit, air mass meter, change-over valve for intake manifold flap, exhaust gas recirculation valve, charge pressure control solenoid valve	221
7. Diesel direct injection system control unit, coolant heater element, high and low heat output relay	222
8. Diesel direct injection system control unit, fuel temperature sender, heater element (crankcase breather)	223
9. Diesel direct injection system control unit, brake pedal switch for diesel direct injection system, brake light switch, clutch pedal switch	224
10. Glow plug relay, speedometer sender, oil pressure switch, engine glow plugs	225
11. Dash panel insert, fuel gauge sender, coolant temperature/coolant shortage warning lamp, optical and acoustical oil pressure warning	226
12. Dash panel insert, coolant temperature gauge, fuel gauge, rev. counter, speedometer, alternator warning lamp, self-diagnosis connection	227
035 -	228-237
1.	228
2. Battery, alternator, voltage regulator, starter, radiator fan thermo-switch, radiator fan	229
3. 4CV control unit (injection system), engine speed sender, spark plug connector, spark plugs, ignition transformer	230
4. 4CV control unit (injection system), throttle valve control unit, intake manifold pressure sender, intake manifold temperature sender	231
5. 4CV control unit (injection system), hall sender, coolant temperature sender, fuse, injectors, heater element (crankcase breather)	232
6. 4CV control unit (injection system), lambda probe, activated charcoal filter system solenoid valve, exhaust gas recirculation frequency valve, immobilizer control unit	233
7. 4CV control unit (injection system), knock sensor, fuel pump relay, fuse	234
8. Fuel pump, speedometer sender, fuel gauge sender, coolant shortage indicator sender	235
9. Dash panel insert, oil pressure warning, coolant temperature gauge, fuel gauge, rev. counter, warning lamps	236
10. Dash panel insert, self-diagnosis connection, data bus diagnostic interface	237
036 - Anti-lock brake system (ABS) with electronic differential lock (EDL)	238-241
1. Anti-lock brake system (ABS) with electronic differential lock (EDL)	238
2. ABS control unit, brake light switch, fuses on battery fuse holder	239
3. ABS control unit, inlet valves, outlet valves	240
4. ABS control unit, inlet valves, dash panel insert, self-diagnosis connection, differential lock valves 1 and 2	241
037 - Anti-lock brake system (ABS) with electronic differential lock (EDL)	242-245
1. Anti-lock brake system (ABS) with electronic differential lock (EDL)	242
2. ABS control unit, brake light switch, fuses in battery fuse holder	243
3. ABS control unit, inlet valves, outlet valves	244
4. ABS control unit, inlet valves, dash panel insert, self-diagnosis connection, differential lock valve 1 and 2	245
038 - Anti-lock brake system (ABS) with electronic differential lock (EDL)	246-249
1. Anti-lock brake system (ABS) with electronic differential lock (EDL)	246
2. ABS control unit, fuses in fuse box / battery, differential lock valve 1 and 2	247
3. ABS control unit, inlet valves, dash panel insert, self-diagnosis connection	248
4. Brake light switch	249
039 - Anti-lock brake system (ABS) with electronic differential lock (EDL), traction control system (TCS) and electronic stabilisation program (ESP)	250-257
1. Anti-lock brake system (ABS) with electronic differential lock (EDL), traction control system (TCS) and electronic stabilisation program (ESP)	250
2. ABS control unit with EDL/TCS/ESP, TCS and ESP button, fuses	251
3. ABS/ABS control unit with EDL/TCS/ESP, steering angle sender	252
4. ABS/ABS control unit with EDL/TCS/ESP, speed sensor	253
5. ABS/ABS with EDL/TCS/ESP control unit, lateral acceleration sender, brake pressure sender, yaw rate sender, ABS hydraulic pump	254
6. ABS control unit with EDL/TCS/ESP, longitudinal acceleration sender, brake pressure solenoid valve, ESP brake detection switch	255
7. ABS control unit with EDL/TCS/ESP, handbrake warning switch, brake light suppression relay, brake fluid level warning contact	256
8. Control unit with display in dash panel insert, handbrake warning lamp, ABS warning lamp	257
040 - Anti-lock brake system (ABS) with electronic differential lock (EDL)	258-262
1. Anti-lock brake system (ABS) with electronic differential lock (EDL)	258
2. ABS control unit. fuses on battery fuse holder	259

3. ABS control unit, inlet valves, outlet valves	260
4. ABS control unit, inlet valves, dash panel insert, self-diagnosis connection, differential lock valves 1 and 2	261
5. Brake light switch	262
041 - Airbag system	263-266
1. Airbag system	263
2. Airbag control unit, airbag coil connector, front airbag igniter, side airbag crash sensors	264
3. Airbag control unit, side airbag igniter, belt tensioner igniter	265
4. Airbag control unit, airbag warning lamp, self-diagnosis connection, data bus diagnostic interface, control unit with display in dash panel insert	266
042 - Automatic gearbox	267-272
1. Automatic gearbox	267
2. Battery, starter, alternator, voltage regulator, radiator fan, starter inhibitor relay	268
3. Motronic control unit, automatic gearbox control unit, multi-function switch, reversing light bulb, right, reversing light bulb, left	269
4. Automatic gearbox control unit, solenoid valves, vehicle speed sender	270
5. Automatic gearbox control unit, gearbox speed sender, selector lever lock solenoid, self-diagnosis connection	271
6. Selector lever illumination, fuse for selector lever position P/N warning lamp, fuse for selector lever lock solenoid, fuse for multi-function switch	272
043 - Gas discharge headlight, automatic headlight range control	273-276
1. Gas discharge headlight, automatic headlight range control	273
2. Headlight range control unit, right headlight range control motor, left headlight range control motor, self-diagnosis connection	274
3. Left gas discharge light control unit, left gas discharge light, left headlight	275
4. Right gas discharge light control unit, left gas discharge light, right headlight	276
044 - Automatic anti-dazzle interior mirror, rain sensor	277-280
1. Automatic anti-dazzle interior mirror, rain sensor	277
2. Automatic intermittent wash/wipe relay, automatic anti-dazzle interior mirror, rain sensor	278
3. Intermittent wiper switch, windscreen wiper motor, windscreen and rear window washer pump, automatic intermittent wash/wipe relay	279
4. Rear window wiper motor	280
045 - Air conditioner (manual)	281-285
1. Air conditioner (manual)	281
2. Fresh air/air recirculating flap switch, fresh air blower, fresh/recirculating air flap control motor	282
3. Fresh air blower switch, air conditioner switch	283
4. Radiator fan control unit, radiator fan, air conditioning system magnetic coupling, ambient temperature sensor	284
5. Radiator fan control unit, radiator fan thermo-switch, high pressure sender	285
046 - Climatronic	286-293
1. Climatronic	286
2. Climatronic control unit, temperature flap control motor, dash panel temperature sensor, temperature sensor blower, dash panel temperature sensor, temperature sensor blower	287
3. Climatronic control unit, control motor for central flap, control motor for footwell/defroster flap	288
4. Climatronic control unit, air flow flap control motor, vent temperature sensor, fresh air duct temperature sensor	289
5. Climatronic control unit, temperature sensor, fresh air blower, fresh air blower control unit, sunlight penetration photosensor	290
6. Climatronic control unit	291
7. Radiator fan control unit, radiator fan, air conditioning system magnetic clutch	292
8. Radiator fan control unit, thermal switch for radiator fan, high-pressure sender, high-pressure sender, fuses	293
047 - 12V socket	294-295
1. 12V socket	294
2. 12V socket	295
048 - Climatronic	296-303
1. Climatronic	296
2. Climatronic control unit, temperature flap control motor	297
3. Climatronic control unit, central flap control motor, footwell/defroster flap control motor	298
4. Climatronic control unit, air flow flap control motor, vent temperature sender, fresh air intake duct temperature sensor	299
5. Climatronic control unit, temperature sensor, fresh air blower, fresh air blower control unit, sunlight penetration photosensor	300
6. Climatronic control unit	301

7. Radiator fan control unit, radiator fan, air conditioning system magnetic coupling	302
8. Radiator fan control unit, radiator fan thermo-switch, high pressure sender	303
049 -	304-308
1.	304
2. Convenience system central control unit, anti-theft alarm system horn, anti-theft alarm system contact switch, luggage compartment light switch, tailgate/boot lid release switch	305
3. Convenience system central control unit, anti-theft alarm system, central locking warning lamp -SAFE-	306
4. Convenience system central control unit, anti-theft alarm system, interior monitoring sensor, interior monitoring sender, self-diagnosis connection	307
5. Convenience system central control unit, fuses	308
050 - Central locking	309-311
1. Central locking	309
2. Central locking pump with control unit, central locking actuator	310
3. Tailgate/boot lid central locking switch (driver's side), tailgate/boot lid central locking switch (front passenger's side)	311
051 - Radio navigation with CD changer	312-316
1. Radio navigation with CD changer	312
2. Control unit with display for radio and navigation, dash panel insert	313
3. Control unit with display for radio and navigation, loudspeaker front, radio/telephone aerial, navigation aerial (GPS)	314
4. Control unit with display for radio and navigation, rear loudspeakers	315
5. Control unit with display unit for radio and navigation, CD changer	316
052 - Radio systems	317-321
1. Radio systems	317
2. Radio, dash panel insert	318
3. Radio, front loudspeakers, aerial, aerial amplifier	319
4. Radio, rear loudspeakers	320
5. Radio, CD changer	321
053 - Folding fabric sunroof	322-323
1. Folding fabric sunroof	322
2. Folding fabric sunroof motor, switch to open folding fabric sunroof, switch to close folding fabric sunroof	323
054 - Heated seats, driver's and front passenger's side	324-326
1. Heated seats, driver's and front passenger's side	324
2. Heated driver's seat control unit, heated driver's seat adjuster, heated driver's seat, heated driver's seat backrest	325
3. Heated driver's seat control unit, heated front passenger's seat adjuster, heated front passenger's seat, heated front passenger's seat backrest	326
055 -	327-332
1.	327
2. Mirror adjustment switch, driver's door electrically adjustable exterior mirror	328
3. Electrically adjustable exterior mirror for front passenger's door, exterior mirror heater relay	329
4. Front left electric window control unit, front left electric window motor, electric window switch on driver's side	330
5. Electric window control unit front right, electric window motor right, window lifter switch right	331
6. Sliding sunroof adjustment control unit, sliding sunroof adjustment regulator	332
056 - Headlight washer system	333-334
1. Headlight washer system	333
2. Headlight washer system	334
057 - CAN-bus network	335-337
1. CAN-bus network	335
2. Dash panel insert, data bus diagnostic interface, self-diagnosis connection, airbag control unit connection, fuses	336
3. ABS/ABS with EDL control unit, steering angle sender, automatic gearbox control unit, electronic manual gearbox control unit, engine control unit	337
058 - Climatronic	338-345
1. Climatronic	338
2. Climatronic control unit, temperature flap control motor	339
3. Climatronic control unit, central flap control motor, footwell/defroster flap control motor	340
4. Climatronic control unit, air flow flap control motor, vent temperature sender, fresh air intake duct temperature sensor	341
5. Climatronic control unit, temperature sensor, fresh air blower, fresh air blower control unit, sunlight penetration photosensor	342
6. Climatronic control unit	343
7. Radiator fan control unit. radiator fan. air conditioning system magnetic coupling	344

8. Radiator fan control unit, radiator fan thermo-switch, high pressure sender	345
059 - 1.4 ltr./55 kW - Turbo diesel engine with unit injectors, engine codes AMF	346-357
1. 1.4 ltr./55 kW - Turbo diesel engine with unit injectors, engine codes AMF	346
2. Alternator, voltage regulator, starter	347
3. Diesel direct injection system control unit, voltage supply relay, kick-down switch, idling switch, accelerator pedal position sender, fuel pump relay	348
4. Diesel direct injection system control unit, coolant temperature sender, intake manifold pressure sender, intake manifold temperature sender, engine speed sender	349
5. Diesel direct injection system control unit, unit injector solenoid valves, hall sender (for camshaft position)	350
6. Diesel direct injection system control unit, air mass meter, intake manifold flap change-over valve, exhaust gas recirculation valve, charge pressure control solenoid valve	351
7. Diesel direct injection system control unit, coolant heater element, high and low heat output relay	352
8. Diesel direct injection system control unit, fuel temperature sender, heater element (crankcase breather)	353
9. Diesel direct injection system control unit, fuel shut-off control unit (Crash), brake pedal switch for diesel direct inj. system, brake light switch, clutch pedal switch	354
10. Glow plug relay, speedometer sender, oil pressure switch, glow plugs - engine	355
11. Dash panel insert, fuel gauge sender, coolant temperature/coolant shortage warning lamp, optical and acoustical oil pressure warning, fuel pump (pre-supply pump)	356
12. Dash panel insert, coolant temperature gauge, fuel gauge, rev. counter, speedometer, alternator warning lamp, self-diagnosis connection	357
060 - Air conditioner (manual)	358-362
1. Air conditioner (manual)	358
2. Fresh air/air recirculating flap switch, fresh air blower, fresh/recirculating air flap control motor, additional heater, heater element contact switch	359
3. Fresh air blower switch, air conditioner switch	360
4. Radiator fan control unit, radiator fan, air conditioning system magnetic coupling, ambient temperature switch	361
5. Radiator fan control unit, radiator fan thermo-switch, high pressure sender	362
061 - Preperation for telephone	363-364
1. Preperation for telephone	363
2. Radio, preperation for telephone	364
062 - Seat heating for leather seats	365-367
1. Seat heating for leather seats	365
2. Heated driver's seat control unit, heated driver's seat adjuster, heated driver's seat, heated driver's seat backrest	366
3. Heated passenger's seat control unit, heated front passenger's seat adjuster, heated front passenger's seat, heated front passenger's seat backrest	367
063 - Automatic gearbox	368-373
1. Automatic gearbox	368
2. Battery, starter, alternator, radiator fan, radiator fan thermo-switch, starter inhibitor relay	369
3. Motronic control unit, automatic gearbox control unit, multi-function switch	370
4. Automatic gearbox control unit, solenoid valves, solenoid valve series resistance, vehicle speed sender	371
5. Automatic gearbox control unit, gearbox speed sender, selector lever lock solenoid valve, kick-down switch, selector lever display illumination, selector lever position P/N warning lamp	372
6. Fuses for selector lever illumination, fuse for selector lever position P/N warning lamp, fuse for selector lever lock solenoid, fuse for multi-function switch	373
064 - Automatic gearbox	374-379
1. Automatic gearbox	374
2. Battery, starter, alternator, radiator fan, radiator fan thermo-switch, starter inhibitor relay	375
3. Motronic control unit, automatic gearbox control unit, multi-function switch, reversing light bulb, left, reversing light bulb, right	376
4. Automatic gearbox control unit, solenoid valves, solenoid valve series resistance, vehicle speed sender, gearbox oil temperature sender	377
5. Automatic gearbox control unit, gearbox speed sender, selector lever lock solenoid valve, kick-down switch, selector lever display illumination	378
6. Fuses for selector lever illumination, fuse for selector lever lock solenoid, fuse for multi-function switch, engine control unit fuse	379
065 - Daytime driving lights	380-387
1. Daytime driving lights	380
2. Dash panel insert, main beam warning lamp, X contact relief relay, side light warning lamp, rear fog light warning lamp	381
3. Lihtina switch. switches and instruments - lihtina control. front and rear foa light switch.	382

lighting switch light bulb	
4. Tail lights, brake lights, rear fog light, reversing light, rear turn signals	383
5. Headlight dipper/flasher switch, turn signal switch, parking light switch	384
6. Left headlight, left side light, right headlight, right side light	385
7. Switches and instruments - lighting control, headlight range control	386
8. Number plate light, fog light	387
066 - Daytime running light	388-392
1. Daytime running light	388
2. Light switch, Headlight range control regulator	389
3. Ignition/starter switch, Headlight dipper and flasher switch, Parking light switch, Steering column combination switch	390
4. Front left headlight, Front right headlight, Left headlight range control motor, Right headlight range control motor	391
5. Left fog light bulb, Right fog light bulb, Left tail light, Right tail light	392
067 - Radiator fan with no air conditioning system	393-394
1. Radiator fan with no air conditioning system	393
2. Alternator, Radiator fan thermal switch, Radiator fan	394
201 - -Fitting locations:Fuse holder, fuse holder/battery and relay station	395-399
1. Fuse holder, fuse holder/battery and relay station	395
2. Fuse locations	396
3. -Fitting locations:Fuse holder, fuse holder/battery and relay station	397
4. Fuse locations fuse holder/battery	398
5. Relay locations and connector locations on relay station	399
202 - -Fitting locations:Multi-pin connectors	400-408
1. Contents	400
2. Engine connector: Engine connector, petrol engine with automatic gearbox	401
3. Engine connector: Engine connector, 1.7 ltr/42 kW cat. diesel engine, engine code AHG, 1.9 ltr/47 kW cat diesel engine, engine code AGD	402
4. Engine connector: Engine connector, 1.9 ltr/47 kW cat diesel engine, engine code AEF, from November 1995	403
5. Coupling stations: Left and right A pillar coupling stations	404
6. Automatic gearbox: Solenoid valves and gearbox oil sender (G93), Multi-function switch (F125)	405
7. Lamps, lights, switches - exterior: 19-pin multi-pin connector, Left and right headlights	406
8. Lamps, lights, switches - interior, anti-theft alarm: Lighting switch (E1) and headlight range control adjuster (E102), Mirror adjustment switch (E43) and mirror adjustment change-over switch (E48)	407
9. Self diagnosis: 16-pin connector behind stowage compartment on drivers side	408
203 - -Fitting locations:Control units and relays	409-411
1. Contents	409
2. ABS control unit (25-pin connector), Immobilizer control unit	410
3. Central locking control unit	411
204 - -Fitting Locations: Relay positions ans fuse locations (as of October 99)	412-416
1. -Fitting Locations: Relay positions ans fuse locations (as of October 99)	412
2. Relay positions on relay carrier	413
3. Fuse locations on fuse holder (on left of dash panel)	414
4. -Fitting Locations: Relay positions ans fuse locations (as of October 99)	415
5. Fuse locations on battery fuse holder	416
205 - -Fitting locations:Coupling stations for wiring harnesses (as of October 99)	417-418
1. Contents	417
2. Coupling station below relay carrier	418
401 - -Fault finding programme:Battery discharges (Voltage leakage suspected)	419
1. Battery discharges (Voltage leakage suspected)	419
402 - -Fault finding programme:Starter motor does not turn	420
1. Starter motor does not turn	420
403 - -Fault finding programme:Starter motor turns too slowly and does not crank engine	421
1. Starter motor turns too slowly and does not crank engine	421
404 - -Fault finding programme:Alternator warning lamp does not go out as speed increases	422
1. Alternator warning lamp does not go out as speed increases	422
405 - -Fault finding programme:Checking alternator and voltage regulator with multimeter V.A.G. 1715	423
1. Checking alternator and voltage regulator with multimeter V.A.G. 1715	423
406 - -Fault finding programme:Alternator warning lamp does not light up when ignition is switched on	424
1. Alternator warning lamp does not light up when ignition is switched on	424
407 - -Fault finding programme:Checking turn signals and hazard warning lights system	425-427
1. Checking turn signals and hazard warning lights system	425
2. -Fault findina proaramme:Checkina turn sianals and hazard warnina lihts svstem	426

3. -Fault finding programme:Checking turn signals and hazard warning lights system	427
408 - -Fault finding programme:Checking headlight range control	428-429
1. Checking headlight range control	428
2. -Fault finding programme:Checking headlight range control	429
409 - -Fault finding programme:Checking heated front driver's seat	430-432
1. Checking heated front driver's seat	430
2. -Fault finding programme:Checking heated front driver's seat	431
3. -Fault finding programme:Checking heated front driver's seat	432
410 - -Fault finding programme:Checking heated front passenger's seat	433-435
1. Checking heated front passenger's seat	433
2. -Fault finding programme:Checking heated front passenger's seat	434
3. -Fault finding programme:Checking heated front passenger's seat	435
411 - -Fault finding programme:Checking folding sliding roof	436-437
1. Checking folding sliding roof	436
2. -Fault finding programme:Checking folding sliding roof	437
412 - -Fault finding programme:Checking electric windows	438-439
1. Checking electric windows	438
2. -Fault finding programme:Checking electric windows	439
413 - -Fault finding programme:Checking headlight washer system	440-441
1. Checking headlight washer system	440
2. -Fault finding programme:Checking headlight washer system	441
414 - -Fault finding programme:Checking radio system	442-447
1. Contents	442
2. Radio not functioning, FM (UKW) reception distorted, poor or intermittent	443
3. Checking roof aerial	444
4. One or more loudspeakers not functioning	445
5. Anti-theft coding LED not flashing when radio is switched off, Cassette reproduction muted or distorted	446
6. Auto-reverse continually switches back and forth or switches too early	447
415 - -Fault finding programme:Checking central locking (Without safe function)	448-449
1. Checking central locking (Without safe function)	448
2. -Fault finding programme:Checking central locking (Without safe function)	449
416 - -Fault finding programme:Checking windscreen wipe and wash system	450-452
1. Checking windscreen wipe and wash system	450
2. -Fault finding programme:Checking windscreen wipe and wash system	451
3. -Fault finding programme:Checking windscreen wipe and wash system	452
417 - -Fault finding programme:Checking rear window wipe and wash system	453-455
1. Checking rear window wipe and wash system	453
2. -Fault finding programme:Checking rear window wipe and wash system	454
3. -Fault finding programme:Checking rear window wipe and wash system	455
418 - -Fault finding programme:Checking fog lights	456-460
1. Contents	456
2. Both fog lights not functioning	457
3. -Fault finding programme:Checking fog lights	458
4. -Fault finding programme:Checking fog lights	459
5. One fog light not functioning	460
419 - -Fault finding programme:Checking turn signals and hazard warning lights	461-467
1. Test prerequisites	461
2. -Fault finding programme:Checking turn signals and hazard warning lights	462
3. -Fault finding programme:Checking turn signals and hazard warning lights	463
4. -Fault finding programme:Checking turn signals and hazard warning lights	464
5. -Fault finding programme:Checking turn signals and hazard warning lights	465
6. -Fault finding programme:Checking turn signals and hazard warning lights	466
7. -Fault finding programme:Checking turn signals and hazard warning lights	467
420 - -Fault finding programme:Checking headlight range control	468-469
1. Checking headlight range control	468
2. -Fault finding programme:Checking headlight range control	469
421 - -Fault finding programme:Checking folding sliding sunroof (open switch)	470-471
1. Checking folding sliding sunroof (open switch)	470
2. Checking folding sliding sunroof (close switch)	471
422 - -Fault finding programme:Checking windscreen wash/wipe system	472-476
1. Contents, Test prerequisites	472
2. Checking windscreen wipe system	473
3. -Fault finding programme:Checking windscreen wash/wipe system	474
4. -Fault finding programme:Checking windscreen wash/wipe system	475
5. Checking windscreen washer system	476

423 - -Fault finding programme:Checking rear window wash/wipe system	477-480
1. Contents, Prerequisites	477
2. Checking rear window wipe system	478
3. Checking rear window washer system	479
4. -Fault finding programme:Checking rear window wash/wipe system	480
424 - -Fault finding programme:Checking additional coolant heating	481-487
1. Function, Test prerequisites	481
2. -Fault finding programme:Checking additional coolant heating	482
3. -Fault finding programme:Checking additional coolant heating	483
4. -Fault finding programme:Checking additional coolant heating	484
5. -Fault finding programme:Checking additional coolant heating	485
6. -Fault finding programme:Checking additional coolant heating	486
7. -Fault finding programme:Checking additional coolant heating	487
425 - -Fault finding programme:Checking central locking (Without safe function)	488-489
1. Checking central locking (Without safe function)	488
2. -Fault finding programme:Checking central locking (Without safe function)	489
426 - -Fault finding programme:Checking rain sensor for windscreen wiper system	490-493
1. Test prerequisites	490
2. Checking windscreen wiper system rain sensor	491
3. -Fault finding programme:Checking rain sensor for windscreen wiper system	492
4. -Fault finding programme:Checking rain sensor for windscreen wiper system	493
427 - -Fault finding programme:Checking electric windows	494-499
1. Contents, Test prerequisites	494
2. Checking driver's side electric window	495
3. -Fault finding programme:Checking electric windows	496
4. Checking front passenger's side electric window	497
5. -Fault finding programme:Checking electric windows	498
6. -Fault finding programme:Checking electric windows	499
428 - -Fault finding programme:Checking alternator and voltage regulator with multimeter V.A.G. 1715	500-503
1. Contents, Alternator wiring harness, Test prerequisites	500
2. Checking alternator and voltage regulator	501
3. Alternator warning lamp glows dimly	502
4. Alternator warning lamp does not go out	503
429 - -Fault finding programme:Checking alternator with Diagnosis testing and information system VAS 5051	504-509
1. Contents, Alternator wiring harness, Test prerequisites	504
2. Checking alternator and voltage regulator	505
3. Figures 1, 2 and 3	506
4. Alternator warning lamp glows dimly	507
5. Alternator warning lamp does not go out	508
6. Figures 4, 5 and 6	509
430 - -Fault finding programme:Checking headlight washer system	510-512
1. Test prerequisites	510
2. -Fault finding programme:Checking headlight washer system	511
3. -Fault finding programme:Checking headlight washer system	512
431 - -Fault finding programme:Checking seat heating	513-521
1. Contents, Test prerequisites	513
2. Checking driver's seat heating	514
3. -Fault finding programme:Checking seat heating	515
4. -Fault finding programme:Checking seat heating	516
5. -Fault finding programme:Checking seat heating	517
6. Checking front passenger's seat heating	518
7. -Fault finding programme:Checking seat heating	519
8. -Fault finding programme:Checking seat heating	520
9. -Fault finding programme:Checking seat heating	521