



Contents

1	Engine list	1
2	Service work	4
2.1	Information about flexible or fixed service	4
2.2	Service tables	8
3	General information	21
3.1	Raising vehicle with lifting platform or trolley jack	21
3.2	Stickers	23
3.3	Entries in service schedule	25
3.4	Connecting vehicle diagnostic tester	25
3.5	Vehicle identification number	28
3.6	Vehicle data sticker	29
3.7	Severe operating conditions	30
3.8	Countries with hot climate	31
3.9	Country overview for diesel not compliant with EN 590	31
3.10	Country overview for petrol not compliant with EN 228	32
3.11	Engine code and engine number	33
3.12	Countries with high levels of dust	34
3.13	Identification plate	35
3.14	Shortened intervals for spark plug replacement	36
4	Descriptions of work	41
4.1	Removable towing bracket: checking and cleaning if necessary	43
4.2	Swivel joints and suspension link mountings: inspecting	45
4.3	Automatic headlight control and static cornering light: checking function	46
4.4	Automatic gearbox 09G: changing ATF	48
4.5	Front passenger front airbag: checking key switch and "ON/OFF function"	48
4.6	Battery: checking battery terminal clamps for secure seating	50
4.7	Battery: checking with battery tester (always refer to workshop manual)	54
4.8	Status of battery: reading, sending diagnosis protocol online	54
4.9	Tyres: checking condition, wear pattern, tyre pressure and tread depth	54
4.10	Brake and clutch system: change brake fluid	64
4.11	Brake system and shock absorbers: inspecting for leaks and damage	70
4.12	Brakes, front and rear: checking thickness of brake pads and condition of brake discs	70
4.13	Brake fluid level: Check	74
4.14	Diesel particulate filter: checking	76
4.15	Electric windows: checking positioning (open and close functions)	76
4.16	Fault memory of all systems: reading with vehicle diagnostic tester, correcting possible faults according to repair guidelines	77
4.17	Boots: inspecting	77
4.18	Gearbox mounting: renew	77
4.19	Interior and exterior body: inspecting for corrosion with doors and flaps open	78
4.20	Poly V-belt: renewing	78
4.21	Poly V-belt: checking condition	79
4.22	Cooling system: checking frost protection and coolant level	80
4.23	Diesel fuel filter: renewing	83
4.24	Air filter: cleaning housing and renewing filter element	88
4.25	Multi-purpose additive for diesel fuel: adding	102
4.26	Multi-purpose additive for petrol fuel: adding	104
4.27	Engine and components in engine compartment: inspecting for leaks and damage (from above and below)	105
4.28	Engine cover panel "top": removing and installing	106
4.29	Motor compartment cover (noise insulation) "bottom": removing and installing	109
4.30	Engine oil level: checking	109
4.31	Draining or extracting engine oil, renewing oil filter and replenishing engine oil	111
4.32	Engine oil: capacities and specifications	127



4.33	Panorama sliding sunroof: check function, clean and lubricate guide rails and clean wind deflector.	128
4.34	Road test: performing (driving behaviour, noises, air conditioner etc.)	135
4.35	Wheel securing bolts: tightening to specified torque	136
4.36	Radio code: reading using vehicle diagnostic tester	137
4.37	Radio/navigation system: entering PIN of anti-theft coding and storing local radio stations to station buttons	137
4.38	Tyre pressure monitoring: performing basic setting	138
4.39	Tyre repair set: Checking	140
4.40	Window wash/wipe system and headlight washer system: checking function	141
4.41	Headlight adjustment: checking halogen headlights	146
4.42	Headlight adjustment: checking gas discharge headlights	150
4.43	Headlight adjustment: checking fog lights	155
4.44	Sliding sunroof drains: checking for blockage, cleaning if necessary	157
4.45	Service interval display: Reset	158
4.46	Service interval display: recoding	160
4.47	Track rod ends: checking clearance, firm seating and boots	161
4.48	Dust and pollen filter: cleaning housing and renewing filter element	162
4.49	Transportation mode: switching off	162
4.50	Transportation devices: removing blocking pieces from springs on front axle	163
4.51	Clock and date: setting	164
4.52	Underbody: inspecting for damage to underbody sealant, underbody panels, routing of lines, plugs	165
4.53	Toothed belt: renewing (petrol engines)	165
4.54	Camshaft drive toothed belt (diesel engines): renewing	165
4.55	Camshaft drive toothed belt: checking (4-cylinder petrol engine without change interval) ..	165
4.56	Spark plugs: renewing	166
4.57	Gas system test	185
4.58	Additional service measures on LPG system	190
4.59	LPG tank and lines: renewing	215
5	Exhaust emissions test	216
5.1	Exhaust emissions test for petrol engines	216
5.2	Exhaust emissions test for diesel engines	218
6	Glossary	221
7	---Change history---	224