



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety measures when working on vehicles with start/stop system	1
1.2 Safety precautions when using test and measuring equipment during a road test	1
1.3 Operation and safety notes for gas discharge lamps	2
<b>2 Repair notes</b>	<b>4</b>
2.1 Contact corrosion	4
2.2 Routing and attachment of lines	4
<b>3 Battery</b>	<b>5</b>
3.1 Battery - general notes	5
3.2 Types of battery	5
<b>27 - Starter, current supply, CCS</b>	<b>6</b>
<b>1 Battery</b>	<b>6</b>
1.1 Warning notices and safety regulations	6
1.2 Assembly overview - battery	6
1.3 Assembly overview - battery tray	12
1.4 Battery load test	16
1.5 Disconnecting and connecting battery	16
1.6 Removing and installing battery	21
1.7 Removing and installing battery tray	25
1.8 Checking battery	27
1.9 Charging battery	27
1.10 Removing and installing earth wire with battery monitor control unit J367	27
1.11 Removing and installing battery cut-off/battery isolator	28
1.12 Adapting battery monitor control unit J367	32
1.13 Removing and installing suppression filter C24	32
<b>2 Starter, vehicles with manual gearbox</b>	<b>33</b>
2.1 Checking starter	33
2.2 Starter, vehicles with manual gearbox MQ200	33
2.3 Starter, vehicles with manual gearbox MQ250	37
2.4 Starter, vehicles with manual gearbox MQ350	40
<b>3 Starter, vehicles with dual clutch gearbox (DSG)</b>	<b>47</b>
3.1 Checking starter B	47
3.2 Starter, vehicles with 1.6 l TDI engine, 7-speed dual clutch gearbox 0AM	47
3.3 Starter, vehicles with 1.4 l 132 KW TSI engine, 7-speed dual clutch gearbox 0AM	49
3.4 Starter, vehicles with 1.4 l 103 KW TSI engine, 7-speed dual clutch gearbox 0AM	52
3.5 Starter, vehicles with 1.2 l 77 kW TSI engine, 7-speed dual clutch gearbox 0AM	55
<b>4 Starter, vehicles with automatic gearbox</b>	<b>59</b>
4.1 Starter, vehicles with automatic gearbox 09G	59
<b>5 Alternator</b>	<b>63</b>
5.1 Checking poly V-belt	63
5.2 Checking alternator C	63
5.3 Securing B+ (battery positive) wire to alternator	63
5.4 Alternator, 1.2 l injection engine, 51 kW	64
5.5 Alternator, 1.4 l, 63 kW injection engine	69
5.6 Alternator, 1.2 l, 66 kW/77 kW TSI engine	72
5.7 Alternator, 1.4 l, 103 KW TSI engine	77
5.8 Alternator, 1.4 l, 132 KW TSI engine	81
5.9 Alternator, 2.0 l, 162 KW TSI engine	87
5.10 Alternator 1.2 l TDI	92
5.11 Alternator, 1.6 l TDI engine	97



5.12	Removing and installing poly V-belt pulley on alternator	102
5.13	Voltage regulator for alternator	109
<b>6</b>	<b>Cruise control system (CCS)</b>	<b>113</b>
<b>7</b>	<b>Start/stop system</b>	<b>114</b>
7.1	General description	114
7.2	Start/stop operation switch E693	115
7.3	Voltage stabiliser J532	115
<b>90</b>	<b>- Gauges, instruments</b>	<b>117</b>
<b>1</b>	<b>Dash panel insert</b>	<b>117</b>
1.1	Renewing dash panel insert	117
1.2	Removing and installing dash panel insert	118
1.3	Description of back of dash panel insert	119
1.4	Warning lamp symbols in dash panel insert, petrol engine	119
1.5	Warning lamp symbols in dash panel insert, diesel engine	120
<b>2</b>	<b>Service interval display</b>	<b>122</b>
2.1	Resetting service interval display	122
<b>92</b>	<b>- Windscreen wash/wipe system</b>	<b>123</b>
<b>1</b>	<b>Windscreen wiper system</b>	<b>123</b>
1.1	Assembly overview - windscreen wiper system	123
1.2	Removing and installing wiper arms	124
1.3	Removing wiper frame with linkage and wiper motor	126
1.4	Removing wiper motor from wiper frame and installing	128
1.5	Adjusting wiper blade park position	130
1.6	Removing and installing joint-free wipers	132
1.7	Removing and installing wiper blade of joint-free wiper	133
1.8	Removing and installing rain and light sensor G397	134
<b>2</b>	<b>Windscreen washer system</b>	<b>139</b>
2.1	Assembly overview - windscreen washer system	139
2.2	Removing and installing windscreen washer system spray jets	141
2.3	Adjusting spray jets for windscreen washer system	142
2.4	Assembly overview - washer fluid reservoir	142
2.5	Removing and installing windscreen and rear window washer pump V59	145
<b>3</b>	<b>Rear window wiper system</b>	<b>147</b>
3.1	Assembly overview - rear window wiper system	147
3.2	Removing and installing wiper arm	148
3.3	Removing and installing rear window wiper motor V12	149
3.4	Adjusting rear window wiper park position	150
3.5	Removing and installing joint-free wiper	151
<b>4</b>	<b>Rear window washer system</b>	<b>152</b>
4.1	Assembly overview - rear window washer system	152
4.2	Renewing spray jet	152
4.3	Adjusting spray jet	153
<b>5</b>	<b>Headlight washer system</b>	<b>154</b>
5.1	Assembly overview - headlight washer system	154
5.2	Removing and installing headlight washer system pump V11	155
5.3	Removing and installing spray jet pop-up cylinders	156
5.4	Removing and installing spray jet retainer	157
5.5	Adjusting headlight washer system spray jets	158
5.6	Bleeding headlight washer system	158
<b>6</b>	<b>Washer fluid line hose couplings</b>	<b>160</b>
<b>7</b>	<b>Hose repair</b>	<b>161</b>



<b>94 - Lights, bulbs, switches - exterior</b>	<b>162</b>
<b>1</b> <b>Operation and safety notes for gas discharge lamps</b>	<b>162</b>
<b>2</b> <b>H4 headlights</b>	<b>165</b>
2.1 Assembly overview - headlights with halogen bulb H4	165
2.2 Removing and installing headlight	166
2.3 Adjusting headlight installation position	168
2.4 Renewing headlight bulbs	170
2.5 Removing and installing headlight range control motor	174
2.6 Converting headlights for use when driving on the left or right (halogen headlight)	177
2.7 Adjusting headlights	180
<b>3</b> <b>H7 headlights</b>	<b>181</b>
3.1 Assembly overview - headlights with halogen bulb H7	181
3.2 Removing and installing headlight	183
3.3 Adjusting headlight installation position	184
3.4 Renewing headlight bulbs	185
3.5 Removing and installing headlight range control motor	190
3.6 Converting headlights for use when driving on the left or right (halogen headlight H7)	192
3.7 Adjusting headlights	196
<b>4</b> <b>Headlights with gas discharge bulb</b>	<b>197</b>
4.1 General description	197
4.2 Assembly overview	197
4.3 Removing and installing headlight	199
4.4 Adjusting headlight installation position	201
4.5 Renewing gas discharge headlight bulb	201
4.6 Headlight starter for gas discharge bulb	206
4.7 Headlight range control unit J431	208
4.8 Headlight range control motor	209
4.9 Headlight screen adjustment solenoid	210
4.10 LED module for daytime running light and side light	211
4.11 Converting headlights for use when driving on the left or right	211
4.12 Repairing headlight retaining tabs	211
4.13 Adjusting headlights	211
<b>5</b> <b>Fog lights</b>	<b>212</b>
5.1 Assembly overview - fog lights	212
5.2 Removing and installing fog light	212
5.3 Removing and installing fog light bulb	214
5.4 Adjusting fog lights	215
<b>6</b> <b>Fog light Polo Cross (Polo Dune)</b>	<b>216</b>
6.1 Assembly overview - fog lights	216
6.2 Removing and installing fog light	216
6.3 Removing and installing fog light bulb	217
6.4 Adjusting fog lights	218
<b>7</b> <b>Daytime running light</b>	<b>219</b>
7.1 Removing and installing daytime running light bulb in fog light	219
<b>8</b> <b>Tail light</b>	<b>221</b>
8.1 Assembly overview - tail light	221
8.2 Removing and installing tail light cluster	222
8.3 Removing and installing tail light cluster bulb carrier	223
<b>9</b> <b>Number plate light</b>	<b>225</b>
9.1 Bolted number plate light X	225
9.2 Clipped number plate light X	227
<b>10</b> <b>High-level brake light</b>	<b>230</b>
10.1 High-level brake light bulb M25	230



<b>11</b>	<b>Steering column switch</b>	<b>235</b>
11.1	Removing and installing steering column switch	236
11.2	Removing and installing airbag coil connector and return ring with slip ring F138	239
11.3	Basic setting of steering angle sensor G85	241
<b>12</b>	<b>Ignition/starter switch and lock cylinder</b>	<b>242</b>
12.1	Removing and installing lock cylinder	242
12.2	Ignition/starter switch D	244
12.3	Removing and installing ignition key withdrawal lock solenoid N376	248
<b>13</b>	<b>Steering lock housing</b>	<b>249</b>
13.1	Removing and installing steering lock housing	249
<b>14</b>	<b>Parking aid</b>	<b>252</b>
14.1	Assembly overview	252
14.2	Parking aid control unit J446	253
14.3	Parking aid warning buzzer H15	255
14.4	Rear parking aid sender up to 07/2009	256
14.5	Rear parking aid sender from 08/2009 onwards	259
14.6	Renewing parking aid senders	262
<b>96</b>	<b>Lights, bulbs, switches - interior</b>	<b>264</b>
<b>1</b>	<b>Interior lights and switches</b>	<b>264</b>
1.1	Removing and installing interior monitoring switch E183	264
<b>2</b>	<b>Lights and switches in engine compartment</b>	<b>266</b>
2.1	Removing and installing bonnet contact switch F266	266
<b>3</b>	<b>Lights and switches in dash panel</b>	<b>267</b>
3.1	Removing and installing light switch E1	267
3.2	Removing and installing headlight range control regulator E102 and switch and instrument illumination regulator E20	268
3.3	Buttons, switches and warning lamps in centre of dash panel	269
3.4	Removing and installing petrol or gas fuel selection switch E395	270
3.5	Removing and installing tyre pressure monitor display button E492	271
3.6	Removing and installing key-operated switch to deactivate front passenger side airbag E224	272
3.7	Removing and installing left footwell light W9 and right footwell light W10	273
<b>4</b>	<b>Lights and switches in doors</b>	<b>275</b>
4.1	Removing and installing window regulator switch in front passenger door E107	275
4.2	Removing and installing switch module for driver side window regulator	276
4.3	Removing and installing switch module for mirror adjustment on driver side	277
4.4	Removing and installing driver side interior locking button for central locking system E308	278
4.5	Components - front door locks	279
4.6	Driver side interior locking warning lamp K174 and central locking SAFELOCK function warning lamp on front passenger side K204	279
<b>5</b>	<b>Lights and switches in luggage compartment and rear lid</b>	<b>281</b>
5.1	Removing and installing luggage compartment light W3	281
5.2	Removing and installing luggage compartment light switch F5	282
<b>6</b>	<b>Lights and switches in roof trim</b>	<b>283</b>
6.1	Removing and installing sliding sunroof adjustment regulator	283
6.2	interior light with switch-off delay W15 with reading lights and preparation for mobile telephone	283
6.3	Interior light with switch-off delay feature W15 and panorama venting/sliding glass sunroof	288
6.4	Rear interior light W43	289
6.5	Removing and installing light for vanity mirror	292
<b>7</b>	<b>12 V socket</b>	<b>294</b>
<b>8</b>	<b>Cigarette lighter U1</b>	<b>295</b>
<b>9</b>	<b>Horn</b>	<b>296</b>



9.1	Removing and installing horn in vehicles with fog lights or daytime running lights	296
9.2	Removing and installing horn in vehicles without fog lights or daytime running lights	296
<b>10</b>	<b>Immobiliser</b>	<b>298</b>
10.1	Immobiliser control unit J362	298
10.2	Ignition key	299
10.3	New identity on renewing all components	299
10.4	Fazit system test	299
<b>11</b>	<b>Anti-theft alarm system (ATAS)</b>	<b>300</b>
11.1	Activating and deactivating anti-theft alarm	300
11.2	Removing and installing interior monitoring switch E183	300
11.3	Removing and installing anti-theft alarm sensor G578	301
11.4	Alarm horn H12	301
<b>97</b>	<b>- Wiring</b>	<b>304</b>
<b>1</b>	<b>Vehicle diagnosis, testing and information systems</b>	<b>304</b>
<b>2</b>	<b>Fuse holder</b>	<b>305</b>
2.1	Removing and installing fuse holder B SB on left in dash panel	305
2.2	Removing and installing fuse holder A SA on left in engine compartment	306
2.3	Removing and installing bracket for fuse holder A SA	310
<b>3</b>	<b>Relay carrier</b>	<b>313</b>
3.1	Removing and installing relay carrier on left of dash panel	313
<b>4</b>	<b>Control units</b>	<b>315</b>
4.1	Onboard supply control unit J519	315
4.2	Data bus diagnostic interface J533	316
4.3	Trailer detector control unit J345	316
<b>5</b>	<b>Wiring harness and connector repairs</b>	<b>320</b>