



## Contents

<b>91 - Communication</b>	<b>1</b>
<b>1 Communication systems</b>	<b>1</b>
1.1 General notes	1
1.2 Fault finding in communication systems	1
<b>2 Radio units and radio navigation systems in general</b>	<b>2</b>
2.1 Removing and installing radio units and radio navigation systems	2
2.2 Adapting radio components	5
2.3 Adapting radio navigation system components	5
<b>3 Radio system "RCD 210"</b>	<b>6</b>
3.1 Features of radio unit "RCD 210"	6
3.2 General notes	6
3.3 Fault finding	7
3.4 Overview of radio system "RCD 210"	7
3.5 Overview of connectors on radio "RCD 210"	8
3.6 Anti-theft coding	10
<b>4 Radio system "RCD 310"</b>	<b>12</b>
4.1 Features of radio unit "RCD 310"	12
4.2 General notes	12
4.3 Overview of radio system "RCD 310"	13
4.4 Overview of connectors on radio "RCD 310"	14
4.5 Anti-theft coding	16
<b>5 Radio system "RCD 510"</b>	<b>18</b>
5.1 Features of radio unit "RCD 510"	18
5.2 General notes	19
5.3 Overview of radio system "RCD 510"	19
5.4 Activating/deactivating transport lock for CD changer in "RCD 510"	21
5.5 Overview of connectors on radio "RCD 510"	22
5.6 Anti-theft coding	25
<b>6</b>	<b>27</b>
6.1 Features of radio navigation system "RNS 310"	27
6.2 General notes	28
6.3 Overview of radio navigation system "RNS 310"	28
6.4 Overview of connectors on radio navigation system "RNS 310"	30
6.5 Anti-theft coding	32
<b>7 Multimedia system control unit</b>	<b>34</b>
7.1 General notes	34
7.2 Overview of "multimedia system control unit"	34
7.3 Removing and installing multimedia control unit	35
<b>8 Loudspeaker systems</b>	<b>37</b>
8.1 Overview of loudspeaker system	37
8.2 Removing and installing front bass loudspeakers	38
8.3 Removing and installing rear bass loudspeakers	39
8.4 Removing and installing front treble loudspeakers	40
<b>9 Telephone system</b>	<b>42</b>
9.1 General notes	42
9.2 Preparation for mobile telephone "UTP with audio streaming"	42
9.3 Removing and installing telephone transmitter and receiver unit	43
9.4 Removing and installing telephone system microphone	44
9.5 Removing and installing telephone bracket	45
<b>10 Aerial systems</b>	<b>47</b>
10.1 General notes	47



10.2	Overview of aerial systems	47
10.3	Removing and installing aerial modules	54
10.4	Removing and installing roof aerial	56
10.5	Renewal of aerial wiring	57
<b>11</b>	<b>Multifunction steering wheel</b>	<b>58</b>
11.1	General notes	58
11.2	Removing and installing steering wheel operating unit	58
11.3	Removing and installing multifunction steering wheel control unit	59
11.4	Adapting multifunction steering wheel components	59
<b>12</b>	<b>Notes on operating mobile telephones and two-way radios</b>	<b>60</b>
12.1	General notes	60
12.2	Notes on performing repair work	60
12.3	Overview of battery, transmitter and receiver unit, fuse and wiring harness	62
12.4	Transmitting power and aerial fitting locations	63
<b>13</b>	<b>Suppression measures</b>	<b>64</b>
13.1	Implementation of suppression measures	64