



Contents

68 - Interior equipment	1
1 Interior mirror	1
1.1 Tools	1
1.2 Automatic anti-dazzle interior mirror	1
1.3 Removing and installing interior mirror with rain and light sensor G397	1
1.4 Bonding retaining plate for interior mirror with rain and light sensor G397	3
1.5 Removing and installing interior mirror	4
1.6 Bonding on retaining plate for interior mirror without rain sensor	5
2 Compartments, covers and trims	7
2.1 Tools	7
2.2 Removing and installing centre console without armrest	8
2.3 Removing and installing centre console with armrest	10
2.4 Removing and installing support (vehicles with arm rest)	13
2.5 Removing and installing rear cup holder (vehicles with arm rest)	14
2.6 Removing and installing arm rest	14
2.7 Removing and installing hand brake cover cap	15
2.8 Removing and installing cover for centre console	16
2.9 Removing and installing dash panel middle trims	17
2.10 Removing and installing centre dash panel compartment	19
2.11 Removing and installing centre dash panel storage compartment	20
2.12 Removing and installing dash panel end trims	21
2.13 Removing and installing glove compartment	22
2.14 Removing and installing fuse box cover	23
2.15 Removing and installing steering column trim	24
2.16 Removing and installing sun visors	25
3 Sill mouldings and wheel housing trims	27
3.1 Removing and installing sill mouldings (4-door models)	27
3.2 Removing and installing sill mouldings (2-door models)	28
3.3 Removing and installing wheel housing trim (4-door models)	28
4 Grab handles	31
4.1 Removing and installing roof grab handle	31
69 - Passenger protection	33
1 Seat belts	33
1.1 Tools	33
1.2 General safety regulations when working on airbag, belt tensioner and battery isolator units (pyrotechnic components)	34
1.3 Special instructions for belt tensioners	35
1.4 Storage, transportation and disposal of airbag, belt tensioner and battery isolator units (pyrotechnic components)	35
1.5 Removing and installing front seat belt (4-door models)	35
1.6 Removing and installing front seat belt (2-door models)	37
1.7 Removing and installing belt anchor rail (2-door models)	39
1.8 Removing and installing front belt height adjuster (4-door models)	41
1.9 Removing and installing front belt height adjuster (2-door models)	42
1.10 Removing and installing front belt buckle	43
1.11 Removing and installing outer rear seat belts (4-door models)	44
1.12 Removing and installing outer rear seat belts (2-door models)	45
1.13 Removing and installing centre rear seat belts	46
1.14 Removing and installing rear double belt buckle	46
2 Inspecting seat belts	48
2.1 Points to check	48
3 Checking child seat anchors (ISOFIX) after an accident	51



3.1	Points to check	51
4	Airbag	52
4.1	Tools	52
4.2	General safety regulations when working on airbag, belt tensioner and battery isolator units (pyrotechnic components)	53
4.3	Special instructions for driver and front passenger airbag	54
4.4	Special instructions for curtain airbag modules	54
4.5	Storage, transportation and disposal of airbag, belt tensioner and battery isolator units (pyrotechnic components)	55
4.6	Renewing airbag units following an accident	55
4.7	Removing and installing airbag control unit J234	55
4.8	Removing and installing driver airbag unit	56
4.9	Removing and installing return spring with slip ring	59
4.10	Removing and installing front passenger airbag unit	59
4.11	Removing and installing side airbag (vehicles with curtain airbag)	62
4.12	Removing and installing side airbag (vehicles without curtain airbag)	64
4.13	Removing and installing curtain airbag	65
4.14	Removing and installing seat occupied sensor, front passenger side G128	68
4.15	Adapting components	71
5	Crash sensors	72
5.1	Tools	72
5.2	Removing and installing side airbag crash sensor on driver side G179 (4-door models)	72
5.3	Removing and installing side airbag crash sensor on front passenger side G180 (4-door models)	73
5.4	Removing and installing side airbag crash sensor on driver side G179 (2-door models)	74
5.5	Removing and installing side airbag crash sensor on front passenger side G180 (2-door models)	76
5.6	Removing and installing rear side-airbag crash sensor, driver side G256	77
5.7	Removing and installing rear side-airbag crash sensor, front passenger side G257	78
70	Trim, insulation	80
1	Dash panel	80
1.1	Tools	80
1.2	Removing and installing dash panel	80
1.3	Removing and installing dash panel cross member	86
2	Door and side trims	95
2.1	Tools	95
2.2	Removing and installing front door trim (4-door models)	95
2.3	Removing and installing door trim panel (2-door models)	99
2.4	Removing and installing rear door trim	104
2.5	Removing and installing front door trim cover	108
2.6	Removing and installing side trim	109
3	Pillar trims	112
3.1	Tools	112
3.2	Removing and installing upper A-pillar trims	112
3.3	Removing and installing lower A-pillar trim (driver side)	113
3.4	Removing and installing lower A-pillar trim (passenger side)	115
3.5	Releasing and securing upper B-pillar trims (4-door models)	116
3.6	Removing and installing B-pillar trims (4-door models)	117
3.7	Releasing and securing B-pillar trims (2-door models)	119
3.8	Removing and installing B-pillar trims (2-door models)	120
3.9	Removing and installing C-pillar trims (4-door models)	121
3.10	Releasing and securing C-pillar trims (2-door models)	124
3.11	Removing and installing C-pillar trims (2-door models)	125
4	Rear lid trim	128
4.1	Tools	128



4.2	Removing and installing rear lid trim	128
5	Luggage compartment trims	130
5.1	Tools	130
5.2	Removing and installing lock carrier cover	130
5.3	Removing and installing luggage compartment floor covering	131
5.4	Removing and installing luggage compartment cover side support	132
5.5	Removing and installing mounting parts for variable luggage compartment floor	134
5.6	Removing and installing luggage compartment side trim panel	134
6	Roof trims	136
6.1	Tools	136
6.2	Removing and installing roof end strip	137
6.3	Removing and installing moulded headliner (4-door models)	137
6.4	Removing and installing moulded headliner (2-door models)	140
6.5	Removing and installing insulation and roof reinforcements	142
72 -	Seat frames	145
1	Front seats	145
1.1	Tools	145
1.2	Removing and installing front seat	146
1.3	Removing and installing seat trim on sill side (seat without height adjustment)	150
1.4	Removing and installing seat trim on sill side (seat with height adjustment)	151
1.5	Removing and installing seat height adjustment operating lever	153
1.6	Removing and installing seat trim on tunnel side	154
1.7	Removing and installing mounting for drawer	154
1.8	Removing and installing lumbar adjustment lever	156
1.9	Removing head restraint guides	156
1.10	Removing and installing front seat backrest	158
2	Rear seats	161
2.1	Tools	161
2.2	Removing and installing rear seat	161
2.3	Removing and installing backrest	162
2.4	Removing head restraint guides	164
2.5	Removing and installing backrest release mechanism	165
74 -	Seat - padding, covers	167
1	Front seat covers and padding	167
1.1	Tools	167
1.2	Removing and installing front seat cushion cover and padding	167
1.3	Removing and installing front seat backrest cover and padding	170
2	Rear seat covers and padding	172
2.1	Tools	172
2.2	Removing and installing bench seat (split) cover and padding	172
2.3	Removing and installing bench seat (continuous) cover and padding	173
2.4	Removing and installing backrest cover and padding	174