



Contents

50 - Body - front	1
1 Lock carrier	1
1.1 Assembly overview – lock carrier	1
1.2 Removing and installing lock carrier	2
1.3 Moving to and back from service position	4
1.4 Pressure hose with plug-in connector	8
2 Wings	9
2.1 Tools	9
2.2 Front wing	9
2.3 Insulation and foam elements for wing and web plate	14
2.4 Removing and installing wing bracket	15
3 Plenum chamber bulkhead	16
3.1 Tools	16
3.2 Assembly overview - plenum chamber bulkhead	16
4 Plenum chamber cover	18
4.1 Plenum chamber cover	18
5 Noise insulation	22
5.1 Tools	22
5.2 Assembly overview - diesel noise insulation	22
5.3 Assembly overview - long noise insulation	24
5.4 Assembly overview - short noise insulation	25
6 Underbody cladding	26
6.1 Tools	26
6.2 Assembly overview - underbody cladding	26
7 Bulkhead	28
7.1 Tools	28
7.2 Materials	29
7.3 Assembly overview - bulkhead	29
8 Tunnel cross-piece	30
8.1 Tools	30
8.2 Assembly overview - tunnel cross-piece	30
55 - Bonnet, rear lid	31
1 Bonnet (hood)	31
1.1 Tools	31
1.2 Assembly overview - bonnet	31
1.3 Removing and installing bonnet	33
1.4 Removing and installing bonnet hinge	34
1.5 Removing and installing insulation	37
1.6 Removing and installing support rod	39
1.7 Assembly overview - bonnet lock and release components	40
1.8 Removing and installing lid lock - LHD vehicle	41
1.9 Removing and installing lid lock - RHD vehicle	43
1.10 Detaching Bowden cable	45
1.11 Removing and installing striker pin	46
1.12 Removing and installing release lever	47
1.13 Adjusting bonnet	49
1.14 Adjusting striker pin	51
2 Rear lid	52
2.1 Tools	52
2.2 Assembly overview - rear lid	52
2.3 Removing and installing rear lid	54



2.4	Assembly overview - gas strut	57
2.5	Removing gas strut	57
2.6	Releasing gas from gas strut	59
2.7	Assembly overview - rear lid hinge	59
2.8	Removing and installing rear lid hinge	61
2.9	Removing and installing striker pin	63
2.10	Removing and installing stop buffer	64
2.11	Adjusting rear lid	65
2.12	Removing and installing bonnet lock	68
2.13	Removing and installing release element	70
2.14	Rear lid seal	71
2.15	Removing and installing rear lid seal	72
3	Tank flap unit	74
3.1	Tools	74
3.2	Assembly overview - tank flap unit and actuator	74
3.3	Removing and installing tank flap unit	76
3.4	Removing and installing actuator	78
57	Front doors, door components, central locking	80
1	Rear door	80
1.1	Tools	80
1.2	Assembly overview - door hinges	81
1.3	Removing and installing door	82
1.4	Installing after renewing A-pillar	85
1.5	Door alignment	86
2	Door components	90
2.1	Tools	90
2.2	Assembly overview - front door (2-door model)	91
2.3	Assembly overview - front door (4-door model)	92
2.4	Removing and installing cover (2-door model)	93
2.5	Removing and installing cover (4-door model)	95
2.6	Removing and installing door retaining strap	97
2.7	Removing and installing striker pin	98
2.8	Assembly overview - door handle and door lock	98
2.9	Removing and installing lock cylinder cover cap	99
2.10	Removing and installing lock cylinder	100
2.11	Removing and installing cover cap (without lock cylinder)	103
2.12	Removing and installing door handle	106
2.13	Removing and installing door lock	108
2.14	Removing and installing mounting bracket	112
2.15	Removing and installing window slot inner seal	113
2.16	Removing and installing outer window slot seal (2-door model)	114
2.17	Removing and installing outer window slot seal (4-door model)	117
2.18	Removing and installing inner door seal	118
2.19	Removing and installing door outer seal (2-door model)	120
2.20	Removing and installing door outer seal (4-door model)	121
2.21	Assembly overview - insulation (2-door model)	122
2.22	Assembly overview - insulation (4-door model)	123
3	Central locking	124
3.1	Fitting location overview - central locking components	124
3.2	Adapting keys with remote control	125
3.3	Assembly overview - battery for folding key with remote control	126
3.4	Removing and installing battery for folding key with remote control	127
58	Rear doors, door components	130



1	Rear door	130
1.1	Tools	130
1.2	Assembly overview - door hinges	131
1.3	Removing and installing door	132
1.4	Installing after renewing B-pillar	135
1.5	Door alignment	136
2	Door components	140
2.1	Tools	140
2.2	Assembly overview - rear door	141
2.3	Removing and installing cover	142
2.4	Removing and installing door retaining strap	143
2.5	Removing and installing striker pin	144
2.6	Assembly overview - door handle and door lock	144
2.7	Removing and installing cap	145
2.8	Removing and installing door handle	148
2.9	Removing and installing door lock	150
2.10	Removing and installing mounting bracket	154
2.11	Removing and installing trim	156
2.12	Removing and installing window slot inner seal	158
2.13	Removing and installing window slot outer seal	159
2.14	Removing and installing inner door seal	160
2.15	Removing and installing outer door seal	162
2.16	Assembly overview - insulation	163
60	Sunroof	164
1	Panorama tilting sunroof	164
1.1	Tools	164
1.2	Function	164
1.3	Panoramic sliding roof normalisation run	166
1.4	Assembly overview - panorama tilting sunroof	167
1.5	Removing glass panel for panorama tilting sunroof	169
1.6	Removing glass panel when drive is defective	171
1.7	Installing glass panel	173
1.8	Adjusting glass panel (height adjustment)	175
1.9	Removing and installing glass panel seal	176
1.10	Removing and installing cover	177
1.11	Removing and installing drive for panorama tilting sunroof glass panel	178
1.12	Removing and installing panorama tilting sunroof switch	180
1.13	Operating without current	181
1.14	Removing and installing wind deflector	182
1.15	Removing and installing interior seal	184
1.16	Sun blind	185
1.17	Removing and installing guide rails	193
1.18	Cleaning water drainage hoses	196
1.19	Assembly overview – assembly frame and trim	199
1.20	Removing and installing assembly frame	200
1.21	Removing and installing trim	208
1.22	Installing trim panel	216
63	Bumpers	218
1	Front bumper cover	218
1.1	Tools	218
1.2	Repairing front bumper cover	218
1.3	Number plate carrier	219
1.4	Front bumper carrier and lateral guides	220



2	Front bumper cover, Polo	221
2.1	Front bumper cover	221
2.2	Front bumper cover, Polo Blue Motion	227
2.3	Front bumper cover, Cross Polo	233
2.4	Front bumper cover, Polo »GTI«	239
2.5	Front bumper cover, Polo »R-Line«	246
3	Rear bumper cover	251
3.1	Tools	251
3.2	Repairing rear bumper cover	251
3.3	Installing brackets for parking aid system	251
3.4	Number plate carrier	257
3.5	Rear bumper carrier and subassemblies	258
4	Rear bumper cover, Polo	259
4.1	Rear bumper cover	259
4.2	Rear bumper cover, Polo Blue Motion	262
4.3	Rear bumper cover, Cross Polo	266
4.4	Rear bumper cover, Polo GTI, Blue GT	270
4.5	Rear bumper cover - Polo »R-Line«	273
5	Towing bracket	278
5.1	Assembly overview - towing bracket	278
64 - Glazing		279
1	Flush bonded windows	279
1.1	Tools	279
1.2	Materials	280
1.3	Assembly overview - windscreen	281
1.4	Removing windscreen	282
1.5	Installing windscreen	283
1.6	Assembly overview - rear window	283
1.7	Removing undamaged rear window	285
1.8	Removing broken rear window	286
1.9	Installing rear window	287
1.10	Assembly overview - side window (2-door model)	287
1.11	Removing undamaged side window (2-door model)	288
1.12	Assembly overview - side window (4-door model)	289
1.13	Removing undamaged side window (4-door model)	291
1.14	Removing broken side window	292
1.15	Installing side window	292
1.16	Preparing old undamaged window for glazing	293
1.17	Preparing new window without precoating for glazing	293
1.18	Preparing body flange for glazing	294
1.19	Fitting instructions	295
1.20	Minimum curing period	295
1.21	Touching up paint damage	296
1.22	Cleaning in the event of dirt caused by adhesive sealant	296
2	Front door window	297
2.1	Tools	297
2.2	Assembly overview - front door window	298
2.3	Removing and installing door window	298
2.4	Removing and installing window regulator motor	303
2.5	Installing and removing window regulators	305
2.6	Removing and installing window channel	307
3	Rear door window	310
3.1	Tools	310
3.2	Assembly overview - rear door window	311



3.3	Removing and installing door window	311
3.4	Removing and installing window regulator motor	315
3.5	Removing and installing manual drive	317
3.6	Removing and installing window crank	318
3.7	Installing and removing window regulators	319
3.8	Removing and installing window channel	320
66	- Exterior equipment	323
1	Wheel housing liner	323
1.1	Tools	323
1.2	Front wheel housing liner	323
1.3	Rear wheel housing liner	326
2	Exterior mirror	331
2.1	Tools	331
2.2	Assembly overview - exterior mirror	331
2.3	Removing and installing mirror glass	332
2.4	Removing and installing adjustment unit with motor	334
2.5	Removing and installing mirror housing	335
2.6	Removing and installing trim	336
2.7	Removing and installing assembly bracket with side turn signal repeater	337
2.8	Removing and installing exterior mirror (manual operation)	338
2.9	Removing and installing exterior mirror (electric operation)	342
3	Radiator grille	347
3.1	Tools	347
3.2	Removing and installing radiator grille	347
3.3	Removing and installing emblem	350
3.4	Removing and installing emblem on Polo Blue Motion	354
3.5	Assembly overview - radiator grille, Polo »GTI«	358
4	Mouldings and trims	359
4.1	Tool	359
4.2	Removing and installing A-pillar trim	359
4.3	B-pillar trim	361
4.4	Wing trim panel	364
4.5	Water deflector, Polo Blue Motion, Blue GT	365
4.6	Removing and installing cover strip	368
5	Removing and installing roof railing	370
5.1	Tools	370
5.2	Roof railing	370
6	Roof spoiler	373
6.1	Tools	373
6.2	Materials	374
6.3	Roof spoiler, Polo Blue Motion	374
6.4	Roof spoiler, Polo »GTI«	383
6.5	Roof spoiler, Polo Blue GT	388
6.6	Roof spoiler, Polo "WRC"	392
7	Special add-on parts	397
7.1	Assembly overview - Polo Blue Motion	397
7.2	Assembly overview - Cross Polo	399
7.3	Assembly overview - Polo »GTI«	400
7.4	Assembly overview - Polo »R-Line«	401
7.5	Assembly overview - Polo »WRC«	402
7.6	Safety requirements	402
7.7	Tools	403
7.8	Materials	404
7.9	Side member extension, Polo Blue Motion, Blue GT	404



7.10	Side member extension, Cross Polo	411
7.11	Side member extension, Polo »GTI«	419
7.12	Front wheel housing trim, Cross Polo	423
7.13	Rear wheel housing trim, Cross Polo	426
7.14	Front door cover, Cross Polo	428
7.15	Rear door cover, Cross Polo	431
7.16	Wheel arch trim, rear door, Cross Polo	434
7.17	Preparing attachment for bonding	435
7.18	Preparing body component for bonding	435
7.19	Fitting instructions	436
7.20	Minimum curing period	436
7.21	Touching up paint damage	437
7.22	Cleaning in the event of dirt caused by adhesive sealant	437
7.23	Cleaning guidelines	437
8	Lettering and emblems	438
8.1	Fitting instructions	438
8.2	Dimensions - lettering and emblems on rear lid	439
8.3	Removing and installing emblems	446
8.4	Side lettering	448
9	Scuff protection film	452
9.1	Renewing scuff protection film, Polo »GTI«	452