



Contents

| | |
|--|-----------|
| 00 - Technical data | 1 |
| 1 Vehicle identification data | 1 |
| 1.1 Vehicle identification number | 1 |
| 1.2 Identification plate | 2 |
| 1.3 Vehicle data sticker | 3 |
| 2 Safety instructions | 4 |
| 3 Moulded foam elements | 5 |
| 4 Galvanized body parts, high- and higher-strength and hot-formed body panels | 7 |
| 4.1 Body | 7 |
| 4.2 2-door | 9 |
| 4.3 4-door | 12 |
| 5 Laser welding | 15 |
| 6 Body panel gaps/shut lines | 16 |
| 6.1 Body - front | 16 |
| 6.2 Body - centre | 17 |
| 6.3 Body - rear | 19 |
| 7 Body dimensions | 20 |
| 7.1 Body - front | 20 |
| 7.2 Body - centre | 23 |
| 7.3 Body - rear | 33 |
| 7.4 Floor group - front | 36 |
| 7.5 Floor group - centre | 38 |
| 7.6 Floor group - rear | 39 |
| 8 Tools | 40 |
| 9 Alignment jig | 41 |
| 9.1 Overview | 41 |
| 10 Portal gauge | 42 |
| 10.1 2-door | 42 |
| 10.2 4-door | 43 |
| 50 - Body - front | 45 |
| 1 Renewing right engine mounting bracket | 45 |
| 1.1 Tools | 45 |
| 1.2 Removing | 45 |
| 1.3 Installing | 47 |
| 2 Renewing retaining bracket for subframe | 49 |
| 2.1 Tools | 49 |
| 2.2 Removing | 49 |
| 2.3 Installing | 50 |
| 3 Renewing front bumper bracket | 53 |
| 3.1 Tools | 54 |
| 3.2 Removing | 54 |
| 3.3 Installing | 55 |
| 4 Renewing upper wheel housing longitudinal member | 57 |
| 4.1 Tools | 58 |
| 4.2 Removing | 58 |
| 4.3 Installing | 60 |
| 5 Renewing front wheel housing | 65 |
| 5.1 Tools | 66 |
| 5.2 Removing | 66 |
| 5.3 Installing | 67 |



| | | |
|---------------------------|--|------------|
| 6 | Repairing threads for securing subframe | 69 |
| 6.1 | Contents of thread repair kit | 71 |
| 6.2 | Repairing threads | 71 |
| 7 | Renewing front left longitudinal member | 75 |
| 7.1 | Tools | 76 |
| 7.2 | Removing | 76 |
| 7.3 | Installing | 78 |
| 8 | Renewing front left longitudinal member - part section | 82 |
| 8.1 | Tools | 83 |
| 8.2 | Removing | 83 |
| 8.3 | Installing | 84 |
| 9 | Renewing front right longitudinal member | 87 |
| 9.1 | Tools | 88 |
| 9.2 | Removing | 88 |
| 9.3 | Installing | 90 |
| 10 | Renewing front right longitudinal member - part section | 95 |
| 10.1 | Tools | 96 |
| 10.2 | Removing | 96 |
| 10.3 | Installing | 97 |
| 51 - Body - centre | | 100 |
| 1 | Renewing roof | 100 |
| 1.1 | Tools | 101 |
| 1.2 | Removing | 102 |
| 1.3 | Installing | 105 |
| 2 | Renewing front roof cross member | 116 |
| 2.1 | Tools | 116 |
| 2.2 | Removing | 116 |
| 2.3 | Installing | 118 |
| 3 | Renewing roof reinforcement | 120 |
| 3.1 | Tools | 120 |
| 3.2 | Removing | 120 |
| 3.3 | Installing | 122 |
| 4 | Renewing rear roof cross member | 125 |
| 4.1 | Tools | 125 |
| 4.2 | Removing | 125 |
| 4.3 | Installing | 127 |
| 5 | Renewing A-pillar | 130 |
| 5.1 | Tools | 131 |
| 5.2 | Removing | 131 |
| 5.3 | Installing | 133 |
| 6 | Renewing A-pillar reinforcement | 141 |
| 6.1 | Tools | 142 |
| 6.2 | Removing | 142 |
| 6.3 | Installing | 145 |
| 7 | Renewing B-pillar – 4-door | 151 |
| 7.1 | Tools | 152 |
| 7.2 | Removing | 152 |
| 7.3 | Installing | 153 |
| 8 | Renewing B-pillar reinforcement – 4-door | 161 |
| 8.1 | Tools | 162 |
| 8.2 | Removing | 162 |
| 8.3 | Installing | 165 |



| | | |
|-------------------------|--|------------|
| 9 | Renewing B-pillar reinforcement – 2-door | 175 |
| 9.1 | Tools | 176 |
| 9.2 | Removing | 176 |
| 9.3 | Installing | 178 |
| 10 | Renewing outer side member – 4-door | 190 |
| 10.1 | Tools | 191 |
| 10.2 | Removing | 191 |
| 10.3 | Installing | 193 |
| 11 | Renewing outer side member – 2-door | 202 |
| 11.1 | Tools | 203 |
| 11.2 | Removing | 204 |
| 11.3 | Installing | 205 |
| 12 | Renewing gusset plate | 211 |
| 12.1 | Tools | 211 |
| 12.2 | Removing | 211 |
| 12.3 | Installing | 212 |
| 13 | Renewing seat cross member | 215 |
| 13.1 | Tools | 215 |
| 13.2 | Removing | 215 |
| 13.3 | Installing | 217 |
| 53 - Body - rear | | 220 |
| 1 | Renewing rear cross panel | 220 |
| 1.1 | Tools | 221 |
| 1.2 | Removing | 221 |
| 1.3 | Installing | 222 |
| 2 | Renewing tail light mounting | 225 |
| 2.1 | Tools | 226 |
| 2.2 | Removing | 226 |
| 2.3 | Installing | 227 |
| 3 | Renewing cross panel member | 230 |
| 3.1 | Tools | 231 |
| 3.2 | Removing | 231 |
| 3.3 | Installing | 232 |
| 4 | Renewing luggage compartment floor | 235 |
| 4.1 | Tools | 236 |
| 4.2 | Removing | 236 |
| 4.3 | Installing | 237 |
| 5 | Renewing rear longitudinal member - part section | 240 |
| 5.1 | Tools | 241 |
| 5.2 | Removing | 241 |
| 5.3 | Installing | 243 |
| 6 | Renewing side panel, part section – 4-door | 246 |
| 6.1 | Tools | 247 |
| 6.2 | Removing | 247 |
| 6.3 | Installing | 249 |
| 7 | Renewing side panel – 2-door | 257 |
| 7.1 | Tools | 258 |
| 7.2 | Removing | 258 |
| 7.3 | Installing | 260 |
| 8 | Renewing outer wheel housing liner - part section | 269 |
| 8.1 | Tools | 270 |
| 8.2 | Removing | 270 |
| 8.3 | Installing | 271 |