



Contents

00 - Technical data	1
1 Gearbox identification	1
1.1 Location on gearbox	1
1.2 Identification codes, assembly allocation, capacities, Polo 2002 ▶	1
1.3 Identification codes, assembly allocation, capacities, Polo 2010 ▶	4
2 Overview - power transmission	7
3 General repair notes	9
3.1 Gearbox	9
3.2 Seals and sealing rings	9
3.3 Sealant	9
3.4 Locking devices	10
3.5 Nuts and bolts	10
3.6 Bearings	10
3.7 Shims	10
3.8 Synchro-rings	11
3.9 Gear wheels	11
3.10 Synchromeshed gears	11
3.11 Clutch	11
30 - Clutch	12
1 Repairing clutch mechanism	12
1.1 Overview - clutch actuation	12
1.2 Assembly overview - pedal cluster, Polo 2002 ▶	13
1.3 Assembly overview - pedal cluster, Polo 2010 ▶	14
1.4 Distinguishing between clutch pedal switches F36	16
1.5 Removing and installing clutch pedal switch F36 with rectangular housing	16
1.6 Removing and installing clutch pedal switch F36 with round housing	17
1.7 Removing and installing over-centre spring, Polo 2002 ▶	18
1.8 Removing and installing mounting bracket, Polo 2002 ▶	20
1.9 Removing and installing mounting bracket with master cylinder, Polo 2010 ▶	22
1.10 Removing and installing clutch pedal, Polo 2002 ▶	26
1.11 Removing and installing clutch pedal with over-centre spring, Polo 2010 ▶ LHD	28
1.12 Removing and installing clutch pedal with extension spring, Polo 2010 ▶ LHD	31
1.13 Removing and installing clutch pedal, Polo 2010 ▶ RHD	33
1.14 Assembly overview - hydraulics (LHD)	36
1.15 Assembly overview - hydraulics (RHD)	39
1.16 Removing and installing master cylinder, Polo 2002 ▶	41
1.17 Removing and installing master cylinder, Polo 2010 ▶	43
1.18 Removing and installing slave cylinder	44
1.19 Bleeding clutch system	45
2 Repairing clutch release mechanism	47
3 Repairing clutch	49
34 - Controls, housing	52
1 Repairing selector mechanism	52
1.1 Installation position of selector mechanism	52
1.2 Overview of selector mechanism	53
1.3 Assembly overview - selector lever knob and cover, Polo 2002 ▶	54
1.4 Removing and installing gear knob and cover, Polo 2002 ▶	54
1.5 Assembly overview - selector lever knob and cover, Polo 2010 ▶	56
1.6 Removing and installing gear knob and cover, Polo 2010 ▶	57
1.7 Repairing gear lever and selector housing (through 05.06)	58



1.8	Repairing gear lever and selector housing (from 06.06)	60
1.9	Assembly overview - removing and installing selector cables	62
1.10	Removing and installing selector mechanism	66
1.11	Adjusting selector mechanism	70
2	Removing and installing gearbox, Polo 2002 ▶	74
2.1	Removing gearbox	75
2.2	Installing gearbox	81
3	Removing and installing gearbox, Polo 2010 ▶	89
3.1	Removing gearbox	91
3.2	Installing gearbox	100
4	Transporting gearbox	109
5	Checking gear oil	110
6	Dismantling and assembling gearbox	111
6.1	Overview - gearbox	111
6.2	Assembly overview	112
6.3	Assembly overview - removing and installing cover for gearbox housing and 5th gear	113
6.4	Assembly overview - removing and installing gearbox housing and selector mechanism	114
6.5	Assembly overview - removing and installing input shaft, output shaft, differential and selector forks	115
6.6	Assembly sequence - removing and installing cover for gearbox housing and 5th gear	116
6.7	Assembly sequence - Dismantling and assembling gearbox completely	121
7	Repairing gearbox housing and clutch housing	135
8	Dismantling and assembling selector mechanism on gearbox side (selector shaft can be removed from selector mechanism cover)	141
9	Dismantling and assembling selector mechanism on gearbox side (selector shaft cannot be removed from selector mechanism cover)	146
10	Dismantling and assembling selector forks	148
35 - Gears, shafts		153
1	Input shaft	153
1.1	Dismantling and assembling input shaft	153
1.2	Adjusting input shaft	160
2	Output shaft	165
2.1	Dismantling and assembling output shaft	165
2.2	Adjusting output shaft	177
3	Reverse shaft	181
3.1	Dismantling and assembling reverse shaft	181
39 - Final drive - differential		184
1	Renewing flange shaft oil seals with gearbox installed	184
1.1	Renewing oil seal for left flange shaft	184
1.2	Distinguishing seals for right flange shaft	186
1.3	Renewing seal (two-part seal and sleeve for right flange shaft)	186
1.4	Renewing seal and sleeve together (one-piece seal and sleeve for right flange shaft)	189
2	Adjustment overview	192
3	Differential	193
3.1	Dismantling and assembling differential	193
3.2	Adjusting differential	201