



Contents

00 - Technical data	1
1 General repair notes	1
1.1 Gearbox	1
1.2 Torque converter	1
1.3 ATF	1
1.4 Automatic gearbox control unit J217 with fuzzy logic	1
1.5 Control units in vehicle	1
1.6 Information on „09G gearbox“	1
1.7 Tools	2
1.8 Gearbox	2
1.9 Gaskets, seals and oil	2
1.10 Nuts and bolts	2
1.11 Electrical components	3
1.12 Guided fault finding, vehicle self-diagnosis and testing	3
2 Gearbox identification	4
2.1 Gearbox codes	4
3 Identification codes, engine allocation, Polo 2010 >	5
4 Capacities	6
4.1 Planetary gearbox and final drive	6
32 - Torque converter	7
1 Torque converter	7
1.1 Identification of torque converter	7
1.2 Draining torque converter	7
1.3 Removing and installing torque converter oil seal	7
1.4 Installing torque converter	8
37 - Controls, housing	9
1 Connecting »tester«	9
1.1 Connecting vehicle diagnosis, testing and information system VAS 5051	9
2 Electrical and electronic components and their locations	10
3 Multifunction switch F125	14
3.1 Removing multifunction switch F125	14
3.2 Installing multifunction switch F125	15
3.3 Adjusting multifunction switch F125	16
4 Emergency release of selector lever	18
5 Removing and installing selector lever handle	19
6 Selector mechanism	21
6.1 Assembly overview - selector mechanism	21
6.2 Removing and installing selector lever and selector mechanism with selector lever cable	22
6.3 Checking selector lever cable	23
6.4 Adjusting selector lever cable	24
7 Checking selector mechanism	26
7.1 Selector lever in „P“ position and ignition switched on	26
7.2 Selector lever in „N“ position and ignition switched on	26
7.3 Selector lever in position „Tiptronic“	26
7.4 Ignition and light switched on	26
7.5 Selector lever position display	26
8 Removing and installing gearbox; 1.6 l - 77 kW engine	27
8.1 Specified torques	34



9	Transporting gearbox	36
10	Checking ATF level and topping up	37
10.1	Checking ATF level	38
10.2	Topping up ATF	39
10.3	Draining and filling ATF	39
11	ATF cooler	41
11.1	Assembly overview - ATF cooler	41
38 - Gears, control		42
1	Renewing oil seal for selector shaft	42
2	Removing and installing ATF pan	43
2.1	Removing	43
2.2	Installing	44
3	Removing and installing ATF strainer	46
3.1	Removing	46
3.2	Installing	46
4	Removing and installing valve body	47
4.1	Overview - valve chest	47
4.2	Removing valve body	49
4.3	Installing valve body	52
4.4	Wire routing, connectors, connections and retainer on valve body	54
4.5	Specified torques	56
5	Removing and installing wiring harness for solenoid valves and senders	57
5.1	Removing	57
5.2	Installing	57
5.3	Removing and installing gearbox input speed sender G182	57
5.4	Removing and installing gearbox output speed sender G195	58
39 - Final drive - differential		59
1	Renewing oil seals for flange shafts	59
1.1	Renewing oil seal for left flange shaft	59
1.2	Renewing seal for right flange shaft	60