



Contents

00 - Technical data	1
1 Technical data	1
1.1 Engine number	1
10 - Removing and installing engine	2
1 Removing and installing engine	2
1.1 Removing	3
1.2 Installing	7
1.3 Specified torques	8
13 - Crankshaft group	10
1 Dismantling and assembling engine	10
1.1 Assembly overview - belt drive	10
1.2 Assembly overview - chain drive	11
1.3 Removing and installing poly V-belt	14
1.4 Removing and installing valve timing housing	15
2 Cylinder block, seals	20
2.1 Assembly overview	20
2.2 Renewing crankshaft oil seal - belt pulley end	21
2.3 Renewing crankshaft oil seal - flywheel end	23
15 - Cylinder head, valve gear	26
1 Cylinder head	26
1.1 Assembly overview	26
1.2 Removing and installing cylinder head	28
1.3 Checking valve timing	31
1.4 Removing and installing timing chain and drive chain for oil pump	32
1.5 Adjusting valve timing	34
1.6 Checking compression	37
2 Valve gear	40
2.1 Assembly overview	40
2.2 Checking camshaft axial clearance	42
2.3 Reworking valve seats	42
2.4 Checking valve guides	44
2.5 Renewing valve stem seals	44
17 - Lubrication	48
1 Parts of lubrication system	48
1.1 Engine oil	48
1.2 Assembly overview	48
1.3 Assembly overview - oil filter	51
1.4 Removing and installing oil filter element	51
1.5 Removing and installing oil sump	52
1.6 Checking oil pressure and oil pressure switch	53
19 - Cooling	55
1 Parts of cooling system	55
1.1 Assembly overview - parts of cooling system, body side	55
1.2 Assembly overview - parts of cooling system, engine side	57
1.3 Coolant hose schematic diagram	58
1.4 Draining and filling coolant	59
1.5 Removing and installing radiator	61
1.6 Removing and installing coolant pump	63



20 - Fuel supply system	65
1 Parts of fuel supply system	65
1.1 Assembly overview - fuel tank with attachments	65
1.2 Safety precautions when working on fuel supply system	68
1.3 Rules for cleanliness	68
1.4 Removing and installing fuel delivery unit	69
1.5 Removing and installing fuel gauge sender G	70
1.6 Removing and installing fuel tank	71
1.7 Crash fuel shut-off	73
1.8 Checking fuel pump	73
1.9 Bleeding fuel system	81
2 Activated charcoal filter system	84
2.1 Assembly overview	84
2.2 Checking fuel tank breather	84
3 Electronic power control (EPC)	86
3.1 Assembly overview	86
24 - Mixture preparation - injection	87
1 Injection system	87
1.1 Assembly overview - parts of injection system	87
1.2 Assembly overview - intake manifold	90
1.3 Assembly overview - fuel rail with injectors	91
1.4 Assembly overview - air filter	91
1.5 Removing and installing air filter	92
1.6 Cleaning throttle valve module J338	93
1.7 Checking injectors	94
1.8 Check non-return valve for crankcase breather	97
1.9 Safety precautions	99
1.10 Rules for cleanliness	100
1.11 Technical data	100
2 Engine control unit J623	101
2.1 Removing and installing engine control unit J623	101
2.2 Removing and installing anti-theft engine control unit J623	101
26 - Exhaust system	103
1 Parts of the exhaust system	103
1.1 Assembly overview - front exhaust system with attachments	103
1.2 Assembly overview - silencers with mountings	105
28 - Ignition system	106
1 Ignition system	106
1.1 Assembly overview - parts of ignition system	106
1.2 Removing and installing ignition coils with output stage	107
1.3 Safety precautions	108
1.4 Test data, spark plugs	109