



Contents

00 - Technical data	1
1 Technical data	1
1.1 Engine number	1
10 - Removing and installing engine	2
1 Removing and installing engine	2
1.1 Removing	3
1.2 Installing	7
1.3 Specified torques	8
13 - Crankshaft group	10
1 Dismantling and assembling engine	10
1.1 Assembly overview - belt drive	10
1.2 Assembly overview - chain drive	11
1.3 Removing and installing poly V-belt	14
1.4 Removing and installing valve timing housing	15
2 Cylinder block, seals	21
2.1 Assembly overview	21
2.2 Renewing crankshaft oil seal - belt pulley end	22
2.3 Renewing crankshaft oil seal - flywheel end	24
15 - Cylinder head, valve gear	27
1 Cylinder head	27
1.1 Assembly overview	27
1.2 Removing and installing cylinder head	30
1.3 Removing and installing camshaft housing	32
1.4 Checking valve timing	36
1.5 Removing and installing timing chain and drive chain for oil pump	38
1.6 Adjusting valve timing	40
1.7 Checking compression	42
2 Valve gear	44
2.1 Assembly overview	44
2.2 Checking camshaft axial clearance	46
2.3 Reworking valve seats	47
2.4 Checking valve guides	48
2.5 Renewing valve stem seals	48
17 - Lubrication	52
1 Parts of lubrication system	52
1.1 Engine oil	52
1.2 Assembly overview	52
1.3 Assembly overview - oil filter	55
1.4 Removing and installing oil filter element	55
1.5 Removing and installing oil sump	56
1.6 Checking oil pressure and oil pressure switch	57
19 - Cooling	59
1 Parts of cooling system	59
1.1 Assembly overview - parts of cooling system, body side	59
1.2 Assembly overview - parts of cooling system, engine side	61
1.3 Coolant hose schematic diagram	62
1.4 Draining and filling coolant	63
1.5 Removing and installing radiator	65



1.6	Removing and installing coolant pump	67
20 - Fuel supply system	69
1	Parts of fuel supply system	69
1.1	Assembly overview - fuel tank with attachments	69
1.2	Safety precautions when working on fuel supply system	72
1.3	Rules for cleanliness	73
1.4	Removing and installing fuel delivery unit	73
1.5	Removing and installing fuel gauge sender G	75
1.6	Removing and installing fuel tank	75
1.7	Crash fuel shut-off	77
1.8	Checking fuel pump	77
1.9	Bleeding fuel system	85
2	Activated charcoal filter system	88
2.1	Assembly overview	88
2.2	Checking fuel tank breather	89
3	Electronic power control (EPC)	90
3.1	Assembly overview	90
24 - Mixture preparation - injection	91
1	Injection system	91
1.1	Assembly overview - parts of injection system	91
1.2	Assembly overview - intake manifold	94
1.3	Assembly overview - fuel rail with injectors	95
1.4	Assembly overview - air filter	95
1.5	Removing and installing air filter	96
1.6	Cleaning throttle valve module J338	97
1.7	Checking injectors	98
1.8	Safety precautions	103
1.9	Rules for cleanliness	104
1.10	Technical data	105
2	Engine control unit J623	106
2.1	Removing and installing engine control unit J623	106
2.2	Vehicles with anti-theft secured engine control unit J623	106
26 - Exhaust system	108
1	Parts of the exhaust system	108
1.1	Assembly overview - front exhaust system with attachments	108
1.2	Assembly overview - silencers with mountings	109
28 - Ignition system	111
1	Ignition system	111
1.1	Assembly overview - parts of ignition system	111
1.2	Removing and installing ignition coils with output stage	112
1.3	Safety precautions	113
1.4	Test data, spark plugs	114