



Contents

00 - Technical data	1
1 Technical data	1
1.1 Engine number	1
1.2 Engine data	1
10 - Removing and installing engine	2
1 Removing and installing engine	2
1.1 Removing engine	4
1.2 Securing engine to assembly stand	6
1.3 Installing engine	6
1.4 Specified torques	9
1.5 Assembly mountings	9
1.6 Additional notes and assembly work for vehicles with air conditioner	10
13 - Crankshaft group	11
1 Dismantling and assembling engine	11
1.1 Assembly overview - parts I and II	11
1.2 Part I Assembly overview - belt drive	13
1.3 Part II: Assembly overview - chain drive system	14
1.4 Removing and installing poly V-belt	16
1.5 Removing and installing valve timing housing	17
2 Cylinder block, sealing flange	21
2.1 Assembly overview	21
2.2 Renewing crankshaft oil seal - belt pulley end	22
2.3 Poly V-belt pulley securing bolt tightening procedure	24
2.4 Characteristics of the sealing flange and the assembly device T10134	26
2.5 Renewing crankshaft sealing flange - flywheel end (assembly tool T10134)	27
3 Removing and installing crankshaft	35
3.1 Exploded view crankshaft	35
3.2 Crankshaft bearings	36
3.3 Crankshaft dimensions	36
4 Pistons and conrods	37
4.1 Assembly overview	37
4.2 Checking piston	38
4.3 Checking cylinder bores	39
4.4 Piston and cylinder dimensions	39
15 - Cylinder head, valve gear	40
1 Cylinder head	40
1.1 Assembly overview	40
1.2 Checking valve timing	43
1.3 Adjusting valve timing	44
1.4 Removing and installing timing chain and chain drive for oil pump	48
1.5 Removing and installing camshaft housing	56
1.6 Removing and installing cylinder head	60
1.7 Checking compression	63
2 Valve gear	65
2.1 Assembly overview	65
2.2 Checking camshaft axial clearance	67
2.3 Reworking valve seats	67
2.4 Checking valve guides	68
2.5 Renewing valve stem seals	69



17 - Lubrication	71
1 Parts of lubrication system	71
1.1 Engine oil	71
1.2 Assembly overview	71
1.3 Removing and installing sump	73
1.4 Removing and installing oil pump	75
1.5 Checking oil pressure and oil pressure switch	77
19 - Cooling	80
1 Parts of cooling system	80
1.1 Assembly overview - parts of cooling system, body side	80
1.2 Assembly overview - parts of cooling system, engine side	82
1.3 Coolant hose schematic diagram	84
1.4 Draining and filling coolant	85
1.5 Removing and installing radiator	87
1.6 Removing and installing coolant pump	88
20 - Fuel supply system	91
1 Parts of fuel supply system	91
1.1 Assembly overview - fuel tank with attachments	91
1.2 Safety precautions when working on fuel supply system	94
1.3 Rules for cleanliness	94
1.4 Removing and installing fuel delivery unit	94
1.5 Removing and installing fuel gauge sender G	96
1.6 Removing and installing fuel tank	97
1.7 Assembly overview - fuel filter with attachments	99
1.8 Removing and installing fuel filter	100
1.9 Crash fuel shut-off	101
1.10 Checking fuel pump	101
1.11 Bleeding fuel system	106
2 Electronic power control (EPC)	109
2.1 Assembly overview	109
3 Activated charcoal filter system	110
3.1 Assembly overview	110
3.2 Checking fuel tank breather	111
24 - Mixture preparation - injection	112
1 Injection system	112
1.1 General notes on injection	112
1.2 Assembly overview - intake manifold	112
1.3 Assembly overview - fuel rail with injectors	114
1.4 Removing and installing injectors	114
1.5 Assembly overview - air filter	115
1.6 Removing and installing air filter housing	117
1.7 Cleaning throttle valve module J338	118
1.8 Safety precautions	119
1.9 Rules for cleanliness	120
1.10 Technical data	120
2 Checking components	121
2.1 Checking injectors for leaks and quantity injected	121
2.2 Checking fuel pressure regulator and holding pressure	123
3 Engine control unit J623	126
3.1 Removing and installing engine control unit J623	126
3.2 Vehicles with anti-theft secured engine control unit J623	126



26 - Exhaust system	128
1 Parts of the exhaust system	128
1.1 Assembly overview - catalytic converters and attachments	128
1.2 Assembly overview - silencers with mountings	130
28 - Ignition system	131
1 Ignition system	131
1.1 Assembly overview - ignition system	131
1.2 Removing and installing ignition coils with output stage	132
1.3 Safety precautions	133
1.4 Spark plug test data	134