



Contents

00 - Technical data	1
1 Technical data	1
1.1 Engine number	1
1.2 Engine data	1
01 - Self-diagnosis	2
1 Read event memory	2
10 - Removing and installing engine	3
1 Removing and installing engine	3
1.1 Removing	4
1.2 Installing	7
1.3 Specified torques	8
1.4 Additional information and assembly work for vehicles with air conditioner	9
13 - Crankshaft group	11
1 Dismantling and assembling engine	11
1.1 Assembly overview - parts I and II	11
1.2 Assembly overview - part I, belt drive	13
1.3 Assembly overview - part II, chain drive system	14
1.4 Removing and installing poly-V belt	16
1.5 Removing and installing valve timing housing (timing case)	17
1.6 Removing and installing bracket for ancillaries	22
2 Cylinder block, sealing flange	24
2.1 Assembly overview	24
2.2 Removing and installing engine speed sender G28	25
2.3 Renewing crankshaft oil seal, pulley end	26
2.4 Removing and installing crankshaft pulley	28
2.5 Renewing crankshaft sealing flange, flywheel end	31
3 Crankshaft	40
3.1 Assembly overview	40
3.2 Crankshaft dimensions	41
4 Pistons and conrods	42
4.1 Assembly overview	42
4.2 Checking piston	43
4.3 Checking cylinder bores	44
4.4 Piston and cylinder dimensions	44
15 - Cylinder head, valve gear	45
1 Cylinder head	45
1.1 Engine differences	45
1.2 Assembly overview - cylinder head	46
1.3 Checking valve timing	50
1.4 Adjusting valve timing	55
1.5 Removing and installing timing chain and chain drive for oil pump	65
1.6 Removing and installing camshaft housing	72
1.7 Removing and installing cylinder head	78
1.8 Checking compression	83
2 Valve gear	85
2.1 Assembly overview	85
2.2 Checking camshaft axial clearance	87
2.3 Reworking valve seats	87



2.4	Checking valve guides	88
2.5	Renewing valve stem seals	89
17	- Lubrication	92
1	Parts of lubrication system	92
1.1	Engine oil:	92
1.2	Assembly overview	92
1.3	Removing and installing sump	94
1.4	Removing and installing oil pump	96
1.5	Checking oil pressure and oil pressure switch	98
19	- Cooling	101
1	Parts of cooling system	101
1.1	Assembly overview - parts of cooling system, body side	101
1.2	Assembly overview - parts of cooling system, engine side	103
1.3	Coolant hose connection diagram	106
1.4	Draining and adding coolant	107
1.5	Checking cooling system for leaks	110
1.6	Removing and installing cowling with radiator fan V7	112
1.7	Removing and installing radiator fan V7	113
1.8	Removing and installing radiator	114
1.9	Removing and installing coolant pump	116
20	- Fuel supply system	120
1	Parts of fuel supply system	120
1.1	Assembly overview - fuel tank with attachments	120
1.2	Safety regulations for working on fuel supply	123
1.3	Rules for cleanliness	123
1.4	Emptying fuel tank	124
1.5	Removing and installing fuel delivery unit	128
1.6	Removing and installing external fuel gauge sender G with 2 cable connections	131
1.7	Removing and installing interior fuel gauge sender G	132
1.8	Removing and installing fuel tank	133
1.9	Removing and installing fuel filter	135
1.10	Crash fuel shut-off	136
1.11	Checking fuel pump	136
1.12	Bleeding fuel system	146
1.13	Parts of fuel supply system (LPG)	148
2	Electronic power control (EPC)	164
2.1	Assembly overview	164
3	Activated charcoal filter system	165
3.1	Assembly overview	165
3.2	Checking fuel tank breather	166
24	- Mixture preparation - injection	167
1	Injection system	167
1.1	General notes on injection	167
1.2	Assembly overview - intake manifold	167
1.3	Assembly overview - fuel rail with injectors	169
1.4	Removing and installing injectors	169
1.5	Fuel rail, removing and installing gas rail	170
1.6	Removing and installing gas injectors	171
1.7	Removing and installing gas rail sensor G401	172
1.8	Assembly overview - air filter	173
1.9	Removing and installing air filter housing	174
1.10	Cleaning throttle valve module J338	175



1.11	Safety precautions	176
1.12	Rules for cleanliness	177
1.13	Technical data	177
1.14	Renewing filter for LPG system	177
1.15	Removing and installing vaporiser on vehicles which can be operated with liquid gas	186
2	Checking components	190
2.1	Checking injectors for leaks and quantity injected	190
3	Engine control unit J623	193
3.1	Removing and installing engine (motor) control unit J623	193
3.2	Vehicles with anti-theft secured engine control unit J623	193
4	Gas mode control unit J659	195
4.1	Removing and installing gas mode control unit J659	195
4.2	Removing holder for gas mode control unit J659	195
26	Exhaust system	197
1	Parts of the exhaust system	197
1.1	Assembly overview - catalytic converters and attachments	197
1.2	Assembly overview - silencers with mountings, hatchback	199
1.3	Separating front and rear silencers	199
28	Ignition system	202
1	Ignition system	202
1.1	Assembly overview - ignition system	202
1.2	Removing and installing ignition coils with output stage	203
1.3	Safety precautions	205
1.4	Test data, spark plugs	206