



Contents

00 - Technical data	1
1 Engine number, engine data	1
2 Safety precautions	2
2.1 Safety precautions when working on fuel supply system	2
2.2 Safety precautions when working on ignition system	2
2.3 Releasing pressure in high-pressure area	3
3 General repair notes	5
3.1 Rules for cleanliness	5
3.2 Foreign objects in engine	5
10 - Removing and installing engine	6
1 Removing and installing engine	6
1.1 Removing engine	6
1.2 Separating engine and gearbox	15
1.3 Securing engine on engine and gearbox support	16
1.4 Installing engine	18
2 Assembly mountings	21
2.1 Assembly overview - assembly mountings	21
2.2 Removing and installing engine mounting	22
2.3 Removing and installing gearbox mounting	23
2.4 Removing and installing pendulum support	26
2.5 Supporting engine in installation position	26
3 Engine cover panel	29
3.1 Removing and installing engine cover panel	29
13 - Crankshaft group	30
1 Cylinder block (pulley end)	30
1.1 Assembly overview - poly V-belt drive	30
1.2 Assembly overview - sealing flange, pulley end	31
1.3 Removing and installing poly V-belt	32
1.4 Removing and installing tensioner for poly V-belt	34
1.5 Removing and installing bracket for ancillaries	34
1.6 Removing and installing vibration damper	35
1.7 Renewing crankshaft oil seal - belt pulley end	36
1.8 Removing and installing sealing flange on pulley end	38
2 Cylinder block, gearbox end	42
2.1 Assembly overview - cylinder block, gearbox end	42
2.2 Removing and installing flywheel	43
2.3 Removing and installing sealing flange on gearbox side	44
3 Crankshaft	47
3.1 Assembly overview - crankshaft	47
3.2 Crankshaft dimensions	49
3.3 Measuring axial clearance of crankshaft	49
3.4 Measuring radial clearance of crankshaft	50
3.5 Removing and installing drive chain sprocket	51
4 Pistons and conrods	54
4.1 Assembly overview - pistons and conrods	54
4.2 Removing and installing pistons	55
4.3 Checking piston and cylinder bore	57
4.4 Checking radial clearance of conrods	58
15 - Cylinder head, valve gear	60



1	Cylinder head	60
1.1	Assembly overview - cylinder head	60
1.2	Removing and installing cylinder head	62
1.3	Removing and installing cylinder head cover	68
1.4	Checking compression	70
1.5	Removing and installing vacuum pump	71
2	Toothed belt drive	73
2.1	Assembly overview - toothed belt	73
2.2	Removing and installing toothed belt	74
3	Valve gear	79
3.1	Assembly overview - valve gear	79
3.2	Measuring axial play of camshaft	81
3.3	Measuring radial play of camshaft	82
3.4	Removing and installing camshaft oil seal	83
3.5	Removing and installing camshaft adjuster	85
3.6	Removing and installing inlet camshaft control valve 1 N205	89
3.7	Removing and installing camshaft	90
3.8	Removing and installing valve stem seals	94
4	Inlet and exhaust valves	103
4.1	Checking valve guides	103
4.2	Checking valves	104
4.3	Valve dimensions	104
17	- Lubrication	105
1	Sump, oil pump	105
1.1	Assembly overview - sump, oil pump	105
1.2	Engine oil	106
1.3	Removing and installing sump	106
1.4	Removing and installing oil level and oil temperature sender G266	110
2	Engine oil cooler	111
2.1	Removing and installing engine oil cooler	111
3	Oil filter, oil pressure switch	113
3.1	Assembly overview - oil filter housing, oil pressure switch	113
3.2	Draining oil filter housing	114
3.3	Removing and installing oil filter housing	116
3.4	Removing and installing oil pressure switch F1	116
3.5	Checking oil pressure and oil pressure switch	118
4	Balancer shaft module	120
4.1	Assembly overview - balancer shaft module	120
4.2	Removing and installing balance shaft module	121
19	- Cooling	127
1	Cooling system, coolant	127
1.1	Coolant hose schematic diagram	127
1.2	Draining and filling coolant	128
1.3	Checking cooling system for leaks	133
2	Coolant pump, regulation of cooling system	135
2.1	Assembly overview - coolant pump, thermostat	135
2.2	Assembly overview - electric coolant pump	136
2.3	Removing and installing continued coolant circulation pump V51	136
2.4	Removing and installing coolant pump	137
2.5	Removing and installing thermostat	138
2.6	Removing and installing coolant temperature sender G62	139
2.7	Removing and installing coolant temperature sender at radiator outlet G83	140



3	Coolant pipes	142
3.1	Assembly overview - coolant pipes	142
3.2	Removing and installing coolant pipes	143
3.3	Removing and installing front right coolant pipe	145
4	Radiator, radiator fan	147
4.1	Assembly overview - radiator, radiator fan	147
4.2	Removing and installing radiator	148
4.3	Removing and installing radiator cowling with radiator fan	150
4.4	Removing and installing radiator fan	152
21	- Turbocharging/supercharging	153
1	Turbocharger	153
1.1	Assembly overview - turbocharger	153
1.2	Removing and installing turbocharger	156
1.3	Checking vacuum unit for turbocharger	161
1.4	Renewing vacuum unit for turbocharger	163
1.5	Adjusting vacuum unit for turbocharger	163
2	Charge air system	168
2.1	Schematic overview - charge air system	168
2.2	Assembly overview - charge air system	169
2.3	Assembly overview - charge-air hose connections	171
2.4	Removing and installing charge air cooler	172
2.5	Removing and installing charge pressure sender G31	173
2.6	Checking charge air system for leaks	173
24	- Mixture preparation - injection	176
1	Injection system	176
1.1	Overview of fitting locations - injection system	176
2	Air filter	185
2.1	Assembly overview - air filter housing	185
2.2	Removing and installing air filter housing	186
3	Intake manifold	188
3.1	Assembly overview - intake manifold	188
3.2	Assembly overview - intake manifold with fuel rail	190
3.3	Removing and installing intake manifold with fuel rail	191
3.4	Removing and installing throttle valve module J338	194
3.5	Cleaning throttle valve module	196
3.6	Removing and installing intake manifold flap motor V157	197
3.7	Checking intake manifold change-over	198
3.8	Checking double non-return valve	200
4	High-pressure pump	202
4.1	Assembly overview - high-pressure pump	202
4.2	Removing and installing high-pressure pump	203
5	Injectors	205
5.1	Removing and installing fuel rail	205
5.2	Removing and installing injectors	206
5.3	Renewing seals on injectors	209
5.4	Cleaning injectors	211
6	Senders and sensors	213
6.1	Assembly overview - actuator for structure-borne sound R214 and control unit for structure-borne sound J869	213
6.2	Removing and installing air mass meter G70	214
6.3	Removing and installing fuel pressure sender G247	214
6.4	Checking fuel pressure sender G247	216



7	Lambda probe	219
7.1	Assembly overview - Lambda probe	219
7.2	Removing and installing Lambda probe G39	219
7.3	Removing and installing Lambda probe after catalytic converter G130	221
8	Engine control unit	223
8.1	Removing and installing engine control unit J623	223
26 - Exhaust system		225
1	Exhaust pipes, silencers	225
1.1	Assembly overview - silencers	225
1.2	Separating exhaust pipes, silencers	226
1.3	Aligning exhaust system free of stress	227
1.4	Checking exhaust system for leaks	228
2	Emission control	229
2.1	Assembly overview - emission control	229
2.2	Removing and installing catalytic converter	230
3	Exhaust manifold	233
28 - Ignition system		234
1	Ignition system	234
1.1	Assembly overview - ignition system	234
1.2	Test data, spark plugs	235
1.3	Removing and installing ignition coils with output stage	236
1.4	Removing and installing knock sensor 1 G61	237
1.5	Removing and installing knock sensor 2 G66	238
1.6	Removing and installing Hall sender G40	239
1.7	Removing and installing engine speed sender G28	239