



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Technical data</b>	<b>1</b>
1.1 Engine number	1
1.2 Engine data	1
<b>10 - Removing and installing engine</b>	<b>3</b>
<b>1 Removing and installing engine</b>	<b>3</b>
1.1 Removing and installing engine cover panel	3
1.2 Removing engine	4
1.3 Separating engine from gearbox	12
1.4 Securing engine on engine and gearbox support	14
1.5 Installing engine	16
1.6 Notes on installing	18
1.7 Assembly mountings	20
1.8 Setting up support bracket	21
<b>13 - Crankshaft group</b>	<b>24</b>
<b>1 Removing and installing poly V-belt</b>	<b>24</b>
1.1 Assembly overview - poly V-belt drive without air conditioning compressor	24
1.2 Assembly overview - poly V-belt drive with tensioning element and air conditioner compressor	25
1.3 Removing and installing poly V-belt without air conditioner compressor	25
1.4 Removing and installing poly V-belt with tensioning element	26
1.5 Removing and installing tensioning element for poly V-belt	27
<b>2 Dismantling and assembling engine</b>	<b>31</b>
2.1 Assembly overview - ancillary bracket	31
2.2 Removing and installing ancillary bracket	31
2.3 Removing and installing vibration damper	33
2.4 Assembly overview - toothed belt drive	34
2.5 Removing and installing engine bracket	36
2.6 Assembly overview - crankcase	41
<b>3 Removing and installing sealing flange and flywheel</b>	<b>43</b>
3.1 Assembly overview - sealing flanges and flywheel	43
3.2 Removing and installing dual-mass flywheel	44
3.3 Renewing crankshaft sealing flange - flywheel end	46
3.4 Renewing crankshaft oil seal - pulley end	54
3.5 Removing and installing sealing flange - pulley end	55
<b>4 Removing and installing engine speed sender G28</b>	<b>58</b>
<b>5 Pistons and conrods</b>	<b>60</b>
5.1 Assembly overview - pistons and conrods	60
5.2 Measuring piston projection at „TDC“	64
5.3 Piston and cylinder dimensions	65
5.4 Measuring radial clearance of conrods	65
<b>6 Crankshaft</b>	<b>67</b>
6.1 Assembly overview - crankshaft	67
<b>15 - Cylinder head, valve gear</b>	<b>69</b>
<b>1 Cylinder head</b>	<b>69</b>
1.1 Assembly overview - cylinder head	69
1.2 Removing and installing Hall sender G40	71
1.3 Assembly overview - cylinder head cover	74
1.4 Removing and installing cylinder head cover	75



1.5	Removing and installing injector seal in cylinder head cover	79
1.6	Removing, installing and tensioning toothed belts	82
1.7	Removing and installing cylinder head	96
1.8	Removing and installing vacuum pump	110
1.9	Checking compression	110
<b>2</b>	<b>Valve gear</b>	<b>113</b>
2.1	Assembly overview - valve gear	113
2.2	Measuring axial clearance of camshaft	114
2.3	Measuring radial clearance of camshafts	115
2.4	Valves	116
2.5	Renewing valve stem seals with cylinder head removed	119
2.6	Removing and installing camshafts	122
2.7	Checking hydraulic compensation elements	129
2.8	Removing and installing camshaft oil seal	130
<b>17</b>	<b>Lubrication</b>	<b>132</b>
<b>1</b>	<b>Engine oil</b>	<b>132</b>
1.1	Oil capacities	132
1.2	Checking engine oil level	132
<b>2</b>	<b>Parts of lubrication system</b>	<b>133</b>
2.1	Assembly overview - oil pump, sump	133
2.2	Removing and installing oil sump	136
2.3	Removing and installing oil pump	140
<b>3</b>	<b>Oil filter bracket, oil pressure, engine oil cooler and oil supply line</b>	<b>141</b>
3.1	Assembly overview - oil filter bracket and engine oil cooler	141
3.2	Removing and installing oil filter bracket with engine oil cooler	143
3.3	Removing and installing engine oil cooler	146
3.4	Checking engine oil cooler for leaks	149
3.5	Checking oil pressure and oil pressure switch	151
3.6	Removing and installing oil pressure switch F1	154
<b>4</b>	<b>Oil supply line and turbocharger support</b>	<b>155</b>
4.1	Assembly overview - oil supply line and turbocharger support	155
4.2	Removing and installing oil supply line and turbocharger support	156
<b>19</b>	<b>Cooling</b>	<b>160</b>
<b>1</b>	<b>Cooling system</b>	<b>160</b>
1.1	Assembly overview - parts of cooling system, body side	161
1.2	Assembly overview - cowling with radiator fan V7	163
1.3	Parts of cooling system, engine side	164
1.4	Assembly overview - coolant pump and 4/2-way valve with thermostat	165
1.5	Removing and installing 4/2-way valve with thermostat	165
1.6	Coolant hose schematic diagram	170
1.7	Removing and installing cowling with radiator fan V7	171
1.8	Removing and installing radiator and detaching charge air cooler from radiator	172
1.9	Removing and installing coolant temperature sender G62	176
1.10	Removing and installing coolant temperature sender at radiator outlet G83	177
1.11	Removing and installing coolant circulation pump 2 V178	178
1.12	Removing and installing coolant pump	179
1.13	Removing and installing front coolant pipe	181
1.14	Removing and installing right coolant pipes	184
<b>2</b>	<b>Draining and replenishing coolant</b>	<b>186</b>
2.1	Draining and filling coolant	186
2.2	Checking cooling system for leaks	190
<b>20</b>	<b>Fuel supply system</b>	<b>193</b>



<b>1</b>	<b>Safety precautions when working on fuel supply system</b>	<b>193</b>
<b>2</b>	<b>Rules for cleanliness</b>	<b>194</b>
<b>3</b>	<b>Repair instructions if tank has been filled with incorrect fuel</b>	<b>195</b>
3.1	Step 1 (Engine was started with incorrect fuel)	195
3.2	Step 2 (Engine was not started with incorrect fuel)	196
3.3	Step 3 (There are metal particles in fuel delivery unit and fuel tank)	197
3.4	Step 4 (There are no metal particles in fuel delivery unit and fuel tank)	198
3.5	Step 5 (There are metal particles in high-pressure pump)	198
3.6	Step 6 (There are no metal particles in high-pressure pump)	198
<b>4</b>	<b>Emptying fuel tank</b>	<b>199</b>
4.1	Emptying fuel tank when fuel pump is intact	199
4.2	Emptying fuel tank if it is more than 3/4 full	202
4.3	Emptying fuel tank if it is less than 3/4 full	203
<b>5</b>	<b>Parts of fuel supply system</b>	<b>205</b>
5.1	Fuel tank	205
5.2	Removing and installing fuel delivery unit	210
<b>6</b>	<b>Fuel gauge sender G 6</b>	<b>213</b>
6.1	Removing and installing fuel gauge sender G 6 in vehicles with 0.5 bar low-pressure fuel system	213
6.2	Removing and installing fuel gauge sender G 6, vehicles with 6.0 bar low-pressure fuel system	214
<b>7</b>	<b>Repairing fuel supply</b>	<b>215</b>
7.1	Assembly overview - fuel filter	215
7.2	Removing and installing fuel filter	217
7.3	Assembly overview - accelerator mechanism	217
<b>8</b>	<b>Testing low-pressure fuel systems (fuel pump)</b>	<b>219</b>
8.1	Distinguishing features of the various low-pressure fuel systems	219
8.2	Checking fuel pump, vehicles with 0.5 bar low-pressure fuel system	222
8.3	Checking fuel pump, vehicles with 6.0 bar low-pressure fuel system	225
<b>21</b>	<b>Turbocharging/supercharging</b>	<b>237</b>
<b>1</b>	<b>Charge air system with turbocharger</b>	<b>237</b>
1.1	Safety precautions	237
1.2	Rules for cleanliness	237
1.3	Assembly overview - turbocharger with attachments	238
1.4	Removing and installing turbocharger	241
1.5	Assembly overview - parts of charge air cooling	245
1.6	Removing and installing charge air cooler	247
1.7	Removing and installing charge air pipe »hot« side	247
<b>2</b>	<b>Checking charge air system</b>	<b>249</b>
2.1	Checking charge air system for leaks	249
<b>3</b>	<b>Vacuum system</b>	<b>251</b>
3.1	Vacuum hose schematic diagram	251
3.2	Testing vacuum system	252
<b>23</b>	<b>Mixture preparation - injection</b>	<b>253</b>
<b>1</b>	<b>Safety precautions, rules for cleanliness, assembly instructions</b>	<b>253</b>
1.1	Safety precautions	253
1.2	Rules for cleanliness	253
1.3	Instructions for working on fuel system	254
1.4	To avoid any risk of injuries to persons and/or the destruction of the injection and glow plug system, the following must be noted	255
<b>2</b>	<b>Mixture preparation, 1.6 l common rail</b>	<b>256</b>
2.1	System layouts	256



2.2	Assembly overview - fuel system	260
2.3	Assembly overview - installation position of clamp	266
<b>3</b>	<b>Removing and installing components of the diesel direct injection system</b>	<b>267</b>
3.1	Removing and installing injectors	267
3.2	Removing and installing high-pressure lines	272
3.3	Removing and installing high-pressure pump	278
3.4	Removing and installing high-pressure accumulator	282
3.5	Removing and installing fuel pressure regulating valve N276	286
3.6	Removing and installing fuel pressure sender G247	288
<b>4</b>	<b>Filling/bleeding/checking the diesel direct injection system</b>	<b>291</b>
4.1	Filling/bleeding, checking high-pressure pump/fuel system	291
4.2	Checks on high-pressure accumulator	295
4.3	Checks on injector	297
4.4	Checking fuel system for leaks	300
4.5	Check pressure retention valve in fuel return line	301
<b>5</b>	<b>Intake manifold</b>	<b>303</b>
5.1	Assembly overview - intake manifold with attachments (vehicles with intake manifold flap V157)	303
5.2	Assembly overview - intake manifold with attachments (vehicles without intake manifold flap)	304
5.3	Removing and installing intake manifold (vehicles with intake manifold flap V157)	305
5.4	Removing and installing intake manifold (vehicles without intake manifold flap V157)	308
5.5	Removing and installing throttle valve module J338	312
<b>6</b>	<b>Air filter</b>	<b>313</b>
6.1	Assembly overview - air filter	313
<b>7</b>	<b>Engine control unit</b>	<b>316</b>
7.1	Removing and installing engine control unit with no anti-theft protection	316
7.2	Removing and installing anti-theft engine control unit	316
<b>26</b>	<b>- Exhaust system</b>	<b>318</b>
<b>1</b>	<b>Exhaust system</b>	<b>318</b>
1.1	Assembly overview - front exhaust pipe with catalytic converter	318
1.2	Removing and installing catalytic converter	319
1.3	Assembly overview - silencer	324
1.4	Aligning exhaust system free of stress	326
<b>2</b>	<b>Exhaust gas recirculation system</b>	<b>328</b>
2.1	Assembly overview - parts of exhaust gas recirculation system	328
2.2	Checking changeover for exhaust gas recirculation cooler	329
2.3	Removing and installing exhaust gas recirculation system	330
<b>28</b>	<b>- Glow plug system</b>	<b>334</b>
<b>1</b>	<b>Removing, installing and checking glow plugs</b>	<b>334</b>