

001 - 1.2l petrol engine , CGPA,CGPB	1-11
1. 1.2l petrol engine , CGPA,CGPB	1
2. Battery, Starter, Ignition/starter switch, Terminal 50 voltage supply relay, Fuse holder A, Fuse holder B	2
3. Fuel pump relay, Fuel supply relay, Terminal 75 voltage supply relay 1, Fuse holder B	3
4. Accelerator position sender, Accelerator position sender 2, Main relay, Onboard supply control unit, Engine control unit	4
5. Cruise control system switch, Onboard supply control unit, Engine control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage	5
6. Knock sensor 1, Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Activated charcoal filter solenoid valve 1	6
7. Engine speed sender, Hall sender, Intake air temperature sender, Coolant temperature sender, Intake manifold pressure sender, Throttle valve drive for electric throttle, Engine control unit	7
8. Brake light switch, Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, ABS control unit, Throttle valve module, Engine control unit	8
9. Lambda probe, Lambda probe after catalytic converter, Clutch position sender, Engine control unit, Lambda probe heater, Lambda probe 1 heater after catalytic converter	9
10. Fuel gauge sender, Fuel gauge, Fuel system pressurisation pump, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Reserve fuel warning lamp	10
11. Oil pressure switch, Oil level and oil temperature sender, Control unit in dash panel insert, Dash panel insert, Oil pressure warning lamp	11
002 - 1.6l diesel engine , CAYA,CAYB,CAYC	12-27
1. 1.6l diesel engine , CAYA,CAYB,CAYC	12
2. Battery, Starter, Alternator, Ignition/starter switch, Fuse holder A	13
3. Terminal 30 voltage supply relay, Terminal 75 voltage supply relay 1, Fuse holder B	14
4. Automatic glow period control unit, Engine control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4	15
5. Accelerator pedal module, Accelerator position sender, Accelerator position sender 2, Low heat output relay, Engine control unit, Fuel supply relay, Heater element for crankcase breather	16
6. Cruise control system switch, Brake light switch, ABS control unit, Onboard supply control unit, Engine control unit	17
7. Lambda probe 1 before catalytic converter, Lambda probe, Air mass meter, Onboard supply control unit, Engine control unit, Lambda probe heater	18
8. Auxiliary heating heater element contact switch, Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Fuel pressure regulating valve, Fuel metering valve	19
9. Engine speed sender, Coolant temperature sender, Throttle valve potentiometer, Fuel temperature sender, Throttle valve module, Engine control unit	20
10. Radiator outlet coolant temperature sender, Exhaust gas temperature sender 1, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine control unit	21
11. Exhaust gas recirculation valve 1, Exhaust gas recirculation potentiometer, Fuel pressure sender, Position sender for charge pressure positioner, Engine control unit, Exhaust gas recirculation control motor	22
12. Intake manifold flap control unit, Hall sender, Intake manifold flap potentiometer, Engine control unit, Intake manifold flap motor	23
13. Intake manifold sender, Charge pressure sender, Intake air temperature sender, Clutch position sender, Pressure differential sender, Engine control unit	24
14. Engine control unit, Charge pressure control solenoid valve, Exhaust gas recirculation cooler changeover valve, Coolant circulation pump 2	25
15. Fuel gauge sender, Fuel system pressurisation pump, Coolant shortage indicator sender, Control unit in dash panel insert, Dash panel insert	26
16. Oil pressure switch, Brake fluid level warning contact, Oil level and oil temperature sender, Control unit in dash panel insert, Dash panel insert	27
003 - Cruise control system (CCS)	28-30
1. Cruise control system (CCS)	28
2. Cruise control system switch, Cruise control system (CCS) SET button, Blocking diode, Onboard supply control unit, Steering column electronics control unit	29
3. Control unit in dash panel insert, Onboard supply control unit, Dash panel insert	30
004 - Convenience system, left-hand drive	31-41
1. Convenience system, left-hand drive	31
2. Sunroof button, Sliding sunroof adjustment control unit, Onboard supply control unit, Sliding sunroof motor	32
3. Rear lid handle release button, Rear lid lock unit, Onboard supply control unit, Rear lid central locking motor, Right luggage compartment light	33
4. Driver side interior locking button for central locking system. Driver side central locking lock	34

unit, Onboard supply control unit, Central locking deadlock function warning lamp -SAFE-	
5. Operating unit for window regulator in driver door, Driver door control unit, Onboard supply control unit	35
6. Front left window regulator switch, Front right window regulator switch in driver door, Operating unit for window regulator in driver door, Driver door control unit, Onboard supply control unit, Driver side window regulator motor	36
7. Rear left door contact switch, Rear left central locking lock unit, Onboard supply control unit, Rear left door central locking motor, lock	37
8. Rear left window regulator switch, in door, Rear right window regulator switch, in door, Rear left door control unit, Rear right door control unit, Onboard supply control unit, Rear left window regulator motor, Rear right window regulator motor	38
9. Rear right door contact switch, Rear right central locking lock unit, Onboard supply control unit, Tank filler flap locking motor, Rear right door central locking motor, lock	39
10. Front passenger side central locking lock unit, Onboard supply control unit	40
11. Window regulator switch in front passenger door, Front passenger door control unit, Onboard supply control unit, Front passenger side window regulator motor	41
005 - Airbag systems	42-46
1. Airbag systems	42
2. Driver side belt switch, Front passenger side belt switch, Battery master/isolator switch, Key operated switch to deactivate front passenger side airbag, Airbag coil connector and return ring with slip ring, Seat occupied sensor, front passenger side, Airbag control unit, Driver side airbag igniter	43
3. Airbag control unit, Front passenger side airbag igniter 1, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1, Side airbag igniter on driver side, Side airbag igniter on front passenger side	44
4. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on front passenger side, Airbag control unit, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter	45
5. Airbag control unit, Control unit in dash panel insert, Onboard supply control unit, Dash panel insert, Front passenger side airbag deactivated warning lamp, Diagnostic connection	46
006 - Power assisted steering	47-48
1. Power assisted steering	47
2. Power steering sensor, Control unit in dash panel insert, Power steering control unit, Onboard supply control unit, Dash panel insert, Steering hydraulics pump	48
007 - Anti-lock brake system (ABS)	49-54
1. Anti-lock brake system (ABS)	49
2. ABS control unit, Fuse holder A, Fuse holder B	50
3. Brake light switch, ABS control unit	51
4. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, Front left speed sensor, ABS control unit	52
5. Tyre pressure monitor display button, ABS control unit, Onboard supply control unit	53
6. Handbrake warning switch, Brake fluid level warning contact, Control unit in dash panel insert, Onboard supply control unit, Dash panel insert	54
008 - 1.4l petrol engine , CGGB	55-66
1. 1.4l petrol engine , CGGB	55
2. Battery, Starter, Alternator, Ignition/starter switch, Terminal 50 voltage supply relay, Fuse holder A, Fuse holder B	56
3. Fuel pump relay, Fuel supply relay, Fuse holder B	57
4. Accelerator position sender, Main relay, Engine control unit	58
5. Engine control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	59
6. Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	60
7. Engine speed sender, Hall sender, Coolant temperature sender, Intake manifold pressure sender, Engine control unit	61
8. Brake light switch, Lambda probe, Clutch position sender, ABS control unit, Engine control unit, Lambda probe heater	62
9. Knock sensor 1, Throttle valve module, Onboard supply control unit, Engine control unit	63
10. Lambda probe after catalytic converter, Onboard supply control unit, Engine control unit, Diagnostic connection	64
11. Fuel system pressurisation pump, Control unit in dash panel insert, Dash panel insert	65
12. Oil pressure switch, Brake fluid level warning contact, Oil level and oil temperature sender, Control unit in dash panel insert, Dash panel insert	66
009 - 1.2l petrol engine , CHFA	67-78
1. 1.2l petrol engine , CHFA	67
2. Battery, Starter, Alternator, Ignition/starter switch, Terminal 50 voltage supply relay, Fuse	68

holder A, Fuse holder B	
3. Fuel pump relay, Fuel supply relay, Terminal 75 voltage supply relay 1, Fuse holder B	69
4. Accelerator position sender, Accelerator position sender 2, Main relay, Engine control unit	70
5. Engine control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage	71
6. Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Activated charcoal filter solenoid valve 1	72
7. Engine speed sender, Hall sender, Intake air temperature sender, Coolant temperature sender, Intake manifold pressure sender, Onboard supply control unit, Engine control unit	73
8. Brake light switch, Clutch position sender, ABS control unit, Onboard supply control unit, Engine control unit	74
9. Knock sensor 1, Throttle valve module, Onboard supply control unit, Engine control unit	75
10. Lambda probe, Engine control unit	76
11. Fuel gauge sender, Fuel system pressurisation pump, Coolant shortage indicator sender, Control unit in dash panel insert, Dash panel insert	77
12. Oil pressure switch, Brake fluid level warning contact, Oil level and oil temperature sender, Control unit in dash panel insert, Dash panel insert	78
010 - Anti-lock brake system (ABS) with electronic stabilisation program (ESP)	79-84
1. Anti-lock brake system (ABS) with electronic stabilisation program (ESP)	79
2. ABS control unit, Fuse holder A, Fuse holder B	80
3. TCS and ESP button, Tyre pressure monitor display button, ABS control unit	81
4. Brake light switch, ABS control unit, Onboard supply control unit	82
5. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, Front left speed sensor, ABS control unit	83
6. Handbrake warning switch, Brake fluid level warning contact, Steering angle sender, Control unit in dash panel insert, Dash panel insert	84
011 - Parking aid (PDC)	85-87
1. Parking aid (PDC)	85
2. Rear parking aid warning buzzer, Parking aid control unit, Onboard supply control unit	86
3. Rear left parking aid sender, Rear centre left parking aid sender, Rear centre right parking aid sender, Rear right parking aid sender, Parking aid control unit	87
012 - Dual clutch gearbox (DSG) , (0EG)	88-93
1. Dual clutch gearbox (DSG) , (0EG)	88
2. Starter inhibitor relay, Onboard supply control unit, Terminal 50 voltage supply relay, Mechatronic unit for dual clutch gearbox	89
3. Onboard supply control unit, Mechatronic unit for dual clutch gearbox	90
4. Onboard supply control unit, Mechatronic unit for dual clutch gearbox	91
5. Selector lever, Dash panel insert, Ignition key withdrawal lock solenoid	92
6. Selector lever, Selector lever lock solenoid, Selector lever position display	93
013 - Interface for external use	94-95
1. Interface for external use	94
2. Onboard supply control unit, Multimedia system control unit, Radio, Connection for external audio sources	95
014 - Trailer coupling	96-99
1. Trailer coupling	96
2. Trailer detector control unit, Onboard supply control unit, Fuse holder E	97
3. Trailer detector control unit, Onboard supply control unit, Trailer socket	98
4. Rear fog light cut-out contact switch, Control unit in dash panel insert, Onboard supply control unit, Dash panel insert, Rear left fog light bulb, Trailer socket	99
015 - Heated seats	100-103
1. Heated seats	100
2. Onboard supply control unit, Heated front seats control unit	101
3. Heated driver seat regulator, Heated front seats control unit, Heated seat cushion for driver seat, Heated backrest for driver seat	102
4. Heated front passenger seat regulator, Heated front seats control unit, Heated seat cushion for front passenger seat, Heated backrest for front passenger seat	103
016 - Automatic anti-dazzle interior mirror, rain sensor	104-106
1. Automatic anti-dazzle interior mirror, rain sensor	104
2. Onboard supply control unit, Automatic anti-dazzle interior mirror	105
3. Rain sensor, Onboard supply control unit	106
017 - 12 V sockets	107-108
1. 12 V sockets	107
2. Cigarette lighter illumination bulb, Socket illumination bulb, Cigarette lighter, 12 V socket	108
018 - Auxiliary air heater , CAYA,CAYB,CAYC,CFWA	109-111
1. Auxiliary air heater , CAYA,CAYB,CAYC,CFWA	109
2. Low heat output relav. High heat output relav. Engine control unit	110

3. Auxiliary air heater element	111
019 - Driving school equipment	112-114
1. Driving school equipment	112
2. Driving school mode warning buzzer, Driving school mode relay, Driving school vehicle footwell illumination	113
3. Footwell light switch, Warning buzzer switch, Onboard supply control unit	114
020 - Radio system RCD 310	115-119
1. Radio system RCD 310	115
2. Onboard supply control unit, Radio, Aerial	116
3. Rear left bass loudspeaker, Front left treble loudspeaker, Front left bass loudspeaker	117
4. Rear right bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker	118
5. Radio aerial 2, Left aerial module, Frequency modulation (FM) frequency filter in negative wire, Frequency modulation (FM) frequency filter in positive wire, Heated rear window	119
021 - Preparation for radio	120-123
1. Preparation for radio	120
2. Onboard supply control unit, Front left loudspeaker, Front right loudspeaker, Aerial	121
3. Rear left loudspeaker, Rear right loudspeaker	122
4. Radio aerial 2, Left aerial module, Frequency modulation (FM) frequency filter in negative wire, Frequency modulation (FM) frequency filter in positive wire, Heated rear window	123
022 - Universal preparation for mobile telephone	124-126
1. Universal preparation for mobile telephone	124
2. Mobile telephone operating electronics control unit, Onboard supply control unit, Telephone microphone	125
3. Mobile telephone operating electronics control unit, Control unit with display for radio and navigation, Telephone microphone, Radio and telephone aerial, Telephone bracket	126
023 - Radio navigation system	127-132
1. Radio navigation system	127
2. Control unit with display for radio and navigation, Onboard supply control unit, Roof aerial	128
3. Control unit with display for radio and navigation, Telephone microphone, Telephone bracket	129
4. Rear left bass loudspeaker, Front left treble loudspeaker, Front left bass loudspeaker	130
5. Rear right bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker	131
6. Radio aerial 2, Left aerial module, Frequency modulation (FM) frequency filter in negative wire, Frequency modulation (FM) frequency filter in positive wire, Heated rear window	132
024 - Headlight washer system	133-134
1. Headlight washer system	133
2. Headlight washer system relay, Onboard supply control unit, Headlight washer system pump	134
025 - Climatic	135-139
1. Climatic	135
2. Fresh air blower switch, Air conditioning system control unit, Fresh air blower series resistor with overheating fuse, Fresh air blower, Fresh air and air recirculation flap control motor	136
3. Centre vent temperature sender, Footwell vent temperature sender, Evaporator output temperature sender, Air conditioning system control unit, Temperature flap control motor	137
4. High-pressure sender, Air conditioning system control unit, Onboard supply control unit	138
5. Radiator fan thermal switch, Radiator fan control unit, Radiator fan	139
026 - Climatronic	140-145
1. Climatronic	140
2. Sunlight penetration photosensor, Fresh air blower control unit, Climatronic control unit, Fresh air blower, Air flow flap control motor	141
3. Climatronic control unit, Onboard supply control unit, Centre flap control motor, Defroster flap control motor	142
4. Centre vent temperature sender, Footwell vent temperature sender, Evaporator output temperature sender, Climatronic control unit, Temperature flap control motor	143
5. High-pressure sender, Humidity sender for air conditioning system, Climatronic control unit, Air conditioner compressor regulating valve	144
6. Radiator fan control unit	145
027 - Fog light	146-147
1. Fog light	146
2. Light switch, Left fog light bulb, Right fog light bulb	147
028 - Radio system RCD 510	148-152
1. Radio system RCD 510	148
2. Onboard supply control unit, Radio, Aerial	149
3. Rear left bass loudspeaker, Front left treble loudspeaker, Front left bass loudspeaker	150
4. Rear right bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker	151
5. Radio aerial 2, Left aerial module, Frequency modulation (FM) frequency filter in negative wire, Frequency modulation (FM) frequency filter in positive wire, Heated rear window	152
029 - Air conditioning system with manual regulation	153-158

1. Air conditioning system with manual regulation	153
2. Fresh air blower switch, Air conditioning system control unit, Fresh air blower series resistor with overheating fuse, Fresh air blower	154
3. High-pressure sender, Evaporator output temperature sender, Air conditioning system control unit, Fresh air and air recirculation flap control motor	155
4. Air conditioning system control unit, Onboard supply control unit	156
5. Radiator fan thermal switch, Radiator fan control unit, Radiator fan	157
6. Radiator fan thermal switch, Radiator fan control unit, Radiator fan	158
030 - Gas discharge headlights with automatic headlight range control	159-163
1. Gas discharge headlights with automatic headlight range control	159
2. Headlight range control unit, Onboard supply control unit, Front left headlight	160
3. Headlight range control unit, Onboard supply control unit, Data bus diagnostic interface, Dash panel insert	161
4. Headlight range control unit, Onboard supply control unit, Front right headlight	162
5. Light switch, Front and rear fog light switch, Onboard supply control unit, Light switch illumination bulb	163
031 - Sliding/tilting sunroof	164-165
1. Sliding/tilting sunroof	164
2. Sunroof button, Sliding sunroof adjustment control unit, Onboard supply control unit, Sliding sunroof motor	165
032 - 1.4l petrol engine , CAVB,CAVE,CTHE	166-180
1. 1.4l petrol engine , CAVB,CAVE,CTHE	166
2. Battery, Starter, Alternator, Suppression filter, Airbag control unit, Battery isolation igniter, Fuse holder A, Fuse holder B, Fuse holder F	167
3. Ignition/starter switch, Fuse holder B	168
4. Starter inhibitor relay, Terminal 30 voltage supply relay, Additional coolant pump relay, Circulation pump	169
5. Cruise control system switch, Radiator outlet coolant temperature sender, Engine control unit	170
6. Lambda probe, Lambda probe after catalytic converter, Engine control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Spark plug 1, Spark plug 2	171
7. Accelerator position sender 2, Oil level and oil temperature sender, Brake servo pressure sensor, Engine control unit, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug 3, Spark plug 4	172
8. Brake light switch, Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Vacuum pump for brakes	173
9. Oil pressure switch, Fuel gauge sender, Knock sensor 1, Fuel pump control unit, Engine control unit, Fuel pressure regulating valve	174
10. Engine control unit, Control unit for structure-borne sound, Charge pressure control solenoid valve, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Turbocharger air recirculation valve, Magnetic clutch for supercharger, Actuator for structure-borne sound	175
11. Engine speed sender, Coolant temperature sender, Intake air temperature sender 2, Radiator fan control unit, Engine control unit	176
12. High-pressure sender, Fuel pressure sender, Engine control unit, Air conditioner compressor regulating valve	177
13. Hall sender, Intake air temperature sender, Intake air temperature sender 3, Engine control unit	178
14. Throttle valve module, Engine control unit, Regulating flap control unit	179
15. Coolant shortage indicator sender, Control unit in dash panel insert, Dash panel insert	180
033 - 1.2l petrol engine , CBZB,CBZC	181-196
1. 1.2l petrol engine , CBZB,CBZC	181
2. Battery, Starter, Alternator, Starter inhibitor relay, Data bus diagnostic interface, Fuse holder A, Fuse holder B	182
3. Climatronic control unit, Main relay, Air conditioning system control unit, Additional coolant pump relay, Fuse holder B	183
4. Engine control unit, Coolant circulation pump	184
5. Accelerator position sender, Accelerator position sender 2, Engine control unit, Output stage, Ignition transformer	185
6. Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Activated charcoal filter solenoid valve 1, Fuel pressure regulating valve, Coolant regulating valve	186
7. Hall sender, Intake air temperature sender, Coolant temperature sender, Intake manifold pressure sender, Engine control unit	187
8. Fuel pressure sender, Engine control unit, Charge pressure positioner	188
9. Engine speed sender, Charge pressure sender, Engine control unit	189
10. Cruise control system switch, Fuel gauge sender, Fuel system pressurisation pump, Onboard supply control unit, Engine control unit	190
11. Brake light switch. Clutch pedal switch. ABS control unit. Onboard supply control unit. Engine	191

control unit	
12. Knock sensor 1, Throttle valve module, Onboard supply control unit, Engine control unit	192
13. Lambda probe, Lambda probe after catalytic converter, Engine control unit	193
14. Start/Stop operation button, Starter relay 1, Starter relay 2	194
15. Coolant shortage indicator sender, Control unit in dash panel insert, Voltage stabiliser, Dash panel insert	195
16. Oil pressure switch, Brake fluid level warning contact, Oil level and oil temperature sender, Control unit in dash panel insert, Dash panel insert	196
034 - 1.2l diesel engine with start/stop system , CFWA	197-214
1. 1.2l diesel engine with start/stop system , CFWA	197
2. Battery, Starter, Ignition/starter switch, Battery monitor control unit, Fuse holder A, Fuse holder B	198
3. Terminal 30 voltage supply relay, Fuse holder B	199
4. Onboard supply control unit, Voltage stabiliser, Starter relay 1, Starter relay 2	200
5. Auxiliary heating heater element contact switch, Automatic glow period control unit, Engine control unit, Glow plug 1, Glow plug 2, Glow plug 3	201
6. Accelerator pedal module, Accelerator position sender, Accelerator position sender 2, Engine control unit, Fuel supply relay	202
7. Brake light switch, Clutch position sender, ABS control unit, Engine control unit, Mechatronic unit for dual clutch gearbox	203
8. Air mass meter, Power steering control unit, Engine control unit, Air conditioner compressor regulating valve	204
9. Lambda probe 1 before catalytic converter, Charge pressure sender, Lambda probe, Intake air temperature sender, Throttle valve potentiometer, Throttle valve module, Engine control unit, Lambda probe heater	205
10. Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Fuel pressure regulating valve, Fuel metering valve	206
11. Exhaust gas recirculation valve 1, Engine speed sender, Coolant temperature sender, Fuel temperature sender, Exhaust gas recirculation potentiometer, Engine control unit, Exhaust gas recirculation control motor	207
12. Intake manifold flap control unit, Hall sender, Fuel pressure sender, Intake manifold flap potentiometer, Position sender for charge pressure positioner, Engine control unit, Intake manifold flap motor	208
13. Radiator fan control unit, Engine control unit, Charge pressure control solenoid valve, Exhaust gas recirculation cooler changeover valve, Radiator fan, Coolant circulation pump 2	209
14. Radiator outlet coolant temperature sender, Exhaust gas temperature sender 1, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine control unit	210
15. Pressure differential sender, Gearbox neutral position sender, Engine control unit, Heater element for crankcase breather	211
16. Start/Stop operation button, Data bus diagnostic interface	212
17. Fuel gauge sender, Coolant shortage indicator sender, Control unit in dash panel insert, Dash panel insert	213
18. Oil pressure switch, Brake fluid level warning contact, Oil level and oil temperature sender, Control unit in dash panel insert, Dash panel insert	214
035 - Trailer coupling	215-218
1. Trailer coupling	215
2. Trailer detector control unit, Onboard supply control unit, Fuse holder E	216
3. Trailer detector control unit, Onboard supply control unit, Trailer socket	217
4. Rear fog light cut-out contact switch, Control unit in dash panel insert, Dash panel insert, Rear left fog light bulb, Trailer socket	218
036 - Basic equipment	219-239
1. Basic equipment	219
2. Battery, Starter, Ignition/starter switch, Fuse holder B	220
3. X-contact relief relay, Dipped beam relay, Fuse holder B	221
4. Light switch, Front and rear fog light switch, Onboard supply control unit, Light switch illumination bulb	222
5. Switch and instrument illumination regulator, Onboard supply control unit	223
6. Steering column combination switch, Onboard supply control unit, Rear window wiper motor, Windscreen and rear window washer pump	224
7. Turn signal switch, Steering column combination switch, Airbag coil connector and return ring with slip ring, Horn plate, Onboard supply control unit, Windscreen wiper motor	225
8. Hazard warning lights button, Heated rear window button, Reversing light switch, Bonnet contact switch, Onboard supply control unit	226
9. Onboard supply control unit, Driver side turn signal repeater bulb, Front passenger side turn signal repeater bulb	227
10. Onboard supply control unit. Front left headlight. Left headlight range control motor	228

11. Onboard supply control unit, Front right headlight, Additional brake light bulb, Right headlight range control motor, Right luggage compartment light	229
12. Onboard supply control unit, Left tail light, Right tail light, Left number plate light, Right number plate light	230
13. Onboard supply control unit, Cigarette lighter illumination bulb, Socket illumination bulb, Cigarette lighter, 12 V socket	231
14. Window regulator switch in front passenger door, Operating unit for window regulator in driver door, Onboard supply control unit	232
15. Driver vanity mirror contact switch, Front passenger vanity mirror contact switch, Onboard supply control unit, Front passenger reading light, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror	233
16. Onboard supply control unit, Left footwell light, Right footwell light, Rear centre reading light	234
17. Treble horn, Bass horn, Onboard supply control unit	235
18. Heater control unit, Fresh air blower series resistor with overheating fuse, Fresh air blower, Fresh air and air recirculation flap control motor	236
19. Diagnostic connection	237
20. Immobiliser reader coil, Parking brake contact switch, Control unit in dash panel insert, Dash panel insert	238
21. Brake fluid level warning contact, Ambient temperature sensor, Coolant shortage indicator sender, Windscreen washer fluid level sender, Control unit in dash panel insert, Dash panel insert	239
037 - Radiator fan with air conditioning system	240-241
1. Radiator fan with air conditioning system	240
2. Radiator fan thermal switch, Radiator fan control unit, Radiator fan	241
038 - Radiator fan with no air conditioning system	242-243
1. Radiator fan with no air conditioning system	242
2. Radiator fan thermal switch, Radiator fan	243
039 - Radio system RCD 210	244-246
1. Radio system RCD 210	244
2. Onboard supply control unit, Radio, Aerial	245
3. Front left treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker	246
040 - Heated washer jets	247-248
1. Heated washer jets	247
2. Left washer jet heater element, Right washer jet heater element	248
041 - Daytime running light	249-250
1. Daytime running light	249
2. Light switch, Left daytime running light bulb, Right daytime running light bulb	250
042 - Multifunction steering wheel	251-252
1. Multifunction steering wheel	251
2. Multifunction buttons on left in steering wheel, Coil connector, Horn plate, Multifunction steering wheel control unit, Driver side airbag igniter	252
043 - Anti-theft alarm system	253-255
1. Anti-theft alarm system	253
2. Anti-theft alarm sensor, Alarm horn, Onboard supply control unit	254
3. Interior monitoring switch, Bonnet contact switch, Onboard supply control unit	255
044 - Electrically adjustable and heated exterior mirror	256-259
1. Electrically adjustable and heated exterior mirror	256
2. Mirror adjustment switch, Onboard supply control unit	257
3. Driver door control unit, Onboard supply control unit, Driver side exterior mirror	258
4. Front passenger door control unit, Onboard supply control unit, Front passenger side exterior mirror	259
045 - Fuse assignment	260-280
1. Fuse assignment	260
2. Battery, Fuse holder A	261
3. Fuse holder A, Fuse holder C	262
4. Fuse 5, Fuse holder D, Fuse holder E	263
5. Fuse holder B	264
6. Fuse holder B	265
7. Onboard supply control unit, Fuse holder B	266
8. Onboard supply control unit, Fuse holder B	267
9. Onboard supply control unit, Fuse holder B	268
10. Onboard supply control unit, Fuse holder B	269
11. Onboard supply control unit, Fuse holder B	270
12. Onboard supply control unit, Fuse holder B	271
13. Onboard supply control unit. Fuse holder B	272

14. Onboard supply control unit, Fuse holder B	273
15. Fuse holder B	274
16. Fuse holder B	275
17. Fuse holder B	276
18. Fuse holder B	277
19. Fuse holder B	278
20. Fuse holder B	279
21. Fuse holder B	280
046 - Daytime running light and fog lights	281-283
1. Daytime running light and fog lights	281
2. Onboard supply control unit, Left fog light bulb, Right fog light bulb, Left daytime running light bulb, Right daytime running light bulb, Left static cornering light, Right static cornering light	282
3. Light switch, Steering angle sender, Onboard supply control unit	283
048 - 1.6l diesel engine with start/stop system , CAYB	284-302
1. 1.6l diesel engine with start/stop system , CAYB	284
2. Battery, Starter, Alternator, Ignition/starter switch, Battery monitor control unit, Fuse holder A, Fuse holder B	285
3. Terminal 30 voltage supply relay, Fuse holder B	286
4. Onboard supply control unit, Voltage stabiliser, Starter relay 1, Starter relay 2	287
5. Automatic glow period control unit, Engine control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4	288
6. Accelerator pedal module, Accelerator position sender, Accelerator position sender 2, Engine control unit, Terminal 75 voltage supply relay 1, Terminal 50 voltage supply relay	289
7. Brake light switch, Clutch position sender, Fuel pump relay, ABS control unit, Engine control unit	290
8. Air mass meter, Power steering control unit, Engine control unit	291
9. Lambda probe 1 before catalytic converter, Lambda probe, Throttle valve potentiometer, Throttle valve module, Engine control unit, Lambda probe heater	292
10. Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Fuel pressure regulating valve, Fuel metering valve	293
11. Exhaust gas recirculation valve 1, Engine speed sender, Coolant temperature sender, Fuel temperature sender, Exhaust gas recirculation potentiometer, Engine control unit, Exhaust gas recirculation control motor	294
12. Fuel pressure sender, Position sender for charge pressure positioner, Engine control unit	295
13. Intake manifold flap control unit, Hall sender, Intake manifold flap potentiometer, Engine control unit, Intake manifold flap motor	296
14. Engine control unit, Charge pressure control solenoid valve, Exhaust gas recirculation cooler changeover valve, Continued coolant circulation pump	297
15. Radiator outlet coolant temperature sender, Exhaust gas temperature sender 1, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine control unit	298
16. Charge pressure sender, Intake air temperature sender, Exhaust gas pressure sensor 1, Engine control unit	299
17. Data bus diagnostic interface	300
18. Fuel gauge sender, Coolant shortage indicator sender, Control unit in dash panel insert, Dash panel insert	301
19. Oil pressure switch, Brake fluid level warning contact, Oil level and oil temperature sender, Control unit in dash panel insert, Dash panel insert	302
049 - Climatronic, right-hand drive	303-307
1. Climatronic, right-hand drive	303
2. Sunlight penetration photosensor, Fresh air blower control unit, Climatronic control unit, Fresh air blower, Air flow flap control motor	304
3. Climatronic control unit, Onboard supply control unit, Centre flap control motor, Defroster flap control motor	305
4. Centre vent temperature sender, Footwell vent temperature sender, Evaporator output temperature sender, Climatronic control unit, Temperature flap control motor	306
5. High-pressure sender, Humidity sender for air conditioning system, Climatronic control unit, Radiator fan control unit, Air conditioner compressor regulating valve	307
052 - Dual headlight	308-311
1. Dual headlight	308
2. Dipped beam relay	309
3. Onboard supply control unit, Front left headlight	310
4. Onboard supply control unit, Front right headlight	311
053 - Basic equipment for models with start/stop system , CAYB	312-331
1. Basic equipment for models with start/stop system , CAYB	312
2. Batterv. Starter. Alternator. Batterv monitor control unit	313

3. Engine control unit, Terminal 50 voltage supply relay, Starter relay 1, Starter relay 2	314
4. Ignition/starter switch, Voltage stabiliser, Fuse holder B	315
5. X-contact relief relay, Terminal 75 voltage supply relay 1, Fuse holder B	316
6. Light switch, Front and rear fog light switch, Onboard supply control unit, Light switch illumination bulb	317
7. Switch and instrument illumination regulator, Onboard supply control unit	318
8. Steering column combination switch, Onboard supply control unit, Rear window wiper motor, Windscreen and rear window washer pump	319
9. Turn signal switch, Steering column combination switch, Airbag coil connector and return ring with slip ring, Horn plate, Onboard supply control unit, Windscreen wiper motor	320
10. Hazard warning lights button, Heated rear window button, Reversing light switch, Bonnet contact switch, Onboard supply control unit	321
11. Onboard supply control unit, Driver side turn signal repeater bulb, Front passenger side turn signal repeater bulb	322
12. Onboard supply control unit, Front left headlight, Left headlight range control motor	323
13. Onboard supply control unit, Front right headlight, Additional brake light bulb, Right headlight range control motor, Right luggage compartment light	324
14. Onboard supply control unit, Left tail light, Right tail light, Left number plate light, Right number plate light	325
15. Onboard supply control unit, Cigarette lighter illumination bulb, Socket illumination bulb, Cigarette lighter, 12 V socket	326
16. Window regulator switch in front passenger door, Operating unit for window regulator in driver door, Onboard supply control unit	327
17. Treble horn, Onboard supply control unit, Front passenger reading light	328
18. Onboard supply control unit, Data bus diagnostic interface, Diagnostic connection	329
19. Immobiliser reader coil, Parking brake contact switch, Control unit in dash panel insert, Onboard supply control unit, Dash panel insert	330
20. Brake fluid level warning contact, Ambient temperature sensor, Coolant shortage indicator sender, Windscreen washer fluid level sender, Control unit in dash panel insert, Dash panel insert	331
054 - Convenience system	332-341
1. Convenience system	332
2. Rear lid handle release button, Rear lid lock unit, Onboard supply control unit, Rear lid central locking motor, Right luggage compartment light	333
3. Driver side interior locking button for central locking system, Driver side central locking lock unit, Onboard supply control unit, Central locking SAFELock function warning lamp	334
4. Operating unit for window regulator in driver door, Driver door control unit, Onboard supply control unit	335
5. Front left window regulator switch, Front right window regulator switch in driver door, Operating unit for window regulator in driver door, Driver door control unit, Onboard supply control unit, Driver side window regulator motor	336
6. Rear left door contact switch, Rear left central locking lock unit, Onboard supply control unit, Rear left door central locking motor, lock	337
7. Rear left window regulator switch, in door, Rear right window regulator switch, in door, Rear left door control unit, Rear right door control unit, Onboard supply control unit, Rear left window regulator motor, Rear right window regulator motor	338
8. Rear right door contact switch, Rear right central locking lock unit, Onboard supply control unit, Tank filler flap locking motor, Rear right door central locking motor, lock	339
9. Front passenger side central locking lock unit, Onboard supply control unit	340
10. Window regulator switch in front passenger door, Front passenger door control unit, Onboard supply control unit, Front passenger side window regulator motor	341
055 - Fuse assignment , CAYB	342-355
1. Fuse assignment , CAYB	342
2. Battery, Battery monitor control unit, Fuse holder A	343
3. Radiator fan control unit, Fuse holder A, Fuse holder C	344
4. Fuse holder D	345
5. Fuse holder B	346
6. Fuse holder B	347
7. Onboard supply control unit, Fuse holder B	348
8. Onboard supply control unit, Fuse holder B	349
9. Onboard supply control unit, Fuse holder B	350
10. Onboard supply control unit, Fuse holder B	351
11. Onboard supply control unit, Fuse holder B	352
12. Fuse holder B	353
13. Fuse holder B	354
14. Fuse holder B	355
056 - Climatic . (7L6).(7L8).(9AP)	356-360

1. Climatic , (7L6),(7L8),(9AP)	356
2. Fresh air blower switch, Air conditioning system control unit, Fresh air blower series resistor with overheating fuse, Fresh air blower, Fresh air and air recirculation flap control motor	357
3. High-pressure sender, Centre vent temperature sender, Footwell vent temperature sender, Evaporator output temperature sender, Air conditioning system control unit, Temperature flap control motor	358
4. Air conditioning system control unit, Onboard supply control unit, Data bus diagnostic interface	359
5. Radiator fan thermal switch, Radiator fan control unit, Radiator fan	360
057 - Anti-lock brake system (ABS) with electronic stabilisation program (ESP) , (7L6),(7L8)	361-366
1. Anti-lock brake system (ABS) with electronic stabilisation program (ESP) , (7L6),(7L8)	361
2. ABS control unit, Voltage stabiliser 2	362
3. TCS and ESP button, Tyre Pressure Loss Indicator button, ABS control unit	363
4. Brake light switch, ABS control unit, Onboard supply control unit	364
5. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, Front left speed sensor, ABS control unit, Data bus diagnostic interface	365
6. Brake fluid level warning contact, Parking brake contact switch, Steering angle sender, Control unit in dash panel insert, Dash panel insert	366
058 - Airbag systems , (7L6)	367-371
1. Airbag systems , (7L6)	367
2. Driver side belt switch, Front passenger side belt switch, Key operated switch to deactivate front passenger side airbag, Seat occupied sensor, front passenger side, Airbag control unit, Driver side airbag igniter	368
3. Airbag control unit, Front passenger side airbag igniter 1, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1, Side airbag igniter on driver side, Side airbag igniter on front passenger side	369
4. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Rear left body acceleration sender, Rear right body acceleration sender, Airbag control unit	370
5. Airbag control unit, Control unit in dash panel insert, Onboard supply control unit, Data bus diagnostic interface, Dash panel insert, Front passenger side airbag deactivated warning lamp	371
059 - Electrically adjustable and heated exterior mirror	372-375
1. Electrically adjustable and heated exterior mirror	372
2. Mirror adjustment switch, Onboard supply control unit	373
3. Driver door control unit, Onboard supply control unit, Driver side exterior mirror	374
4. Front passenger door control unit, Onboard supply control unit, Front passenger side exterior mirror	375
060 - 1.6l diesel engine , CAYA,CAYB,CAYC	376-392
1. 1.6l diesel engine , CAYA,CAYB,CAYC	376
2. Battery, Starter, Alternator, Starter inhibitor relay, Fuse holder A	377
3. Terminal 30 voltage supply relay, Fuse holder B	378
4. High-pressure sender, Air conditioner compressor regulating valve	379
5. Automatic glow period control unit, Engine control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4	380
6. Accelerator pedal module, Accelerator position sender, Accelerator position sender 2, Low heat output relay, Engine control unit, Fuel supply relay	381
7. Cruise control system switch, Brake light switch, ABS control unit, Onboard supply control unit, Engine control unit	382
8. Lambda probe 1 before catalytic converter, Lambda probe, Air mass meter, Onboard supply control unit, Engine control unit, Lambda probe heater	383
9. Auxiliary heating heater element contact switch, Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Fuel pressure regulating valve, Fuel metering valve	384
10. Engine speed sender, Coolant temperature sender, Throttle valve potentiometer, Fuel temperature sender, Throttle valve module, Engine control unit	385
11. Radiator outlet coolant temperature sender, Exhaust gas temperature sender 1, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine control unit	386
12. Exhaust gas recirculation valve 1, Exhaust gas recirculation potentiometer, Fuel pressure sender, Position sender for charge pressure positioner, Engine control unit, Exhaust gas recirculation control motor	387
13. Intake manifold flap control unit, Hall sender, Intake manifold flap potentiometer, Engine control unit, Intake manifold flap motor	388
14. Intake manifold sender, Charge pressure sender, Intake air temperature sender, Clutch position sender, Pressure differential sender, Engine control unit	389
15. Engine control unit, Heater element relay, Charge pressure control solenoid valve, Heater element for crankcase breather, Exhaust gas recirculation cooler changeover valve, Coolant circulation pump 2	390
16. Fuel gauge sender. Fuel system pressurisation pump. Coolant shortage indicator sender. Control	391

unit in dash panel insert, Dash panel insert	
17. Oil pressure switch, Brake fluid level warning contact, Oil level and oil temperature sender, Control unit in dash panel insert, Dash panel insert	392
061 - 1.6l diesel engine with start/stop system , CAYB	393-412
1. 1.6l diesel engine with start/stop system , CAYB	393
2. Battery, Starter, Alternator, Ignition/starter switch, Battery monitor control unit, Fuse holder A, Fuse holder B	394
3. Terminal 30 voltage supply relay, Fuse holder B	395
4. Onboard supply control unit, Voltage stabiliser, Starter relay 1, Starter relay 2	396
5. High-pressure sender, Air conditioner compressor regulating valve	397
6. Automatic glow period control unit, Engine control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4	398
7. Accelerator pedal module, Accelerator position sender, Accelerator position sender 2, Engine control unit, Fuel supply relay	399
8. Brake light switch, Clutch position sender, ABS control unit, Engine control unit, Terminal 50 voltage supply relay, Mechatronic unit for dual clutch gearbox	400
9. Air mass meter, Power steering control unit, Engine control unit	401
10. Lambda probe 1 before catalytic converter, Lambda probe, Throttle valve potentiometer, Throttle valve module, Engine control unit, Lambda probe heater	402
11. Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Fuel pressure regulating valve, Fuel metering valve	403
12. Exhaust gas recirculation valve 1, Engine speed sender, Coolant temperature sender, Fuel temperature sender, Exhaust gas recirculation potentiometer, Engine control unit, Exhaust gas recirculation control motor	404
13. Fuel pressure sender, Position sender for charge pressure positioner, Engine control unit	405
14. Intake manifold flap control unit, Hall sender, Intake manifold flap potentiometer, Engine control unit, Intake manifold flap motor	406
15. Engine control unit, Heater element relay, Charge pressure control solenoid valve, Heater element for crankcase breather, Exhaust gas recirculation cooler changeover valve, Continued coolant circulation pump	407
16. Radiator outlet coolant temperature sender, Exhaust gas temperature sender 1, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine control unit	408
17. Intake manifold sender, Charge pressure sender, Intake air temperature sender, Pressure differential sender, Gearbox neutral position sender, Engine control unit	409
18. Start/Stop operation button, Data bus diagnostic interface	410
19. Fuel gauge sender, Coolant shortage indicator sender, Control unit in dash panel insert, Dash panel insert	411
20. Oil pressure switch, Brake fluid level warning contact, Oil level and oil temperature sender, Control unit in dash panel insert, Dash panel insert	412
062 - Fuse assignment	413-434
1. Fuse assignment	413
2. Battery, Fuse holder A	414
3. Fuse holder A, Fuse holder C	415
4. Fuse 5, Fuse holder D, Fuse holder E	416
5. Fuse holder B	417
6. Fuse holder B	418
7. Fuse holder B	419
8. Fuse holder B	420
9. Onboard supply control unit, Fuse holder B	421
10. Onboard supply control unit, Fuse holder B	422
11. Onboard supply control unit, Fuse holder B	423
12. Onboard supply control unit, Fuse holder B	424
13. Onboard supply control unit, Fuse holder B	425
14. Onboard supply control unit, Fuse holder B	426
15. Onboard supply control unit, Fuse holder B	427
16. Fuse holder B	428
17. Fuse holder B	429
18. Fuse holder B	430
19. Fuse holder B	431
20. Fuse holder B	432
21. Fuse holder B	433
22. Fuse holder B	434
063 - Basic equipment for models with start/stop system , (7L6),(7L8)	435-456
1. Basic equipment for models with start/stop system , (7L6),(7L8)	435
2. Battery, Starter, Alternator, Battery monitor control unit	436
3. Starter relav 1. Starter relav 2	437

4. Ignition/starter switch, Voltage stabiliser, Fuse holder B	438
5. X-contact relief relay, Fuse holder B	439
6. Light switch, Front and rear fog light switch, Onboard supply control unit, Light switch illumination bulb	440
7. Switch and instrument illumination regulator, Onboard supply control unit	441
8. Steering column combination switch, Onboard supply control unit, Rear window wiper motor, Windscreen and rear window washer pump	442
9. Turn signal switch, Steering column combination switch, Airbag coil connector and return ring with slip ring, Horn plate, Onboard supply control unit, Windscreen wiper motor	443
10. Hazard warning lights button, Heated rear window button, Reversing light switch, Bonnet contact switch, Onboard supply control unit	444
11. Onboard supply control unit, Driver side turn signal repeater bulb, Front passenger side turn signal repeater bulb	445
12. Onboard supply control unit, Front left headlight, Left headlight range control motor	446
13. Onboard supply control unit, Front right headlight, Additional brake light bulb, Right headlight range control motor, Right luggage compartment light	447
14. Onboard supply control unit, Left tail light, Right tail light, Left number plate light, Right number plate light	448
15. Onboard supply control unit, Cigarette lighter illumination bulb, Socket illumination bulb, Cigarette lighter, 12 V socket	449
16. Window regulator switch in front passenger door, Operating unit for window regulator in driver door, Onboard supply control unit	450
17. Driver vanity mirror contact switch, Front passenger vanity mirror contact switch, Onboard supply control unit, Front passenger reading light, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror	451
18. Treble horn, Bass horn, Onboard supply control unit, Left footwell light, Right footwell light, Rear centre reading light	452
19. Onboard supply control unit, Data bus diagnostic interface, Diagnostic connection	453
20. Heater control unit, Onboard supply control unit, Fresh air blower series resistor with overheating fuse, Fresh air blower, Fresh air and air recirculation flap control motor	454
21. Immobiliser reader coil, Parking brake contact switch, Control unit in dash panel insert, Onboard supply control unit, Dash panel insert	455
22. Brake fluid level warning contact, Ambient temperature sensor, Coolant shortage indicator sender, Windscreen washer fluid level sender, Control unit in dash panel insert, Dash panel insert	456
064 - Basic equipment	457-477
1. Basic equipment	457
2. Battery, Starter, Ignition/starter switch, Fuse holder B	458
3. X-contact relief relay, Dipped beam relay, Fuse holder B	459
4. Light switch, Front and rear fog light switch, Onboard supply control unit, Blocking diode 2, Light switch illumination bulb	460
5. Switch and instrument illumination regulator, Onboard supply control unit	461
6. Steering column combination switch, Onboard supply control unit, Rear window wiper motor, Windscreen and rear window washer pump	462
7. Turn signal switch, Steering column combination switch, Airbag coil connector and return ring with slip ring, Horn plate, Onboard supply control unit, Windscreen wiper motor	463
8. Hazard warning lights button, Heated rear window button, Reversing light switch, Bonnet contact switch, Onboard supply control unit	464
9. Onboard supply control unit, Driver side turn signal repeater bulb, Front passenger side turn signal repeater bulb	465
10. Onboard supply control unit, Front left headlight, Left headlight range control motor	466
11. Onboard supply control unit, Front right headlight, High-level brake light bulb, Right headlight range control motor, Right luggage compartment light	467
12. Onboard supply control unit, Left tail light, Right tail light, Left number plate light, Right number plate light	468
13. Onboard supply control unit, Cigarette lighter illumination bulb, Socket illumination bulb, Cigarette lighter, 12 V socket	469
14. Window regulator switch in front passenger door, Operating unit for window regulator in driver door, Onboard supply control unit	470
15. Driver vanity mirror contact switch, Front passenger vanity mirror contact switch, Onboard supply control unit, Front passenger reading light, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror	471
16. Onboard supply control unit, Left footwell light, Right footwell light, Rear centre reading light	472
17. Treble horn, Bass horn, Onboard supply control unit	473
18. Heater control unit, Fresh air blower series resistor with overheating fuse, Fresh air blower, Fresh air and air recirculation flap control motor	474

19. Diagnostic connection	475
20. Immobiliser reader coil, Parking brake contact switch, Control unit in dash panel insert, Dash panel insert	476
21. Brake fluid level warning contact, Ambient temperature sensor, Coolant shortage indicator sender, Windscreen washer fluid level sender, Control unit in dash panel insert, Dash panel insert	477
065 - Multifunction display (MFI)	478-479
1. Multifunction display (MFI)	478
2. Reset button, Ambient temperature sensor, Multifunction indicator, Onboard supply control unit, Dash panel insert	479
066 - Auxiliary air heater (PTC) , (7E6),(7E7)	480-482
1. Auxiliary air heater (PTC) , (7E6),(7E7)	480
2. Low heat output relay, High heat output relay, Engine control unit	481
3. Fuse 1, Fuse 2, Fuse 3, Auxiliary air heater element	482
067 - Panoramic sliding sunroof	483-484
1. Panoramic sliding sunroof	483
2. Sliding sunroof adjustment, Sliding sunroof adjustment regulator, Sunroof button, Sliding sunroof adjustment control unit, Onboard supply control unit, Sliding sunroof motor	484
068 - Fuse assignment	485-514
1. Fuse assignment	485
2. Battery, Battery isolation igniter, Fuse holder A, Fuse holder F	486
3. Fuse holder A	487
4. Fuse holder A, Fuse holder C	488
5. Fuse 5, Fuse holder D, Fuse holder E	489
6. Fuse holder B	490
7. Fuse holder B	491
8. Fuse holder B	492
9. Light switch, Fuse holder B	493
10. Fuse holder B	494
11. Fuse holder B	495
12. Fuse holder B	496
13. Fuse holder B	497
14. Fuse holder B	498
15. Fuse holder B	499
16. Onboard supply control unit, Fuse holder B	500
17. Onboard supply control unit, Fuse holder B	501
18. Onboard supply control unit, Fuse holder B	502
19. Onboard supply control unit, Fuse holder B	503
20. Onboard supply control unit, Fuse holder B	504
21. Fuse holder B	505
22. Fuse holder B	506
23. Fuse holder B	507
24. Fuse holder B	508
25. Fuse holder B	509
26. Fuse holder B	510
27. Fuse holder B	511
28. Fuse holder B	512
29. Fuse holder B	513
30. Fuse holder B	514
069 - 1.4l petrol engine , CGGB	515-527
1. 1.4l petrol engine , CGGB	515
2. Battery, Starter, Alternator, Ignition/starter switch, Starter inhibitor relay, Fuse holder A, Fuse holder B	516
3. Fuel pump relay, Fuel supply relay, Fuse holder B	517
4. High-pressure sender, Air conditioner compressor regulating valve	518
5. Accelerator position sender, Main relay, Engine control unit	519
6. Engine control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	520
7. Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	521
8. Engine speed sender, Hall sender, Coolant temperature sender, Intake manifold pressure sender, Engine control unit	522
9. Brake light switch, Lambda probe, Clutch position sender, ABS control unit, Engine control unit, Lambda probe heater	523
10. Knock sensor 1, Throttle valve module, Onboard supply control unit, Engine control unit	524
11. Lambda probe after catalytic converter, Onboard supply control unit, Engine control unit, Diagnostic connection	525

12. Fuel system pressurisation pump, Control unit in dash panel insert, Dash panel insert	526
13. Oil pressure switch, Brake fluid level warning contact, Oil level and oil temperature sender, Control unit in dash panel insert, Dash panel insert	527
070 - 1.2l petrol engine , CHFA	528-539
1. 1.2l petrol engine , CHFA	528
2. Battery, Starter, Alternator, Ignition/starter switch, Fuse holder A, Fuse holder B	529
3. Fuel pump relay, Fuel supply relay, Fuse holder B	530
4. Accelerator position sender, Accelerator position sender 2, Current supply relay for Simos control unit, Engine control unit	531
5. Engine control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Spark plug 1, Spark plug 2, Spark plug 3	532
6. Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Activated charcoal filter solenoid valve 1	533
7. Engine speed sender, Hall sender, Intake air temperature sender, Coolant temperature sender, Intake manifold pressure sender, Onboard supply control unit, Engine control unit	534
8. Brake light switch, Clutch position sender, ABS control unit, Onboard supply control unit, Engine control unit	535
9. Knock sensor 1, Throttle valve module, Onboard supply control unit, Engine control unit	536
10. Lambda probe, Engine control unit	537
11. Fuel gauge sender, Fuel system pressurisation pump, Coolant shortage indicator sender, Control unit in dash panel insert, Dash panel insert	538
12. Oil pressure switch, Brake fluid level warning contact, Oil level and oil temperature sender, Control unit in dash panel insert, Dash panel insert	539
071 - 1.2l petrol engine , CGPA,CGPB	540-550
1. 1.2l petrol engine , CGPA,CGPB	540
2. Battery, Starter, Ignition/starter switch, Fuse holder A, Fuse holder B	541
3. Fuel pump relay, Fuel supply relay, Fuse holder B	542
4. Accelerator position sender, Accelerator position sender 2, Current supply relay for Simos control unit, Onboard supply control unit, Engine control unit	543
5. Cruise control system switch, Onboard supply control unit, Engine control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage	544
6. Knock sensor 1, Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Activated charcoal filter solenoid valve 1	545
7. Engine speed sender, Hall sender, Intake air temperature sender, Coolant temperature sender, Intake manifold pressure sender, Engine control unit	546
8. Brake light switch, Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Throttle valve module, Engine control unit	547
9. Lambda probe, Lambda probe after catalytic converter, Clutch position sender, Engine control unit, Lambda probe heater, Lambda probe 1 heater after catalytic converter	548
10. Fuel gauge sender, Fuel gauge, Fuel system pressurisation pump, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Reserve fuel warning lamp	549
11. Oil pressure switch, Oil level and oil temperature sender, Control unit in dash panel insert, Dash panel insert, Oil pressure warning lamp	550
072 - Anti-lock brake system (ABS) with electronic stabilisation program (ESP)	551-556
1. Anti-lock brake system (ABS) with electronic stabilisation program (ESP)	551
2. ABS control unit, Fuse holder A, Fuse holder B, Fuse holder F	552
3. TCS and ESP button, Tyre Pressure Loss Indicator button, ABS control unit	553
4. Brake light switch, ABS control unit, Onboard supply control unit	554
5. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, Front left speed sensor, ESP sensor unit, ABS control unit	555
6. Brake fluid level warning contact, Parking brake contact switch, Steering angle sender, Control unit in dash panel insert, Dash panel insert	556
073 - Anti-lock brake system (ABS) , (1AC)	557-562
1. Anti-lock brake system (ABS) , (1AC)	557
2. ABS control unit, Fuse holder A, Fuse holder B	558
3. Brake light switch, ABS control unit	559
4. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, Front left speed sensor, ABS control unit	560
5. Tyre Pressure Loss Indicator button, ABS control unit, Onboard supply control unit	561
6. Brake fluid level warning contact, Parking brake contact switch, Control unit in dash panel insert, Onboard supply control unit, Dash panel insert	562
074 - 1.2l diesel engine , CFWA	563-579
1. 1.2l diesel engine , CFWA	563
2. Battery, Starter, Alternator with voltage regulator, Ignition/starter switch, Fuse holder A, Fuse holder B	564

3. Terminal 30 voltage supply relay, Fuse holder B	565
4. Onboard supply control unit	566
5. Auxiliary heating heater element contact switch, Automatic glow period control unit, Engine control unit, Glow plug 1, Glow plug 2, Glow plug 3	567
6. Accelerator pedal module, Accelerator position sender, Accelerator position sender 2, Engine control unit, Fuel supply relay	568
7. Brake light switch, Air mass meter, Clutch position sender, ABS control unit, Engine control unit	569
8. Power steering control unit, Engine control unit	570
9. Lambda probe 1 before catalytic converter, Charge pressure sender, Lambda probe, Intake air temperature sender, Throttle valve potentiometer, Throttle valve module, Engine control unit, Lambda probe heater	571
10. Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Fuel pressure regulating valve, Fuel metering valve	572
11. Exhaust gas recirculation valve 1, Engine speed sender, Coolant temperature sender, Fuel temperature sender, Exhaust gas recirculation potentiometer, Engine control unit, Exhaust gas recirculation control motor	573
12. Intake manifold flap control unit, Hall sender, Fuel pressure sender, Intake manifold flap potentiometer, Position sender for charge pressure positioner, Engine control unit, Intake manifold flap motor	574
13. Engine control unit, Charge pressure control solenoid valve, Exhaust gas recirculation cooler changeover valve, Coolant circulation pump 2	575
14. Radiator outlet coolant temperature sender, Exhaust gas temperature sender 1, Exhaust gas temperature sender 3, Pressure differential sender, Exhaust gas temperature sender 4, Engine control unit, Heater element for crankcase breather	576
15. Radiator fan thermal switch, High-pressure sender, Air conditioner compressor regulating valve, Radiator fan	577
16. Fuel gauge sender, Coolant shortage indicator sender, Control unit in dash panel insert, Dash panel insert	578
17. Oil pressure switch, Brake fluid level warning contact, Oil level and oil temperature sender, Control unit in dash panel insert, Dash panel insert	579
075 - 1.2l petrol engine , CGPA,CGPB	580-591
1. 1.2l petrol engine , CGPA,CGPB	580
2. Battery, Starter, Ignition/starter switch, Fuse holder A, Fuse holder B	581
3. Fuel pump relay, Fuel supply relay, Fuse holder B	582
4. High-pressure sender, Air conditioner compressor regulating valve	583
5. Accelerator position sender, Accelerator position sender 2, Terminal 30 voltage supply relay, Onboard supply control unit, Engine control unit	584
6. Onboard supply control unit, Engine control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage	585
7. Cruise control system switch, Knock sensor 1, Onboard supply control unit, Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Activated charcoal filter solenoid valve 1	586
8. Engine speed sender, Hall sender, Intake air temperature sender, Coolant temperature sender, Intake manifold pressure sender, Engine control unit	587
9. Brake light switch, Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Clutch position sender, Throttle valve module, Engine control unit	588
10. Lambda probe, Lambda probe after catalytic converter, Engine control unit, Lambda probe heater, Lambda probe 1 heater after catalytic converter	589
11. Fuel gauge sender, Fuel gauge, Fuel system pressurisation pump, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Reserve fuel warning lamp	590
12. Oil pressure switch, Oil level and oil temperature sender, Control unit in dash panel insert, Dash panel insert, Oil pressure warning lamp	591
076 - 1.2l petrol engine with start/stop system , CGPA,(7L6),(7L8)	592-605
1. 1.2l petrol engine with start/stop system , CGPA,(7L6),(7L8)	592
2. Battery, Starter, Ignition/starter switch, Battery monitor control unit, Fuse holder A, Fuse holder B	593
3. Fuel pump relay, Fuel supply relay, Fuse holder B	594
4. High-pressure sender, Air conditioner compressor regulating valve	595
5. Accelerator position sender, Accelerator position sender 2, Terminal 30 voltage supply relay, Onboard supply control unit, Engine control unit	596
6. Onboard supply control unit, Engine control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage	597
7. Cruise control system switch, Knock sensor 1, Onboard supply control unit, Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Activated charcoal filter solenoid valve 1	598

8. Engine speed sender, Hall sender, Intake air temperature sender, Coolant temperature sender, Intake manifold pressure sender, Brake servo pressure sensor, Gearbox neutral position sender, Engine control unit	599
9. Brake light switch, Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Clutch position sender, Throttle valve module, Engine control unit	600
10. Lambda probe, Lambda probe after catalytic converter, Engine control unit, Lambda probe heater, Lambda probe 1 heater after catalytic converter	601
11. Voltage stabiliser, Starter relay 1, Starter relay 2	602
12. Start/Stop operation button, Data bus diagnostic interface	603
13. Fuel gauge sender, Fuel gauge, Fuel system pressurisation pump, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Reserve fuel warning lamp	604
14. Oil pressure switch, Oil level and oil temperature sender, Control unit in dash panel insert, Dash panel insert, Oil pressure warning lamp	605
077 - 1.6l diesel engine , CAYA,CAYB,CAYC	606-622
1. 1.6l diesel engine , CAYA,CAYB,CAYC	606
2. Battery, Starter, Alternator, Starter inhibitor relay, Fuse holder A	607
3. Terminal 30 voltage supply relay, Fuse holder B	608
4. High-pressure sender, Air conditioner compressor regulating valve	609
5. Automatic glow period control unit, Engine control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4	610
6. Accelerator pedal module, Accelerator position sender, Accelerator position sender 2, Low heat output relay, Engine control unit, Fuel supply relay	611
7. Cruise control system switch, Brake light switch, ABS control unit, Onboard supply control unit, Engine control unit	612
8. Lambda probe 1 before catalytic converter, Lambda probe, Air mass meter, Onboard supply control unit, Engine control unit, Lambda probe heater	613
9. Auxiliary heating heater element contact switch, Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Fuel pressure regulating valve, Fuel metering valve	614
10. Engine speed sender, Coolant temperature sender, Throttle valve potentiometer, Fuel temperature sender, Throttle valve module, Engine control unit	615
11. Radiator outlet coolant temperature sender, Exhaust gas temperature sender 1, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine control unit	616
12. Exhaust gas recirculation valve 1, Exhaust gas recirculation potentiometer, Fuel pressure sender, Position sender for charge pressure positioner, Engine control unit, Exhaust gas recirculation control motor	617
13. Hall sender, Clutch position sender, Engine control unit	618
14. Intake manifold sender, Charge pressure sender, Intake air temperature sender, Pressure differential sender, Engine control unit	619
15. Engine control unit, Heater element relay, Charge pressure control solenoid valve, Heater element for crankcase breather, Exhaust gas recirculation cooler changeover valve, Coolant circulation pump 2	620
16. Fuel gauge sender, Fuel system pressurisation pump, Coolant shortage indicator sender, Control unit in dash panel insert, Dash panel insert	621
17. Oil pressure switch, Brake fluid level warning contact, Oil level and oil temperature sender, Control unit in dash panel insert, Dash panel insert	622
078 - 1.6l diesel engine with start/stop system , CAYB	623-641
1. 1.6l diesel engine with start/stop system , CAYB	623
2. Battery, Starter, Alternator with voltage regulator, Ignition/starter switch, Battery monitor control unit, Fuse holder A, Fuse holder B	624
3. Terminal 30 voltage supply relay, Fuse holder B	625
4. Onboard supply control unit, Voltage stabiliser, Starter relay 1, Starter relay 2	626
5. High-pressure sender, Air conditioner compressor regulating valve	627
6. Auxiliary heating heater element contact switch, Automatic glow period control unit, Engine control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4	628
7. Accelerator pedal module, Accelerator position sender, Accelerator position sender 2, Engine control unit, Fuel supply relay	629
8. Brake light switch, Clutch position sender, ABS control unit, Engine control unit, Terminal 50 voltage supply relay, Mechatronic unit for dual clutch gearbox	630
9. Air mass meter, Power steering control unit, Engine control unit	631
10. Lambda probe 1 before catalytic converter, Lambda probe, Throttle valve potentiometer, Throttle valve module, Engine control unit, Lambda probe heater	632
11. Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Fuel pressure regulating valve, Fuel metering valve	633
12. Exhaust gas recirculation valve 1. Engine speed sender. Coolant temperature sender. Fuel	634

temperature sender, Exhaust gas recirculation potentiometer, Engine control unit, Exhaust gas recirculation control motor	
13. Hall sender, Fuel pressure sender, Position sender for charge pressure positioner, Engine control unit	635
14. Engine control unit, Heater element relay, Charge pressure control solenoid valve, Heater element for crankcase breather, Exhaust gas recirculation cooler changeover valve, Continued coolant circulation pump	636
15. Radiator outlet coolant temperature sender, Exhaust gas temperature sender 1, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine control unit	637
16. Intake manifold sender, Charge pressure sender, Intake air temperature sender, Pressure differential sender, Gearbox neutral position sender, Engine control unit	638
17. Start/Stop operation button, Data bus diagnostic interface	639
18. Fuel gauge sender, Coolant shortage indicator sender, Control unit in dash panel insert, Dash panel insert	640
19. Oil pressure switch, Brake fluid level warning contact, Oil level and oil temperature sender, Control unit in dash panel insert, Dash panel insert	641
079 - Basic equipment , (7L6),(7L8)	642-663
1. Basic equipment , (7L6),(7L8)	642
2. Battery, Starter, Alternator, Battery monitor control unit	643
3. Starter relay 1, Starter relay 2	644
4. Ignition/starter switch, Voltage stabiliser, Fuse holder B	645
5. X-contact relief relay, Fuse holder B	646
6. Light switch, Front and rear fog light switch, Onboard supply control unit, Light switch illumination bulb	647
7. Switch and instrument illumination regulator, Onboard supply control unit	648
8. Steering column combination switch, Onboard supply control unit, Rear window wiper motor, Windscreen and rear window washer pump	649
9. Turn signal switch, Steering column combination switch, Airbag coil connector and return ring with slip ring, Horn plate, Onboard supply control unit, Windscreen wiper motor	650
10. Hazard warning lights button, Heated rear window button, Reversing light switch, Bonnet contact switch, Onboard supply control unit	651
11. Onboard supply control unit, Driver side turn signal repeater bulb, Front passenger side turn signal repeater bulb	652
12. Onboard supply control unit, Front left headlight, Left headlight range control motor	653
13. Onboard supply control unit, Front right headlight, High-level brake light bulb, Right headlight range control motor, Right luggage compartment light	654
14. Onboard supply control unit, Left tail light, Right tail light, Left number plate light, Right number plate light	655
15. Onboard supply control unit, Cigarette lighter illumination bulb, Cigarette lighter	656
16. Window regulator switch in front passenger door, Operating unit for window regulator in driver door, Onboard supply control unit	657
17. Driver vanity mirror contact switch, Front passenger vanity mirror contact switch, Onboard supply control unit, Front passenger reading light, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror	658
18. Treble horn, Bass horn, Onboard supply control unit, Left footwell light, Right footwell light, Rear centre reading light	659
19. Onboard supply control unit, Data bus diagnostic interface, Diagnostic connection	660
20. Heater control unit, Fresh air blower series resistor with overheating fuse, Fresh air blower, Fresh air and air recirculation flap control motor	661
21. Immobiliser reader coil, Parking brake contact switch, Control unit in dash panel insert, Dash panel insert	662
22. Brake fluid level warning contact, Ambient temperature sensor, Coolant shortage indicator sender, Windscreen washer fluid level sender, Control unit in dash panel insert, Dash panel insert	663
080 - Basic equipment	664-684
1. Basic equipment	664
2. Battery, Starter, Ignition/starter switch, Fuse holder B	665
3. X-contact relief relay, Dipped beam relay, Fuse holder B	666
4. Light switch, Front and rear fog light switch, Onboard supply control unit, Blocking diode 2, Light switch illumination bulb	667
5. Switch and instrument illumination regulator, Onboard supply control unit	668
6. Steering column combination switch, Onboard supply control unit, Rear window wiper motor, Windscreen and rear window washer pump	669
7. Turn signal switch, Steering column combination switch, Airbag coil connector and return ring with slip ring, Horn plate, Onboard supply control unit, Windscreen wiper motor	670
8. Hazard warning lights button, Heated rear window button, Reversing light switch, Onboard supply control unit	671

9. Bonnet contact switch, Onboard supply control unit, Driver side turn signal repeater bulb, Front passenger side turn signal repeater bulb	672
10. Onboard supply control unit, Front left headlight, Left headlight range control motor	673
11. Onboard supply control unit, Front right headlight, High-level brake light bulb, Right headlight range control motor, Right luggage compartment light	674
12. Onboard supply control unit, Left tail light, Right tail light, Left number plate light, Right number plate light	675
13. Onboard supply control unit, Cigarette lighter illumination bulb, Cigarette lighter	676
14. Window regulator switch in front passenger door, Operating unit for window regulator in driver door, Onboard supply control unit	677
15. Driver vanity mirror contact switch, Front passenger vanity mirror contact switch, Onboard supply control unit, Front passenger reading light, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror	678
16. Onboard supply control unit, Left footwell light, Right footwell light, Rear centre reading light	679
17. Treble horn, Bass horn, Onboard supply control unit	680
18. Heater control unit, Fresh air blower series resistor with overheating fuse, Fresh air blower, Fresh air and air recirculation flap control motor	681
19. Diagnostic connection	682
20. Immobiliser reader coil, Parking brake contact switch, Control unit in dash panel insert, Dash panel insert	683
21. Brake fluid level warning contact, Ambient temperature sensor, Coolant shortage indicator sender, Windscreen washer fluid level sender, Control unit in dash panel insert, Dash panel insert	684
081 - Cruise control system (CCS)	685-687
1. Cruise control system (CCS)	685
2. Cruise control system switch, Cruise control system (CCS) SET button, Blocking diode, Onboard supply control unit, Steering column electronics control unit	686
3. Control unit in dash panel insert, Onboard supply control unit, Dash panel insert	687
082 - Airbag systems	688-692
1. Airbag systems	688
2. Driver side belt switch, Front passenger side belt switch, Battery master/isolator switch, Key operated switch to deactivate front passenger side airbag, Airbag coil connector and return ring with slip ring, Seat occupied sensor, front passenger side, Airbag control unit, Driver side airbag igniter, Front passenger side airbag igniter 1	689
3. Airbag control unit, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1, Side airbag igniter on driver side, Side airbag igniter on front passenger side	690
4. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on passenger side, Airbag control unit, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter	691
5. Airbag control unit, Control unit in dash panel insert, Onboard supply control unit, Dash panel insert, Front passenger side airbag deactivated warning lamp, Diagnostic connection	692
083 - Airbag systems , (7L6)	693-697
1. Airbag systems , (7L6)	693
2. Driver side belt switch, Front passenger side belt switch, Key operated switch to deactivate front passenger side airbag, Seat occupied sensor, front passenger side, Airbag control unit, Driver side airbag igniter	694
3. Airbag control unit, Front passenger side airbag igniter 1, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1, Side airbag igniter on driver side, Side airbag igniter on front passenger side	695
4. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Rear left body acceleration sender, Rear right body acceleration sender, Airbag control unit	696
5. Airbag control unit, Control unit in dash panel insert, Onboard supply control unit, Data bus diagnostic interface, Dash panel insert, Front passenger side airbag deactivated warning lamp	697
084 - Dual headlight , (7L3)	698-701
1. Dual headlight , (7L3)	698
2. Dipped beam relay	699
3. Onboard supply control unit, Front left headlight	700
4. Onboard supply control unit, Front right headlight	701
085 - Dual headlight , (7L6),(7L8)	702-705
1. Dual headlight , (7L6),(7L8)	702
2. Headlight dipper and flasher switch	703
3. Onboard supply control unit, Front left headlight	704
4. Onboard supply control unit, Front right headlight	705
086 - 1.2l petrol engine , CGPA,CGPB	706-717
1. 1.2l petrol engine , CGPA,CGPB	706
2. Batterv. Starter. Ignition/starter switch. Fuse holder A. Fuse holder B	707

3. Fuel pump relay, Fuel supply relay, Fuse holder B	708
4. High-pressure sender, Air conditioner compressor regulating valve	709
5. Accelerator position sender, Accelerator position sender 2, Terminal 30 voltage supply relay, Onboard supply control unit, Engine control unit	710
6. Onboard supply control unit, Engine control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage	711
7. Cruise control system switch, Knock sensor 1, Onboard supply control unit, Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Activated charcoal filter solenoid valve 1	712
8. Engine speed sender, Hall sender, Intake air temperature sender, Coolant temperature sender, Intake manifold pressure sender, Engine control unit	713
9. Brake light switch, Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Clutch position sender, Throttle valve module, Engine control unit	714
10. Lambda probe, Lambda probe after catalytic converter, Engine control unit, Lambda probe heater, Lambda probe 1 heater after catalytic converter	715
11. Fuel gauge sender, Fuel gauge, Fuel system pressurisation pump, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Reserve fuel warning lamp	716
12. Oil pressure switch, Oil level and oil temperature sender, Control unit in dash panel insert, Dash panel insert, Oil pressure warning lamp	717
087 - 1.2l petrol engine with start/stop system , CGPA,(7L6),(7L8)	718-731
1. 1.2l petrol engine with start/stop system , CGPA,(7L6),(7L8)	718
2. Battery, Starter, Alternator, Ignition/starter switch, Battery monitor control unit, Fuse holder A, Fuse holder B	719
3. Fuel pump relay, Fuel supply relay, Fuse holder B	720
4. High-pressure sender, Air conditioner compressor regulating valve	721
5. Accelerator position sender, Accelerator position sender 2, Terminal 30 voltage supply relay, Onboard supply control unit, Engine control unit	722
6. Onboard supply control unit, Engine control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage	723
7. Cruise control system switch, Knock sensor 1, Onboard supply control unit, Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Activated charcoal filter solenoid valve 1	724
8. Engine speed sender, Hall sender, Intake air temperature sender, Coolant temperature sender, Intake manifold pressure sender, Brake servo pressure sensor, Gearbox neutral position sender, Engine control unit	725
9. Brake light switch, Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Clutch position sender, Throttle valve module, Engine control unit	726
10. Lambda probe, Lambda probe after catalytic converter, Engine control unit, Lambda probe heater, Lambda probe 1 heater after catalytic converter	727
11. Voltage stabiliser, Starter relay 1, Starter relay 2	728
12. Start/Stop operation button, Data bus diagnostic interface	729
13. Fuel gauge sender, Fuel gauge, Fuel system pressurisation pump, Control unit in dash panel insert, Terminal 50 voltage supply relay, Dash panel insert, Alternator warning lamp, Reserve fuel warning lamp	730
14. Oil pressure switch, Oil level and oil temperature sender, Control unit in dash panel insert, Dash panel insert, Oil pressure warning lamp	731
090 - 1.6l petrol engine , CLSA	732-743
1. 1.6l petrol engine , CLSA	732
2. Battery, Starter, Alternator, Ignition/starter switch, Onboard supply control unit, Fuse holder A, Fuse holder B	733
3. Fuel pump relay, Fuel supply relay, Fuse holder B	734
4. Accelerator position sender, Terminal 30 voltage supply relay, Engine control unit	735
5. Engine control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	736
6. Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Activated charcoal filter solenoid valve 1, Camshaft control valve 1	737
7. Engine speed sender, Hall sender, Intake air temperature sender, Coolant temperature sender, Intake manifold pressure sender, Engine control unit	738
8. Knock sensor 1, Throttle valve module, Engine control unit	739
9. Brake light switch, Lambda probe, Clutch position sender, Onboard supply control unit, Engine control unit, Lambda probe heater	740
10. ABS control unit, Onboard supply control unit, Engine control unit, Diagnostic connection	741
11. Fuel gauge sender, Fuel gauge, Fuel system pressurisation pump, Coolant shortage indicator sender. Control unit in dash panel insert. Dash panel insert. Alternator warning lamp	742

12. Oil pressure switch, Brake fluid level warning contact, Oil level and oil temperature sender, Control unit in dash panel insert, Dash panel insert, Oil pressure warning lamp	743
091 - 1.4l petrol engine , CLPA	744-755
1. 1.4l petrol engine , CLPA	744
2. Battery, Starter, Alternator, Ignition/starter switch, Onboard supply control unit, Fuse holder A, Fuse holder B	745
3. Fuel pump relay, Fuel supply relay, Fuse holder B	746
4. Accelerator position sender, Terminal 30 voltage supply relay, Engine control unit	747
5. Engine control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	748
6. Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Activated charcoal filter solenoid valve 1	749
7. Engine speed sender, Hall sender, Intake air temperature sender, Coolant temperature sender, Intake manifold pressure sender, Engine control unit	750
8. Knock sensor 1, Throttle valve module, Engine control unit	751
9. Brake light switch, Lambda probe, Clutch position sender, Onboard supply control unit, Engine control unit, Lambda probe heater	752
10. ABS control unit, Onboard supply control unit, Engine control unit, Diagnostic connection	753
11. Fuel gauge sender, Fuel gauge, Fuel system pressurisation pump, Coolant shortage indicator sender, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	754
12. Oil pressure switch, Brake fluid level warning contact, Oil level and oil temperature sender, Control unit in dash panel insert, Dash panel insert, Oil pressure warning lamp	755
092 - 1.6l petrol engine , CLSA	756-767
1. 1.6l petrol engine , CLSA	756
2. Battery, Starter, Alternator, Ignition/starter switch, Onboard supply control unit, Fuse holder A, Fuse holder B	757
3. Fuel pump relay, Fuel supply relay, Fuse holder B	758
4. Accelerator position sender, Terminal 30 voltage supply relay, Engine control unit	759
5. Engine control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	760
6. Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Activated charcoal filter solenoid valve 1, Camshaft control valve 1	761
7. Engine speed sender, Hall sender, Intake air temperature sender, Coolant temperature sender, Intake manifold pressure sender, Engine control unit	762
8. Knock sensor 1, Throttle valve module, Engine control unit	763
9. Brake light switch, Lambda probe, Clutch position sender, Onboard supply control unit, Engine control unit, Lambda probe heater	764
10. ABS control unit, Onboard supply control unit, Engine control unit, Diagnostic connection	765
11. Fuel gauge sender, Fuel gauge, Fuel system pressurisation pump, Coolant shortage indicator sender, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	766
12. Oil pressure switch, Brake fluid level warning contact, Oil level and oil temperature sender, Control unit in dash panel insert, Dash panel insert, Oil pressure warning lamp	767
093 - 1.4l petrol engine , CLPA	768-779
1. 1.4l petrol engine , CLPA	768
2. Battery, Starter, Alternator, Ignition/starter switch, Onboard supply control unit, Fuse holder A, Fuse holder B	769
3. Fuel pump relay, Fuel supply relay, Fuse holder B	770
4. Accelerator position sender, Terminal 30 voltage supply relay, Engine control unit	771
5. Engine control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	772
6. Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Activated charcoal filter solenoid valve 1	773
7. Engine speed sender, Hall sender, Intake air temperature sender, Coolant temperature sender, Intake manifold pressure sender, Engine control unit	774
8. Knock sensor 1, Throttle valve module, Engine control unit	775
9. Brake light switch, Lambda probe, Clutch position sender, Onboard supply control unit, Engine control unit, Lambda probe heater	776
10. ABS control unit, Onboard supply control unit, Engine control unit, Diagnostic connection	777
11. Fuel gauge sender, Fuel gauge, Fuel system pressurisation pump, Coolant shortage indicator sender, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	778
12. Oil pressure switch, Brake fluid level warning contact, Oil level and oil temperature sender, Control unit in dash panel insert, Dash panel insert, Oil pressure warning lamp	779
094 - 1.6l diesel engine , CLNA	780-795
1. 1.6l diesel engine , CLNA	780
2. Battery, Starter, Alternator, Starter inhibitor relay, Fuse holder A, Fuse holder B	781
3. Terminal 30 voltage supply relay, Fuse holder B	782

4. Automatic glow period control unit, Engine control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4	783
5. Accelerator pedal module, Accelerator position sender, Accelerator position sender 2, Low heat output relay, Engine control unit, Fuel supply relay	784
6. Cruise control system switch, Brake light switch, ABS control unit, Onboard supply control unit, Engine control unit	785
7. Lambda probe 1 before catalytic converter, Lambda probe, Air mass meter, Onboard supply control unit, Engine control unit, Lambda probe heater	786
8. Auxiliary heating heater element contact switch, Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Fuel pressure regulating valve, Fuel metering valve	787
9. Engine speed sender, Coolant temperature sender, Throttle valve potentiometer, Fuel temperature sender, Throttle valve module, Engine control unit	788
10. Radiator outlet coolant temperature sender, Exhaust gas temperature sender 1, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine control unit	789
11. Exhaust gas recirculation valve 1, Exhaust gas recirculation potentiometer, Fuel pressure sender, Position sender for charge pressure positioner, Engine control unit, Exhaust gas recirculation control motor	790
12. Clutch position sender, Engine control unit	791
13. Intake manifold sender, Charge pressure sender, Intake air temperature sender, Pressure differential sender, Engine control unit	792
14. Engine control unit, Heater element relay, Charge pressure control solenoid valve, Heater element for crankcase breather, Exhaust gas recirculation cooler changeover valve, Coolant circulation pump 2	793
15. Fuel gauge sender, Fuel system pressurisation pump, Coolant shortage indicator sender, Control unit in dash panel insert, Dash panel insert	794
16. Oil pressure switch, Brake fluid level warning contact, Oil level and oil temperature sender, Control unit in dash panel insert, Dash panel insert	795
095 - 1.6l diesel engine , CAYC,CLNA	796-812
1. 1.6l diesel engine , CAYC,CLNA	796
2. Battery, Starter, Alternator, Starter inhibitor relay, Fuse holder A, Fuse holder B	797
3. Terminal 30 voltage supply relay, Fuse holder B	798
4. Automatic glow period control unit, Engine/motor control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4	799
5. Accelerator pedal module, Accelerator position sender, Accelerator position sender 2, Low heat output relay, High heat output relay, Engine/motor control unit, Fuel supply relay	800
6. Cruise control system switch, Brake light switch, ABS control unit, Onboard supply control unit, Engine/motor control unit	801
7. Lambda probe 1 before catalytic converter, Lambda probe, Air mass meter, Onboard supply control unit, Engine/motor control unit, Lambda probe heater	802
8. Auxiliary heating heater element contact switch, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Fuel pressure regulating valve, Fuel metering valve	803
9. Engine speed sender, Coolant temperature sender, Throttle valve potentiometer, Fuel temperature sender, Throttle valve module, Engine/motor control unit	804
10. Radiator outlet coolant temperature sender, Exhaust gas temperature sender 1, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine/motor control unit	805
11. Exhaust gas recirculation valve 1, Exhaust gas recirculation potentiometer, Fuel pressure sender, Position sender for charge pressure positioner, Engine/motor control unit, Exhaust gas recirculation control motor	806
12. Clutch position sender, Engine/motor control unit	807
13. Intake manifold sender, Charge pressure sender, Intake air temperature sender, Pressure differential sender, Engine/motor control unit	808
14. Engine/motor control unit, Heater element relay, Charge pressure control solenoid valve, Heater element for crankcase breather, Exhaust gas recirculation cooler changeover valve, Coolant circulation pump 2	809
15. High-pressure sender, Air conditioner compressor regulating valve	810
16. Fuel gauge sender, Fuel system pressurisation pump, Coolant shortage indicator sender, Control unit in dash panel insert, Dash panel insert	811
17. Oil pressure switch, Brake fluid level warning contact, Oil level and oil temperature sender, Control unit in dash panel insert, Dash panel insert	812
096 - 6-speed automatic gearbox	813-819
1. 6-speed automatic gearbox	813
2. Multifunction switch, Starter inhibitor relay, Automatic gearbox control unit, Onboard supply control unit	814
3. Automatic gearbox control unit. Solenoid valve 1. Solenoid valve 2. Solenoid valve 3. Solenoid	815

valve 4, Solenoid valve 5, Solenoid valve 6, Solenoid valve 9, Solenoid valve 10	
4. Gearbox oil temperature sender, Gearbox input speed sender, Gearbox output speed sender, Automatic gearbox control unit	816
5. Tiptronic switch, Selector lever locked in position P switch, Automatic gearbox control unit	817
6. Tiptronic switch, Automatic gearbox control unit, Selector lever display illumination bulb, Selector lever lock solenoid, Selector lever position display	818
7. Multifunction indicator, Control unit in dash panel insert	819
100 - 1.4l petrol engine (BiFuel) , CMAA	820-836
1. 1.4l petrol engine (BiFuel) , CMAA	820
2. Battery, Starter, Alternator, Ignition/starter switch, Fuse holder A, Fuse 2 in fuse holder A, Fuse holder B	821
3. Fuel pump relay, Fuel supply relay, Fuse holder B	822
4. Accelerator position sender, Terminal 30 voltage supply relay, Engine control unit	823
5. Engine control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	824
6. Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	825
7. Engine speed sender, Hall sender, Coolant temperature sender, Intake manifold pressure sender, Engine control unit	826
8. Brake light switch, Clutch position sender, ABS control unit, Engine control unit	827
9. Knock sensor 1, Throttle valve module, Onboard supply control unit, Engine control unit	828
10. Lambda probe after catalytic converter, Onboard supply control unit, Engine control unit	829
11. Engine control unit, Gas mode control unit	830
12. Gas mode control unit, Gas injection valve 1, Gas injection valve 2, Gas injection valve 3, Gas injection valve 4, High-pressure valve for gas mode, Gas tank valve	831
13. Petrol or gas fuel selection switch, Gas gauge, Gas gauge sender, Gas mode control unit	832
14. Gas rail sensor, Gas mode control unit	833
15. Diagnostic connection	834
16. Fuel system pressurisation pump, Control unit in dash panel insert, Dash panel insert	835
17. Oil pressure switch, Brake fluid level warning contact, Oil level and oil temperature sender, Control unit in dash panel insert, Dash panel insert	836
101 - 1.6l petrol engine (BiFuel) , CNKA	837-853
1. 1.6l petrol engine (BiFuel) , CNKA	837
2. Battery, Starter, Alternator, Ignition/starter switch, Fuse holder A	838
3. Fuel pump relay, Fuel supply relay	839
4. Accelerator position sender, Terminal 30 voltage supply relay, Engine control unit	840
5. Engine control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	841
6. Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Activated charcoal filter solenoid valve 1	842
7. Engine speed sender, Hall sender, Coolant temperature sender, Intake manifold pressure sender, Engine control unit	843
8. Brake light switch, Clutch position sender, ABS control unit, Engine control unit	844
9. Knock sensor 1, Throttle valve module, Onboard supply control unit, Engine control unit	845
10. Lambda probe, Lambda probe after catalytic converter, Onboard supply control unit, Engine control unit	846
11. Engine control unit, Gas mode control unit	847
12. Gas mode control unit, Gas injection valve 1, Gas injection valve 2, Gas injection valve 3, Gas injection valve 4, High-pressure valve for gas mode	848
13. Petrol or gas fuel selection switch, Gas gauge sender, Gas mode control unit	849
14. Gas rail temperature and pressure sensor, Gas mode control unit, Gas tank valve	850
15. Diagnostic connection	851
16. Fuel system pressurisation pump, Coolant shortage indicator sender, Control unit in dash panel insert, Dash panel insert	852
17. Oil pressure switch, Brake fluid level warning contact, Oil level and oil temperature sender, Control unit in dash panel insert, Dash panel insert	853
102 - 1.4l petrol engine (BiFuel) , CMAA	854-870
1. 1.4l petrol engine (BiFuel) , CMAA	854
2. Battery, Starter, Alternator, Ignition/starter switch, Fuse holder A, Fuse 2 on fuse holder A, Fuse holder B	855
3. Fuel pump relay, Fuel supply relay, Fuse holder B	856
4. Accelerator position sender, Terminal 30 voltage supply relay, Engine control unit	857
5. Engine control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	858
6. Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	859

7. Engine speed sender, Hall sender, Coolant temperature sender, Intake manifold pressure sender, Engine control unit	860
8. Brake light switch, Clutch position sender, ABS control unit, Engine control unit	861
9. Knock sensor 1, Throttle valve module, Onboard supply control unit, Engine control unit	862
10. Lambda probe after catalytic converter, Onboard supply control unit, Engine control unit	863
11. Engine control unit, Gas mode control unit	864
12. Gas mode control unit, Gas injection valve 1, Gas injection valve 2, Gas injection valve 3, Gas injection valve 4, High-pressure valve for gas mode, Gas tank valve	865
13. Petrol or gas fuel selection switch, Gas gauge, Gas gauge sender, Gas mode control unit	866
14. Gas rail sensor, Gas mode control unit	867
15. Diagnostic connection	868
16. Fuel system pressurisation pump, Control unit in dash panel insert, Dash panel insert	869
17. Oil pressure switch, Brake fluid level warning contact, Oil level and oil temperature sender, Control unit in dash panel insert, Dash panel insert	870
103 - 1.4l petrol engine with start/stop system , CPTA	871-887
1. 1.4l petrol engine with start/stop system , CPTA	871
2. Battery, Starter, Alternator, Fuse holder A	872
3. Main relay, Engine control unit	873
4. Engine control unit, Starter relay 1, Starter relay 2	874
5. Throttle valve module, Engine control unit, Injector, cylinder 1, Injector, cylinder 4	875
6. Engine control unit, Ignition coil 1 with output stage, Ignition coil 4 with output stage	876
7. Brake light switch, Knock sensor 1, Clutch position sender, Engine control unit	877
8. Accelerator position sender, Brake servo pressure sensor, Engine control unit, Fuel pressure regulating valve, Charge air cooling pump	878
9. Engine control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1, Valve for oil pressure control	879
10. Engine control unit, Inlet cam actuator for cylinder 2, Exhaust cam actuator for cylinder 2, Inlet cam actuator for cylinder 3, Exhaust cam actuator for cylinder 3	880
11. Coolant temperature sender, Position sender for charge pressure positioner, Engine control unit	881
12. Hall sender, Intake manifold pressure sender, Fuel pressure sender, Hall sender 3, Engine control unit	882
13. Engine speed sender, Charge pressure sender, Radiator outlet coolant temperature sender, Engine control unit	883
14. Lambda probe, Lambda probe after catalytic converter, Engine control unit	884
15. Cruise control system switch, Start/Stop operation button, Oil pressure switch, Engine control unit	885
16. Fuel system pressurisation pump, Control unit in dash panel insert, Fuel pump control unit, Engine control unit	886
17. Oil pressure switch for reduced oil pressure, Oil level and oil temperature sender, Control unit in dash panel insert	887
104 - Auxiliary air heater (PTC)	888-890
1. Auxiliary air heater (PTC)	888
2. Low heat output relay, High heat output relay, Engine control unit	889
3. Engine control unit, Fuse 1, Fuse 2, Fuse 3, Auxiliary air heater element	890
105 - Anti-lock brake system (ABS) with electronic stabilisation program (ESP) , (7L6),(7L8)	891-896
1. Anti-lock brake system (ABS) with electronic stabilisation program (ESP) , (7L6),(7L8)	891
2. ABS control unit, Voltage stabiliser 2	892
3. Button for TCS and electronic stabilisation program, Tyre Pressure Loss Indicator button, ABS control unit	893
4. Brake light switch, ABS control unit, Onboard supply control unit	894
5. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, Front left speed sensor, ABS control unit, Data bus diagnostic interface	895
6. Brake fluid level warning contact, Parking brake contact switch, Steering angle sender, Control unit in dash panel insert, Dash panel insert	896
106 - 2.0l petrol engine , CDLJ	897-913
1. 2.0l petrol engine , CDLJ	897
2. Battery, Starter, Alternator, Suppression filter, Airbag control unit, Battery isolation igniter, Fuse holder A, Fuse holder B, Fuse holder F	898
3. Ignition/starter switch, Fuse holder B	899
4. Starter inhibitor relay, Main relay, Additional coolant pump relay, Circulation pump	900
5. Cruise control system switch, Steering column combination switch, Onboard supply control unit	901
6. Engine control unit	902
7. Fuel gauge sender, Fuel system pressurisation pump, Fuel pump control unit, Engine control unit	903
8. Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	904
9. Engine control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage.	905

Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug 1, Spark plug 2, Spark plug 3, Spark plug 4	
10. Intake air temperature sender, Coolant temperature sender, Intake manifold flap potentiometer, Fuel pressure sender for low-pressure, Engine control unit, Intake manifold flap motor	906
11. Engine speed sender, Hall sender, Knock sensor 2, Fuel pressure sender, Engine control unit, Camshaft control valve 1	907
12. Knock sensor 1, Radiator outlet coolant temperature sender, Engine control unit, Charge pressure control solenoid valve, Activated charcoal filter solenoid valve 1, Turbocharger air recirculation valve	908
13. Accelerator position sender, Accelerator position sender 2, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Throttle valve module, Engine control unit	909
14. Charge pressure sender, Lambda probe, Lambda probe after catalytic converter, Engine control unit, Lambda probe heater, Lambda probe 1 heater after catalytic converter	910
15. Brake light switch, Air mass meter, Engine control unit, Fuel pressure regulating valve, Fuse carrier 6	911
16. Control unit for structure-borne sound, Actuator for structure-borne sound	912
17. Oil pressure switch, Coolant shortage indicator sender, Control unit in dash panel insert, Dash panel insert	913
107 - Radiator fan , CDLJ	914-915
1. Radiator fan , CDLJ	914
2. Radiator fan control unit, Engine control unit, Radiator fan, Right radiator fan	915
108 - Anti-lock brake system (ABS) with electronic stabilisation program (ESP)	916-921
1. Anti-lock brake system (ABS) with electronic stabilisation program (ESP)	916
2. ABS control unit, Fuse holder A, Fuse holder B, Fuse holder F	917
3. Button for TCS and electronic stabilisation program, Tyre Pressure Loss Indicator button, ABS control unit	918
4. Brake light switch, ABS control unit, Onboard supply control unit	919
5. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, Front left speed sensor, Sensor unit for electronic stabilisation program, ABS control unit	920
6. Brake fluid level warning contact, Parking brake contact switch, Steering angle sender, Control unit in dash panel insert, Dash panel insert	921
109 - Convenience system, right-hand drive , (L0R)	922-932
1. Convenience system, right-hand drive , (L0R)	922
2. Rear lid handle release button, Rear lid lock unit, Onboard supply control unit, Rear lid central locking motor, Right luggage compartment light	923
3. Driver side interior locking button for central locking system, Onboard supply control unit, Central locking SAFELOCK function warning lamp, Driver door lock unit	924
4. Operating unit for window regulator in driver door, Driver door control unit, Onboard supply control unit	925
5. Front left window regulator switch, Front right window regulator switch in driver door, Operating unit for window regulator in driver door, Driver door control unit, Onboard supply control unit, Driver side window regulator motor	926
6. Rear left door contact switch, Onboard supply control unit, Rear left door lock unit, Rear left door central locking motor, lock	927
7. Rear left window regulator switch, in door, Rear right window regulator switch, in door, Rear left door control unit, Rear right door control unit, Onboard supply control unit, Rear left window regulator motor, Rear right window regulator motor	928
8. Rear right door contact switch, Onboard supply control unit, Rear right door lock unit, Tank filler flap locking motor, Rear right door central locking motor, lock	929
9. Onboard supply control unit, Front passenger door lock unit	930
10. Onboard supply control unit	931
11. Window regulator switch in front passenger door, Front passenger door control unit, Onboard supply control unit, Front passenger side window regulator motor	932
110 - Basic equipment , (7L6),(7L8)	933-954
1. Basic equipment , (7L6),(7L8)	933
2. Battery, Starter, Alternator, Battery monitor control unit	934
3. Starter relay 1, Starter relay 2	935
4. Ignition/starter switch, Voltage stabiliser, Fuse holder B	936
5. X-contact relief relay, Fuse holder B	937
6. Light switch, Front and rear fog light switch, Onboard supply control unit, Light switch illumination bulb	938
7. Switch and instrument illumination regulator, Onboard supply control unit	939
8. Steering column combination switch, Onboard supply control unit, Rear window wiper motor, Windscreen and rear window washer pump	940
9. Turn signal switch. Steering column combination switch. Airbag coil connector and return ring	941

with slip ring, Horn plate, Onboard supply control unit, Windscreen wiper motor	
10. Hazard warning lights button, Heated rear window button, Reversing light switch, Bonnet contact switch, Onboard supply control unit	942
11. Onboard supply control unit, Driver side turn signal repeater bulb, Front passenger side turn signal repeater bulb	943
12. Onboard supply control unit, Front left headlight, Left headlight range control motor	944
13. Onboard supply control unit, Front right headlight, High-level brake light bulb, Right headlight range control motor, Right luggage compartment light	945
14. Onboard supply control unit, Left tail light, Right tail light, Left number plate light, Right number plate light	946
15. Onboard supply control unit, Cigarette lighter illumination bulb, Cigarette lighter	947
16. Window regulator switch in front passenger door, Operating unit for window regulator in driver door, Onboard supply control unit	948
17. Driver vanity mirror contact switch, Front passenger vanity mirror contact switch, Onboard supply control unit, Front passenger reading light, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror	949
18. Treble horn, Bass horn, Onboard supply control unit, Left footwell light, Right footwell light, Rear centre reading light	950
19. Onboard supply control unit, Data bus diagnostic interface, Diagnostic connection	951
20. Heater control unit, Fresh air blower series resistor with overheating fuse, Fresh air blower, Fresh air and air recirculation flap control motor	952
21. Immobiliser reader coil, Parking brake contact switch, Control unit in dash panel insert, Dash panel insert	953
22. Brake fluid level warning contact, Ambient temperature sensor, Coolant shortage indicator sender, Windscreen washer fluid level sender, Control unit in dash panel insert, Dash panel insert	954
111 - 1.2l petrol engine , CBZB,CBZC	955-970
1. 1.2l petrol engine , CBZB,CBZC	955
2. Battery, Starter, Alternator, Starter inhibitor relay, Data bus diagnostic interface, Fuse holder A, Fuse holder B	956
3. Main relay, Additional coolant pump relay, Fuse holder B	957
4. Climatronic control unit, Air conditioning system control unit, Engine control unit, Coolant circulation pump	958
5. Accelerator position sender, Accelerator position sender 2, Engine control unit, Output stage, Ignition transformer	959
6. Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Activated charcoal filter solenoid valve 1, Fuel pressure regulating valve, Coolant regulating valve	960
7. Hall sender, Intake air temperature sender, Coolant temperature sender, Intake manifold pressure sender, Engine control unit	961
8. Fuel pressure sender, Engine control unit, Charge pressure positioner	962
9. Engine speed sender, Charge pressure sender, Engine control unit	963
10. Cruise control system switch, Fuel gauge sender, Fuel system pressurisation pump, Onboard supply control unit, Engine control unit	964
11. Brake light switch, Clutch pedal switch, ABS control unit, Onboard supply control unit, Engine control unit	965
12. Knock sensor 1, Throttle valve module, Onboard supply control unit, Engine control unit	966
13. Lambda probe, Lambda probe after catalytic converter, Engine control unit	967
14. Start/Stop operation button, Starter relay 1, Starter relay 2	968
15. Coolant shortage indicator sender, Control unit in dash panel insert, Voltage stabiliser, Dash panel insert	969
16. Oil pressure switch, Brake fluid level warning contact, Oil level and oil temperature sender, Control unit in dash panel insert, Dash panel insert	970
112 - Radiator fan with air conditioning system	971-972
1. Radiator fan with air conditioning system	971
2. Radiator fan thermal switch, Radiator fan control unit, Radiator fan	972
113 - Radiator fan , CAVB,CAVE,CTHE	973-974
1. Radiator fan , CAVB,CAVE,CTHE	973
2. Radiator fan control unit, Engine control unit, 2-pin connector, Right radiator fan	974
114 - Anti-lock brake system (ABS) , (1AC),(7K0)	975-979
1. Anti-lock brake system (ABS) , (1AC),(7K0)	975
2. Fuse holder A, Fuse holder B	976
3. Brake light switch, Rear right speed sensor, Front right speed sensor, ABS control unit	977
4. Rear left speed sensor, Front left speed sensor, ABS control unit	978
5. Brake fluid level warning contact, Parking brake contact switch, Control unit in dash panel insert, Onboard supply control unit, Dash panel insert	979
115 - Anti-lock brake system (ABS) . (1AC).(7K6)	980-985

1. Anti-lock brake system (ABS) , (1AC),(7K6)	980
2. Fuse holder A, Fuse holder B	981
3. Brake light switch, Rear right speed sensor, Front right speed sensor, ABS control unit	982
4. Light switch, Tyre Pressure Loss Indicator button, Rear left speed sensor, Front left speed sensor, ABS control unit	983
5. ABS control unit, Onboard supply control unit	984
6. Brake fluid level warning contact, Parking brake contact switch, Control unit in dash panel insert, Dash panel insert	985
801 - -Fitting locations: Earth points - 3	986-989
1. Earth points	986-989
1.1 Overview of earth points	986-989
802 - - Fitting locations: Relays - 3	990-1002
1. Relays	990-1002
1.1 Overview of relays on relay carrier	990
1.2 Automatic glow period control unit -J179-	991
1.3 Auxiliary engine coolant pump relay -J496-	991
1.4 Auxiliary engine coolant pump relay -J496-	992
1.5 Relay carrier, from May 2009	992-994
1.6 Relay carrier, from November 2009	995-996
1.7 Relay carrier, from May 2011	997
1.8 Relay carrier, from November 2011	998-999
1.9 Relay carrier, from May 2012	1000
1.10 Relay carrier, from May 2013	1001-1002
803 - -Fitting locations: Fuses - 3	1003-1017
1. Fuses	1003-1017
1.1 Overview of fuses	1003
1.2 Fuse assignment in battery fuse holder	1004-1005
1.3 Fuse assignment in fuse holder B	1006-1013
1.4 Fuse assignment on relay carrier, from May 2009	1014
1.5 Fuse assignment on relay carrier, from November 2009	1015
1.6 Fuse assignment on relay carrier, from May 2012	1016
1.7 Fuse holder F -SF-	1017
804 - -Fitting locations: control units - 3	1018-1070
1. Control units	1018-1070
1.1 Overview of control units	1018-1020
1.2 Control unit for structure-borne sound -J869-	1021-1022
1.2.1 Connector assignment:	1022
1.3 ABS control unit -J104-	1023-1024
1.3.1 Fitting location:	1023
1.3.2 Connector assignment:	1023-1024
1.4 Airbag control unit -J234-	1025-1026
1.4.1 Fitting location:	1025
1.4.2 Connector assignment:	1025-1026
1.5 Control unit with display for radio and navigation -J503-	1027
1.5.1 Connector assignment:	1027
1.6 Air conditioning system control unit -J301-	1028
1.6.1 Connector assignment:	1028
1.7 Climatronic control unit -J255-	1029
1.7.1 Connector assignment:	1029
1.8 Multimedia system control unit -J650-	1030
1.8.1 Fitting location:	1030
1.9 Data bus diagnostic interface -J533-	1031
1.10 Front passenger door control unit -J387-	1031-1032
1.10.1 Fitting location:	1031
1.10.2 Connector assignment.	1031-1032
1.11 Mobile telephone operating electronics control unit -J412-	1033-1034
1.11.1 Fitting location:	1033
1.11.2 Connector assignment:	1033-1034
1.12 Sliding sunroof adjustment control unit -J245-	1035
1.12.1 Fitting location up to May 2010	1035
1.13 Rear right door control unit -J389-	1036-1037
1.13.1 Fitting location:	1036
1.13.2 Connector assignment.	1036-1037
1.14 Sliding sunroof adjustment control unit -J245-	1038
1.14.1 Fitting location from May 2010	1038
1.15 Trailer detector control unit -J345-	1039-1040

1.15.1 Fitting location:	1039
1.15.2 Connector assignment:	1039-1040
1.16 Parking aid control unit -J446-	1041
1.16.1 Connector assignment:	1041
1.17 Battery isolation igniter -N253-	1042
1.18 Rear left door control unit -J388-	1042-1043
1.18.1 Fitting location:	1042
1.18.2 Connector assignment.	1042-1043
1.19 Voltage stabiliser -J532-	1044
1.19.1 Fitting location	1044
1.20 Multifunction steering wheel control unit -J453-	1044-1045
1.20.1 Fitting location:	1044-1045
1.21 Heated front seats control unit -J774-	1046-1047
1.21.1 Location left-hand drive:	1046
1.21.3 Connector assignment:	1046-1047
1.22 Driver door control unit -J386-	1048-1049
1.22.1 Fitting location:	1048
1.22.2 Connector assignment.	1048-1049
1.23 Control unit in dash panel insert -J285-	1050
1.24 Onboard supply control unit -J519-	1051-1056
1.24.1 Fitting location:	1051
1.24.2 Connector assignment:	1052
1.24.3 Description of signal for onboard supply control unit -J519-	1052-1056
1.25 Engine control unit -J623-	1057-1062
1.25.1 Fitting location:	1057
1.25.2 Engine control unit -J623-, 80-pin connector -T80-	1058-1059
1.25.3 Engine control unit -J623-, 121-pin connector -T121-	1060-1061
1.25.4 Engine control unit -J623-, 94-pin connector -T94-/60-pin connector -T60-	1062
1.26 Power steering sensor -G250-	1063
1.26.1 Fitting location:	1063
1.27 Gas mode control unit -J659-	1063-1065
1.27.1 Fitting location:	1063
1.27.2 Connector assignment: (to November 2010)	1063-1064
1.27.3 Connector assignment: (from November 2010)	1065
1.28 Power steering control unit -J500-	1066
1.28.1 Fitting location:	1066
1.29 Radiator fan control unit -J293- up to May 2011	1067
1.29.1 Fitting location:	1067
1.30 Radiator fan control unit -J293- from May 2011	1068
1.30.1 Fitting location	1068
1.31 Radiator fan control unit -J293-	1069
1.32 Mechatronic unit for dual clutch gearbox -J743-	1070
1.32.1 Fitting location:	1070
805 - -Fitting locations: coupling stations and connectors of wiring harnesses - 3	1071-1081
1. Coupling stations and connectors of wiring harnesses	1071-1081
1.1 Overview of coupling stations and connectors	1071
1.2 Radiator fan control unit -J293-	1072
1.3 Coupling stations for exhaust gas sensors	1073
1.3.1 Fitting location	1073
1.4 Coupling station on heater and air conditioner unit -T10c-	1073
1.5 Coupling station on right A-pillar -T28-	1074
1.5.1 Fitting location	1074
1.6 Right exterior mirror coupling station -T12c-	1074
1.7 Coupling station on right B-pillar -T28c-	1075
1.7.1 Fitting location	1075
1.8 Coupling stations for aerials	1075
1.8.1 Fitting location	1075
1.9 Coupling station for tank filler flap lock -T2ea-	1076
1.9.1 Fitting location	1076
1.10 Coupling stations in rear lid	1076
1.10.1 Fitting location	1076
1.11 Coupling station for PDC sensors -T6v-	1077
1.11.1 Fitting location	1077
1.12 Rear lid coupling stations	1077
1.12.1 Fitting location	1077
1.13 Coupling stations under front right seat	1078

1.13.1 Fitting location	1078
1.14 Coupling station on left B-pillar -T28b-	1078
1.14.1 Fitting location	1078
1.15 Coupling stations under front left seat	1079
1.15.1 Fitting location	1079
1.16 Left exterior mirror coupling station -T12b-	1079
1.17 Coupling station on left of A-pillar -T28a-	1080
1.17.1 Fitting location	1080
1.18 Coupling station, engine -T14-	1080
1.18.1 Fitting location	1080
1.19 Coupling station for DQ gearbox	1081
1.19.1 Fitting location:	1081