

001 - Basic equipment	1-28
1. Basic equipment	1
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	2
3. Ignition/starter switch, X-contact relief relay, Onboard supply control unit	3
4. Intermittent wiper switch, Rear wiper switch, Intermittent wiper regulator, Onboard supply control unit	4
5. Fuel pump relay, Onboard supply control unit, Fuel supply relay	5
6. Driver door contact switch, Front passenger door contact switch, Onboard supply control unit, Front interior light, Luggage compartment light, Glove compartment light, Front passenger reading light, Driver side reading light	6
7. Onboard supply control unit, Cigarette lighter illumination bulb, Cigarette lighter, Windscreen wiper motor	7
8. Hazard warning lights button, Heated rear window button, Handbrake warning switch, Onboard supply control unit, Heated rear window switch illumination bulb, Button illumination bulb	8
9. Luggage compartment light switch, Onboard supply control unit, Rear window wiper motor, Windscreen and rear window washer pump	9
10. Switch and instrument illumination regulator, Headlight range control regulator, Rear lid remote release button, Airbag coil connector and return ring with slip ring, Horn plate, Onboard supply control unit, Button illumination bulb	10
11. Horn or dual tone horn, Onboard supply control unit	11
12. Reversing light switch, Onboard supply control unit, Driver side turn signal repeater bulb, Front passenger side turn signal repeater bulb	12
13. Onboard supply control unit	13
14. Onboard supply control unit	14
15. Number plate light	15
16. Rear left fog light bulb, Left tail light bulb, Rear left turn signal bulb, Left brake and tail light bulb	16
17. Fuse 13 in fuse holder A, Fuse 21 in fuse holder A, Fuse 22 in fuse holder A	17
18. Fuse 36 in fuse holder A, Fuse 41 in fuse holder A, Fuse 43 in fuse holder A, Fuse 54 in fuse holder A	18
19. Brake light switch, Clutch pedal switch, Brake pedal switch	19
20. Additional brake light bulb, Heated rear window	20
21. Light switch, Front and rear fog light switch, Fog light warning lamp, Light switch illumination bulb	21
22. Rear left fog light bulb, Right tail light bulb, Left tail light bulb, Rear left turn signal bulb, Rear right turn signal bulb, Left reversing light bulb, Right reversing light bulb, Left brake and tail light bulb, Right brake and tail light bulb	22
23. Right tail light bulb, Left tail light bulb, Rear left turn signal bulb, Rear right turn signal bulb, Left brake and tail light bulb, Right brake and tail light bulb, Additional brake light bulb, Heated rear window	23
24. Left side light bulb, Right side light bulb, Front left turn signal bulb, Front right turn signal bulb, Left headlight dipped beam bulb, Left headlight main beam bulb, Right headlight dipped beam bulb, Right headlight main beam bulb	24
25. Luggage compartment light switch, Left reversing light bulb, Right reversing light bulb, Number plate light	25
26. Immobiliser reader coil, Fuel gauge sender, Fuel gauge, Fuel system pressurisation pump, Coolant shortage indicator sender, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	26
27. Oil pressure switch, Brake fluid level warning contact, Control unit in dash panel insert, Dash panel insert, Oil pressure warning lamp, Left turn signal warning lamp, Brake system warning lamp, Rear lid open warning lamp	27
28. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Main beam warning lamp, Rear fog light warning lamp, Right turn signal warning lamp, Reserve fuel warning lamp, Dash panel insert illumination bulb	28
002 - Convenience system	29-52
1. Convenience system	29
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	30
3. Ignition/starter switch, Onboard supply control unit	31
4. Onboard supply control unit	32
5. X-contact relief relay, Onboard supply control unit	33
6. Onboard supply control unit	34
7. Tilting mechanism button, Anti-theft alarm and vermin repellent system contact switch, Onboard supply control unit	35
8. Onboard supply control unit	36
9. Driver side interior locking switch, Driver side central locking lock unit, Convenience system central control unit. Interior lock switch illumination bulb	37

10. Interior monitoring switch, Rear lid contact switch, Convenience system central control unit	38
11. Window regulator switch in front passenger door, Front passenger side central locking lock unit, Convenience system central control unit, Window regulator switch illumination bulb	39
12. Rear left central locking lock unit, Rear right central locking lock unit, Convenience system central control unit	40
13. Rear window regulator isolation switch, Horn or dual tone horn, Anti-theft alarm system horn, Convenience system central control unit	41
14. Convenience system central control unit, Front interior light, Rear left reading light, Rear right reading light, Front passenger reading light, Driver side reading light, Light conductor for front centre console ambient lighting	42
15. Driver vanity mirror contact switch, Front passenger vanity mirror contact switch, Ultrasonic sensor control unit, Convenience system central control unit, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror	43
16. Front left window regulator switch, Rear left window regulator switch, in driver door, Rear right window regulator switch, in driver door, Front right window regulator switch in driver door, Convenience system central control unit, Window regulator switch illumination bulb	44
17. Convenience system central control unit, Left door warning lamp	45
18. Rear left window regulator switch, in door, Rear right window regulator switch, in door, Convenience system central control unit, Window regulator switch illumination bulb	46
19. Hazard warning lights button, Convenience system central control unit, Button illumination bulb	47
20. Convenience system central control unit, Rear left window regulator motor, Rear right window regulator motor, Driver side window regulator motor, Front passenger side window regulator motor, Tank filler flap locking motor	48
21. Convenience system central control unit	49
22. Luggage compartment light switch, Rear lid release motor, Luggage compartment light, Glove compartment light	50
23. Rear lid handle release button, Luggage compartment light switch, Contact switch in lock cylinder for rear lid, anti-theft alarm system and central locking system, Rear lid release motor, Luggage compartment light	51
24. Immobiliser reader coil, Sliding sunroof adjustment regulator, Sliding sunroof adjustment control unit, Control unit in dash panel insert, Dash panel insert, Rear lid open warning lamp, Door open warning lamp	52
003 - 1.6l engine , CCRA	53-73
1. 1.6l engine , CCRA	53
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	54
3. Ignition/starter switch, Onboard supply control unit, Fuel supply relay	55
4. X-contact relief relay, Onboard supply control unit	56
5. Onboard supply control unit	57
6. Fuse 4 in fuse holder A, Fuse 5 in fuse holder A, Fuse 9 in fuse holder A, Fuse 10 in fuse holder A, Fuse 14 in fuse holder A, Fuse 16 in fuse holder A, Fuse 18 in fuse holder A	58
7. Fuse 25 in fuse holder A, Fuse 32 in fuse holder A, Fuse 35 in fuse holder A, Fuse 36 in fuse holder A, Fuse 37 in fuse holder A, Fuse 40 in fuse holder A, Fuse 41 in fuse holder A	59
8. Engine control unit	60
9. Engine control unit	61
10. Engine control unit	62
11. Brake light switch, Clutch pedal switch, Brake pedal switch, Engine control unit	63
12. Intake air temperature sender, Intake manifold pressure sender, Cold start device relay, Engine control unit, Fuel pump for cold start	64
13. Fuel pump relay, Engine control unit	65
14. Speedometer sender, Engine control unit, Ignition transformer, Spark plug connector, Spark plugs	66
15. Engine speed sender, Hall sender, Knock sensor 1, Coolant temperature sender, Engine control unit	67
16. Engine control unit, Cold start valve, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Activated charcoal filter solenoid valve 1	68
17. Accelerator position sender, Accelerator position sender 2, Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Engine control unit	69
18. Lambda probe, Lambda probe after catalytic converter, Engine control unit	70
19. Radiator fan control unit, Radiator fan series resistor, Radiator fan	71
20. Fuel gauge sender, Fuel gauge, Fuel system pressurisation pump, Coolant shortage indicator sender, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Heater warning lamp	72
21. Oil pressure switch, Brake fluid level warning contact, Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Oil pressure warning lamp, Exhaust emissions warning lamp, Reserve fuel warning lamp, Brake system warning lamp	73
004 - 1.6l engine . CCRA.(2U4)	74-98

1. 1.6l engine , CCRA,(2U4)	74
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	75
3. Ignition/starter switch, X-contact relief relay, Onboard supply control unit	76
4. Handbrake warning switch, Onboard supply control unit	77
5. Reversing light switch, Onboard supply control unit	78
6. Onboard supply control unit	79
7. Onboard supply control unit	80
8. Onboard supply control unit	81
9. Fuse 5 in fuse holder A, Fuse 14 in fuse holder A, Fuse 18 in fuse holder A, Fuse 19 in fuse holder A, Fuse 20 in fuse holder A	82
10. Fuse 4 in fuse holder A, Fuse 9 in fuse holder A, Fuse 25 in fuse holder A, Fuse 32 in fuse holder A, Fuse 36 in fuse holder A, Fuse 37 in fuse holder A	83
11. Brake light switch, Clutch pedal switch, Brake pedal switch, Engine control unit	84
12. Starter motor relay, X contact relief relay 2, Engine control unit, Starter motor relay 2	85
13. Fuel pump relay, Engine control unit, Fuel supply relay	86
14. Speedometer sender, Engine control unit, Ignition transformer, Spark plug connector, Spark plugs	87
15. Engine speed sender, Hall sender, Knock sensor 1, Coolant temperature sender, Engine control unit	88
16. Intake air temperature sender, Intake manifold pressure sender, Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	89
17. Accelerator position sender, Accelerator position sender 2, Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Engine control unit	90
18. Clutch pedal switch for engine start, Lambda probe, Lambda probe after catalytic converter, Engine control unit, Activated charcoal filter solenoid valve 1	91
19. Engine control unit	92
20. Engine control unit	93
21. Engine control unit	94
22. Heater control unit, Fuel pre-heating heater element, Fuel preheating element 2, Fuel preheating element 3, Fuel preheating element 4	95
23. Radiator fan control unit, Radiator fan series resistor, Radiator fan	96
24. Immobiliser reader coil, Fuel gauge sender, Fuel gauge, Fuel system pressurisation pump, Coolant shortage indicator sender, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Heater warning lamp	97
25. Oil pressure switch, Brake fluid level warning contact, Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Oil pressure warning lamp, Exhaust emissions warning lamp, Reserve fuel warning lamp, Brake system warning lamp	98
005 - 2.0l engine , CFEA	99-119
1. 2.0l engine , CFEA	99
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	100
3. Ignition/starter switch, Blocking diode, X-contact relief relay, Onboard supply control unit	101
4. Onboard supply control unit, Fuel supply relay	102
5. Engine speed sender, Hall sender, Intake air temperature sender, Knock sensor 1, Coolant temperature sender, Intake manifold pressure sender, Engine control unit	103
6. Accelerator position sender, Accelerator position sender 2, Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Engine control unit	104
7. Brake light switch, Brake pedal switch, Electric drive main relay, Engine control unit	105
8. Engine control unit, Cold start valve, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Activated charcoal filter solenoid valve 1	106
9. Cruise control system switch, Cruise control system (CCS) SET button, Lambda probe, Lambda probe after catalytic converter, Engine control unit	107
10. Engine control unit	108
11. Brake fluid level warning contact, Clutch pedal switch, Fuel pump relay, Engine control unit	109
12. Cold start device relay, Engine control unit, Fuel pump for cold start	110
13. Speedometer sender, Engine control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug connector, Spark plugs	111
14. Oil pressure switch, Fuel gauge, Dash panel insert, Oil pressure warning lamp, Oil level warning lamp, Coolant temperature warning lamp (too cold), Exhaust emissions warning lamp, Brake system warning lamp, Electronic power control fault lamp	112
15. Fuel gauge sender, Rev. counter, Fuel system pressurisation pump, Ambient temperature sensor, Speedometer, Coolant shortage indicator sender, Dash panel insert, Alternator warning lamp, Cruise control system warning lamp, Coolant shortage warning lamp	113
16. Radiator fan control unit	114
17. Radiator fan control unit	115

18. High-pressure sender, Air conditioning system magnetic clutch, Air conditioner compressor regulating valve, Radiator fan, Right radiator fan	116
19. Fuse 9 in fuse holder A, Fuse 14 in fuse holder A, Fuse 25 in fuse holder A, Fuse 35 in fuse holder A, Fuse 41 in fuse holder A	117
20. Fuse 4 in fuse holder A, Fuse 7 in fuse holder A, Fuse 10 in fuse holder A, Fuse 36 in fuse holder A, Fuse 40 in fuse holder A	118
21. Fuse 18 in fuse holder A, Fuse 32 in fuse holder A, Fuse 37 in fuse holder A, Fuse 45 in fuse holder A	119
006 - Air conditioning system , CCRA	120-130
1. Air conditioning system , CCRA	120
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	121
3. Ignition/starter switch, Onboard supply control unit	122
4. Onboard supply control unit	123
5. Onboard supply control unit	124
6. X-contact relief relay	125
7. Fresh air blower switch, Air conditioning system switch, Fresh air and air recirculation flap switch, Air conditioning system control unit, Air conditioning system switch illumination bulb, Fresh air blower series resistor with overheating fuse, Fresh air blower, Fresh air and air recirculation flap control motor	126
8. Air conditioning system control unit	127
9. High-pressure sender, Air conditioning system control unit	128
10. Radiator fan control unit, Air conditioning system magnetic clutch, Radiator fan	129
11. Immobiliser reader coil, Control unit in dash panel insert, Immobiliser control unit, Dash panel insert	130
007 - Climatronic	131-142
1. Climatronic	131
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	132
3. Ignition/starter switch, Onboard supply control unit	133
4. X-contact relief relay, Radiator fan control unit	134
5. Radiator fan control unit, Radiator fan series resistor, Radiator fan	135
6. High-pressure sender, Right radiator fan	136
7. Centre vent temperature sender, Footwell vent temperature sender, Evaporator output temperature sender, Climatronic control unit	137
8. Fresh air and air recirculation flap switch, Dash panel temperature sensor, Climatronic control unit, Fresh air and air recirculation warning lamp, Fresh air regulator illumination bulb, Air conditioner compressor regulating valve, Temperature sensor blower	138
9. Potentiometer for temperature selection rotary knob, Control and regulating unit for air conditioning system, Climatronic control unit, Fresh air blower	139
10. Potentiometer for temperature flap control motor, Potentiometer for footwell/defroster flap control motor, Potentiometer for air recirculation flap control motor, Climatronic control unit, Temperature flap control motor, Footwell and defroster flap control motor	140
11. Sunlight penetration photosensor, Potentiometer for defroster flap control motor, Climatronic control unit, Defroster flap control motor	141
12. Rev. counter, Ambient temperature sensor, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	142
008 - Automated manual gearbox , CCRA	143-157
1. Automated manual gearbox , CCRA	143
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	144
3. Ignition/starter switch, Onboard supply control unit	145
4. Automatic gearbox control unit, Gearbox hydraulic pump relay, Hydraulic pump for gearbox	146
5. Brake light switch, Brake pedal switch, Automatic gearbox control unit	147
6. Automatic gearbox control unit	148
7. Handbrake warning switch, Automatic gearbox control unit, Clutch actuator valve, Selector lever valve 1, Selector lever valve 2, Selector lever valve 3	149
8. Gearbox input speed sender, Clutch position sender, Gear detection sensor, Automatic gearbox control unit	150
9. Gearbox hydraulic pressure sender, Sensor 2 for gear detection, Automatic gearbox control unit	151
10. X-contact relief relay, Selector lever sensors control unit	152
11. Starter motor relay, X contact relief relay 2, Starter motor relay 2	153
12. Fuse 4 in fuse holder A, Fuse 10 in fuse holder A, Fuse 18 in fuse holder A, Fuse 32 in fuse holder A, Fuse 33 in fuse holder A, Fuse 39 in fuse holder A, Fuse 42 in fuse holder A	154
13. Operating unit in steering wheel, Tiptronic switch in steering wheel to shift down, Multifunction buttons on left in steering wheel, Airbag coil connector and return ring with slip ring, Horn plate	155
14. Operating unit in steering wheel, Tiptronic switch in steering wheel to shift up, Multifunction buttons on left in steering wheel. Multifunction buttons on right in steering wheel	156

15. Immobiliser reader coil, Rev. counter, Speedometer, Control unit in dash panel insert, Immobiliser control unit, Dash panel insert	157
009 - Airbag systems	158-164
1. Airbag systems	158
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	159
3. Ignition/starter switch, Onboard supply control unit	160
4. Onboard supply control unit	161
5. Control unit in dash panel insert, Onboard supply control unit, Dash panel insert, Airbag warning lamp	162
6. Onboard supply control unit	163
7. Airbag coil connector and return ring with slip ring, Airbag control unit, Driver side airbag igniter, Front passenger side airbag igniter 1	164
010 - Anti-lock brake system (ABS)	165-174
1. Anti-lock brake system (ABS)	165
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	166
3. Ignition/starter switch, X-contact relief relay, Onboard supply control unit	167
4. Onboard supply control unit	168
5. Handbrake warning switch, Onboard supply control unit	169
6. Onboard supply control unit	170
7. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, Front left speed sensor, ABS control unit, Front right ABS inlet valve, Front right ABS outlet valve, Front left ABS inlet valve, Front left ABS outlet valve	171
8. ABS control unit, ABS return flow pump relay, ABS solenoid valve relay, ABS return flow pump	172
9. Brake light switch, Brake pedal switch, ABS control unit, Rear right ABS inlet valve, Rear left ABS inlet valve, Rear right ABS outlet valve, Rear left ABS outlet valve	173
10. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, ABS warning lamp, Tyre Pressure Loss Indicator warning lamp	174
011 - Coming home	175-193
1. Coming home	175
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	176
3. Ignition/starter switch, X-contact relief relay, Onboard supply control unit	177
4. Onboard supply control unit	178
5. Rev. counter, Speedometer, Control unit in dash panel insert, Onboard supply control unit, Dash panel insert, Main beam warning lamp, Alternator warning lamp, Rear fog light warning lamp, Dash panel insert illumination bulb	179
6. Onboard supply control unit, Windscreen wiper motor	180
7. Onboard supply control unit, Rear window wiper motor, Windscreen and rear window washer pump	181
8. Onboard supply control unit, Fuse 2 in fuse holder A, Fuse 21 in fuse holder A, Fuse 22 in fuse holder A, Fuse 44 in fuse holder A	182
9. Onboard supply control unit	183
10. Onboard supply control unit	184
11. Fuse 1 in fuse holder A, Fuse 3 in fuse holder A, Fuse 18 in fuse holder A, Fuse 20 in fuse holder A, Fuse 43 in fuse holder A, Fuse 54 in fuse holder A	185
12. Fuse 12 in fuse holder A, Fuse 13 in fuse holder A	186
13. Left fog light bulb, Right fog light bulb, Left side light bulb, Right side light bulb, Left headlight dipped beam bulb, Left headlight main beam bulb, Right headlight dipped beam bulb, Right headlight main beam bulb	187
14. Rear left fog light bulb, Right tail light bulb, Left tail light bulb, Left brake and tail light bulb, Right brake and tail light bulb	188
15. Rear left fog light bulb, Number plate light	189
16. Light switch, Fog light switch, Rear fog light switch, Rain and light sensor, Control unit for lighting and wiper functions, Light switch illumination bulb, Front and rear fog light switch illumination bulb	190
17. Fog light relay, Control unit for lighting and wiper functions	191
18. Control unit for lighting and wiper functions	192
19. Control unit for lighting and wiper functions	193
012 - Interactive system	194-204
1. Interactive system	194
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	195
3. Ignition/starter switch, Onboard supply control unit	196
4. X-contact relief relay, Onboard supply control unit	197
5. Onboard supply control unit	198
6. Onboard supply control unit, Control unit for interactive system, Radio	199
7. Onboard supply control unit, Control unit for interactive system	200
8. Onboard supply control unit	201
9. Multifunction indicator. Control unit in dash panel insert. Dash panel insert	202

10. Control unit in dash panel insert, Dash panel insert, Dash panel insert illumination bulb	203
11. Headlight dipper and flasher switch, Parking light switch, Multifunction display call-up button	204
013 - Radio	205-213
1. Radio	205
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	206
3. Ignition/starter switch, Onboard supply control unit	207
4. Onboard supply control unit	208
5. X-contact relief relay, Onboard supply control unit	209
6. Radio, Rear left treble loudspeaker, Rear left bass loudspeaker, Rear right treble loudspeaker, Rear right bass loudspeaker	210
7. Radio, Aerial, Front left treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker	211
8. Control unit for interactive system, Radio	212
9. Immobiliser reader coil, Control unit in dash panel insert, Dash panel insert	213
014 - Multifunction steering wheel	214-221
1. Multifunction steering wheel	214
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	215
3. Ignition/starter switch, Onboard supply control unit	216
4. X-contact relief relay, Onboard supply control unit	217
5. Multifunction indicator, Control unit in dash panel insert, Onboard supply control unit, Dash panel insert	218
6. Onboard supply control unit	219
7. Operating unit in steering wheel, Multifunction buttons on left in steering wheel, Tiptronic switch (shift down), Airbag coil connector and return ring with slip ring, Horn plate, Driver side airbag igniter	220
8. Operating unit in steering wheel, Multifunction buttons on left in steering wheel, Multifunction buttons on right in steering wheel, Tiptronic switch (shift up)	221
015 - Light switch	222-234
1. Light switch	222
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	223
3. Ignition/starter switch, Onboard supply control unit	224
4. Onboard supply control unit	225
5. Onboard supply control unit	226
6. X-contact relief relay, Onboard supply control unit	227
7. Onboard supply control unit	228
8. Blocking diode, Onboard supply control unit	229
9. Light switch, Front and rear fog light switch, Fog light warning lamp, Light switch illumination bulb	230
10. Intermittent wiper switch, Rear wiper switch, Intermittent wiper regulator, Airbag coil connector and return ring with slip ring	231
11. Turn signal switch, Headlight dipper and flasher switch, Parking light switch, Cruise control system switch, Multifunction display call-up button, Cruise control system (CCS) SET button	232
12. Control unit in dash panel insert, Dash panel insert, Dash panel insert illumination bulb	233
13. Immobiliser reader coil, Multifunction indicator, Control unit in dash panel insert, Dash panel insert	234
016 - Window wash/wipe system and heated rear window	235-243
1. Window wash/wipe system and heated rear window	235
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	236
3. Ignition/starter switch, Onboard supply control unit	237
4. Intermittent wiper regulator, X-contact relief relay, Onboard supply control unit	238
5. Onboard supply control unit, Rear window wiper motor, Windscreen and rear window washer pump	239
6. Heated rear window button, Onboard supply control unit, Heated rear window switch illumination bulb, Heated rear window	240
7. Onboard supply control unit, Windscreen wiper motor	241
8. Onboard supply control unit	242
9. Control unit in dash panel insert, Onboard supply control unit, Dash panel insert	243
017 - Fog light and rear fog light	244-251
1. Fog light and rear fog light	244
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	245
3. Ignition/starter switch, Onboard supply control unit	246
4. Onboard supply control unit	247
5. Light switch, Front and rear fog light switch, Headlight range control regulator, Onboard supply control unit, Fog light warning lamp, Light switch illumination bulb	248
6. X-contact relief relay	249
7. Left fog light bulb, Right fog light bulb, Rear left fog light bulb	250
8. Immobiliser reader coil. Control unit in dash panel insert. Dash panel insert. Rear fog light	251

warning lamp	
018 - Automatic anti-dazzle interior mirror	252-257
1. Automatic anti-dazzle interior mirror	252
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	253
3. Ignition/starter switch, Onboard supply control unit	254
4. X-contact relief relay, Onboard supply control unit	255
5. Onboard supply control unit	256
6. Anti-dazzle interior mirror button, Rain and light sensor, Onboard supply control unit	257
019 - System for lowering passenger side mirror	258-270
1. System for lowering passenger side mirror	258
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	259
3. Ignition/starter switch, X-contact relief relay, Onboard supply control unit	260
4. Onboard supply control unit	261
5. Onboard supply control unit	262
6. Onboard supply control unit	263
7. Mirror adjustment switch, Mirror adjustment changeover switch, Onboard supply control unit, Mirror adjustment switch illumination bulb	264
8. Onboard supply control unit, Driver side turn signal repeater bulb, Driver side mirror adjustment motor, Driver side mirror adjustment motor	265
9. Potentiometer for horizontal adjustment of front passenger side mirror, Potentiometer for vertical adjustment of front passenger side mirror, Mirror memory control unit, Front passenger side mirror adjustment motor, Front passenger side mirror adjustment motor	266
10. Mirror memory control unit	267
11. Mirror memory control unit	268
12. Reversing light switch, Left reversing light bulb, Right reversing light bulb	269
13. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	270
020 - Parking aid (PDC)	271-279
1. Parking aid (PDC)	271
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	272
3. Ignition/starter switch, Onboard supply control unit	273
4. Reversing light switch, Onboard supply control unit	274
5. Onboard supply control unit	275
6. Rear parking aid warning buzzer, X-contact relief relay, Parking aid control unit	276
7. Parking aid control unit	277
8. Rear left parking aid sender, Rear centre left parking aid sender, Rear centre right parking aid sender, Rear right parking aid sender	278
9. Immobiliser reader coil, Control unit in dash panel insert, Immobiliser control unit, Dash panel insert	279
021 - Electrohydraulic power steering	280-285
1. Electrohydraulic power steering	280
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	281
3. Ignition/starter switch, Onboard supply control unit	282
4. Power steering sensor, Power steering control unit, Onboard supply control unit, Steering hydraulics pump	283
5. Control unit in dash panel insert, Onboard supply control unit, Dash panel insert, Alternator warning lamp, Electrohydraulic power steering warning lamp	284
6. X-contact relief relay	285
022 - Climatronic	286-297
1. Climatronic	286
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	287
3. Ignition/starter switch, Onboard supply control unit	288
4. X-contact relief relay, Radiator fan control unit	289
5. Radiator fan control unit, Radiator fan series resistor, Radiator fan	290
6. High-pressure sender, Right radiator fan	291
7. Centre vent temperature sender, Footwell vent temperature sender, Evaporator output temperature sender, Climatronic control unit	292
8. Fresh air and air recirculation flap switch, Dash panel temperature sensor, Climatronic control unit, Fresh air and air recirculation warning lamp, Fresh air regulator illumination bulb, Air conditioner compressor regulating valve, Temperature sensor blower	293
9. Potentiometer for temperature selection rotary knob, Control and regulating unit for air conditioning system, Climatronic control unit, Fresh air blower	294
10. Potentiometer for temperature flap control motor, Potentiometer for footwell/defroster flap control motor, Potentiometer for air recirculation flap control motor, Climatronic control unit, Temperature flap control motor, Footwell and defroster flap control motor	295
11. Sunlight penetration photosensor. Potentiometer for defroster flap control motor. Climatronic	296

control unit, Defroster flap control motor	
12. Rev. counter, Ambient temperature sensor, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	297
023 - Coming home	298-316
1. Coming home	298
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	299
3. Ignition/starter switch, X-contact relief relay, Onboard supply control unit	300
4. Onboard supply control unit	301
5. Rev. counter, Speedometer, Control unit in dash panel insert, Onboard supply control unit, Dash panel insert, Main beam warning lamp, Alternator warning lamp, Rear fog light warning lamp, Dash panel insert illumination bulb	302
6. Onboard supply control unit, Windscreen wiper motor	303
7. Onboard supply control unit, Rear window wiper motor, Windscreen and rear window washer pump	304
8. Onboard supply control unit, Fuse 2 in fuse holder A, Fuse 21 in fuse holder A, Fuse 22 in fuse holder A, Fuse 44 in fuse holder A	305
9. Onboard supply control unit	306
10. Onboard supply control unit	307
11. Fuse 1 in fuse holder A, Fuse 3 in fuse holder A, Fuse 18 in fuse holder A, Fuse 20 in fuse holder A, Fuse 43 in fuse holder A, Fuse 54 in fuse holder A	308
12. Fuse 12 in fuse holder A, Fuse 13 in fuse holder A	309
13. Left fog light bulb, Right fog light bulb, Left side light bulb, Right side light bulb, Left headlight dipped beam bulb, Left headlight main beam bulb, Right headlight dipped beam bulb, Right headlight main beam bulb	310
14. Rear left fog light bulb, Right tail light bulb, Left tail light bulb, Left brake and tail light bulb, Right brake and tail light bulb	311
15. Rear left fog light bulb, Number plate light	312
16. Light switch, Fog light switch, Rear fog light switch, Rain and light sensor, Control unit for lighting and wiper functions, Light switch illumination bulb, Front and rear fog light switch illumination bulb	313
17. Fog light relay, Control unit for lighting and wiper functions	314
18. Control unit for lighting and wiper functions	315
19. Control unit for lighting and wiper functions	316
024 - Parking aid (PDC)	317-325
1. Parking aid (PDC)	317
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	318
3. Ignition/starter switch, Onboard supply control unit	319
4. Reversing light switch, Onboard supply control unit	320
5. Onboard supply control unit	321
6. Rear parking aid warning buzzer, X-contact relief relay, Parking aid control unit	322
7. Parking aid control unit	323
8. Rear left parking aid sender, Rear centre left parking aid sender, Rear centre right parking aid sender, Rear right parking aid sender	324
9. Immobiliser reader coil, Control unit in dash panel insert, Immobiliser control unit, Dash panel insert	325
025 - Electrohydraulic power steering	326-331
1. Electrohydraulic power steering	326
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	327
3. Ignition/starter switch, Onboard supply control unit	328
4. Power steering sensor, Power steering control unit, Onboard supply control unit, Steering hydraulics pump	329
5. Control unit in dash panel insert, Onboard supply control unit, Dash panel insert, Alternator warning lamp, Electrohydraulic power steering warning lamp	330
6. X-contact relief relay	331
026 - Basic equipment	332-359
1. Basic equipment	332
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	333
3. Ignition/starter switch, X-contact relief relay, Onboard supply control unit	334
4. Intermittent wiper switch, Rear wiper switch, Intermittent wiper regulator, Onboard supply control unit	335
5. Fuel pump relay, Onboard supply control unit, Fuel supply relay	336
6. Driver door contact switch, Front passenger door contact switch, Onboard supply control unit, Front interior light, Luggage compartment light, Glove compartment light, Front passenger reading light, Driver side reading light	337
7. Onboard supply control unit, Cigarette lighter illumination bulb, Cigarette lighter, Windscreen wiper motor	338
8. Hazard warning lights button. Heated rear window button. Handbrake warning switch. Onboard supply	339

control unit, Heated rear window switch illumination bulb, Button illumination bulb	
9. Luggage compartment light switch, Onboard supply control unit, Rear window wiper motor, Windscreen and rear window washer pump	340
10. Switch and instrument illumination regulator, Headlight range control regulator, Rear lid remote release button, Airbag coil connector and return ring with slip ring, Horn plate, Onboard supply control unit, Button illumination bulb	341
11. Horn or dual tone horn, Onboard supply control unit	342
12. Reversing light switch, Onboard supply control unit, Driver side turn signal repeater bulb, Front passenger side turn signal repeater bulb	343
13. Onboard supply control unit	344
14. Onboard supply control unit	345
15. Number plate light	346
16. Rear left fog light bulb, Left tail light bulb, Rear left turn signal bulb, Left brake and tail light bulb	347
17. Fuse 13 in fuse holder A, Fuse 21 in fuse holder A, Fuse 22 in fuse holder A	348
18. Fuse 36 in fuse holder A, Fuse 41 in fuse holder A, Fuse 43 in fuse holder A, Fuse 54 in fuse holder A	349
19. Brake light switch, Clutch pedal switch	350
20. High-level brake light bulb, Heated rear window	351
21. Light switch, Front and rear fog light switch, Fog light warning lamp, Light switch illumination bulb	352
22. Rear left fog light bulb, Right tail light bulb, Left tail light bulb, Rear left turn signal bulb, Rear right turn signal bulb, Left reversing light bulb, Right reversing light bulb, Left brake and tail light bulb, Right brake and tail light bulb	353
23. Right tail light bulb, Left tail light bulb, Rear left turn signal bulb, Rear right turn signal bulb, Left brake and tail light bulb, Right brake and tail light bulb, High-level brake light bulb, Heated rear window	354
24. Left side light bulb, Right side light bulb, Front left turn signal bulb, Front right turn signal bulb, Left headlight dipped beam bulb, Left headlight main beam bulb, Right headlight dipped beam bulb, Right headlight main beam bulb	355
25. Luggage compartment light switch, Left reversing light bulb, Right reversing light bulb, Number plate light	356
26. Immobiliser reader coil, Fuel gauge sender, Fuel gauge, Fuel system pressurisation pump, Coolant shortage indicator sender, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	357
27. Oil pressure switch, Brake fluid level warning contact, Control unit in dash panel insert, Dash panel insert, Oil pressure warning lamp, Left turn signal warning lamp, Brake system warning lamp, Rear lid open warning lamp	358
28. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Main beam warning lamp, Rear fog light warning lamp, Right turn signal warning lamp, Reserve fuel warning lamp, Dash panel insert illumination bulb	359
027 - Automatic anti-dazzle interior mirror	360-365
1. Automatic anti-dazzle interior mirror	360
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	361
3. Ignition/starter switch, Onboard supply control unit	362
4. X-contact relief relay, Onboard supply control unit	363
5. Onboard supply control unit	364
6. Anti-dazzle interior mirror button, Rain and light sensor, Onboard supply control unit	365
028 - Light switch	366-378
1. Light switch	366
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	367
3. Ignition/starter switch, Onboard supply control unit	368
4. Onboard supply control unit	369
5. Onboard supply control unit	370
6. X-contact relief relay, Onboard supply control unit	371
7. Onboard supply control unit	372
8. Blocking diode, Onboard supply control unit	373
9. Light switch, Front and rear fog light switch, Fog light warning lamp, Light switch illumination bulb	374
10. Intermittent wiper switch, Rear wiper switch, Intermittent wiper regulator, Airbag coil connector and return ring with slip ring	375
11. Turn signal switch, Headlight dipper and flasher switch, Parking light switch, Cruise control system switch, Multifunction display call-up button, Cruise control system (CCS) SET button	376
12. Control unit in dash panel insert, Dash panel insert, Dash panel insert illumination bulb	377
13. Immobiliser reader coil, Multifunction indicator, Control unit in dash panel insert, Dash panel insert	378

029 - Multifunction steering wheel	379-386
1. Multifunction steering wheel	379
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	380
3. Ignition/starter switch, Onboard supply control unit	381
4. X-contact relief relay, Onboard supply control unit	382
5. Multifunction indicator, Control unit in dash panel insert, Onboard supply control unit, Dash panel insert	383
6. Onboard supply control unit	384
7. Operating unit in steering wheel, Multifunction buttons on left in steering wheel, Tiptronic switch (shift down), Airbag coil connector and return ring with slip ring, Horn plate, Driver side airbag igniter	385
8. Operating unit in steering wheel, Multifunction buttons on left in steering wheel, Multifunction buttons on right in steering wheel, Tiptronic switch (shift up)	386
030 - Fog light and rear fog light	387-394
1. Fog light and rear fog light	387
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	388
3. Ignition/starter switch, Onboard supply control unit	389
4. Onboard supply control unit	390
5. Light switch, Front and rear fog light switch, Headlight range control regulator, Onboard supply control unit, Fog light warning lamp, Light switch illumination bulb	391
6. X-contact relief relay	392
7. Left fog light bulb, Right fog light bulb, Rear left fog light bulb	393
8. Immobiliser reader coil, Control unit in dash panel insert, Dash panel insert, Rear fog light warning lamp	394
031 - Radio	395-403
1. Radio	395
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	396
3. Ignition/starter switch, Onboard supply control unit	397
4. Onboard supply control unit	398
5. X-contact relief relay, Onboard supply control unit	399
6. Radio, Rear left treble loudspeaker, Rear left bass loudspeaker, Rear right treble loudspeaker, Rear right bass loudspeaker	400
7. Radio, Aerial, Front left treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker	401
8. Control unit for interactive system, Radio	402
9. Immobiliser reader coil, Control unit in dash panel insert, Dash panel insert	403
032 - Convenience system	404-427
1. Convenience system	404
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	405
3. Ignition/starter switch, Onboard supply control unit	406
4. Onboard supply control unit	407
5. X-contact relief relay, Onboard supply control unit	408
6. Onboard supply control unit	409
7. Tilting mechanism button, Anti-theft alarm and vermin repellent system contact switch, Onboard supply control unit	410
8. Onboard supply control unit	411
9. Driver side interior locking switch, Driver side central locking lock unit, Convenience system central control unit, Interior lock switch illumination bulb	412
10. Interior monitoring switch, Rear lid contact switch, Convenience system central control unit	413
11. Window regulator switch in front passenger door, Front passenger side central locking lock unit, Convenience system central control unit, Window regulator switch illumination bulb	414
12. Rear left central locking lock unit, Rear right central locking lock unit, Convenience system central control unit	415
13. Rear window regulator isolation switch, Horn or dual tone horn, Anti-theft alarm system horn, Convenience system central control unit	416
14. Convenience system central control unit, Front interior light, Rear left reading light, Rear right reading light, Front passenger reading light, Driver side reading light, Light conductor for front centre console ambient lighting	417
15. Driver vanity mirror contact switch, Front passenger vanity mirror contact switch, Ultrasonic sensor control unit, Convenience system central control unit, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror	418
16. Front left window regulator switch, Rear left window regulator switch, in driver door, Rear right window regulator switch, in driver door, Front right window regulator switch in driver door, Convenience system central control unit, Window regulator switch illumination bulb	419
17. Convenience system central control unit, Left door warning lamp	420
18. Rear left window regulator switch. in door. Rear right window regulator switch. in door.	421

Convenience system central control unit, Window regulator switch illumination bulb	
19. Hazard warning lights button, Convenience system central control unit, Button illumination bulb	422
20. Convenience system central control unit, Rear left window regulator motor, Rear right window regulator motor, Driver side window regulator motor, Front passenger side window regulator motor, Tank filler flap locking motor	423
21. Convenience system central control unit	424
22. Luggage compartment light switch, Rear lid release motor, Luggage compartment light, Glove compartment light	425
23. Rear lid handle release button, Luggage compartment light switch, Contact switch in lock cylinder for rear lid, anti-theft alarm system and central locking system, Rear lid release motor, Luggage compartment light	426
24. Immobiliser reader coil, Sliding sunroof adjustment regulator, Sliding sunroof adjustment control unit, Control unit in dash panel insert, Dash panel insert, Rear lid open warning lamp, Door open warning lamp	427
033 - Automated manual gearbox , CCRA	428-442
1. Automated manual gearbox , CCRA	428
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	429
3. Ignition/starter switch, Onboard supply control unit	430
4. Automatic gearbox control unit, Gearbox hydraulic pump relay, Hydraulic pump for gearbox	431
5. Brake light switch, Brake pedal switch, Automatic gearbox control unit	432
6. Automatic gearbox control unit	433
7. Handbrake warning switch, Automatic gearbox control unit, Clutch actuator valve, Selector lever valve 1, Selector lever valve 2, Selector lever valve 3	434
8. Gearbox input speed sender, Clutch position sender, Gear detection sensor, Automatic gearbox control unit	435
9. Gearbox hydraulic pressure sender, Sensor 2 for gear detection, Automatic gearbox control unit	436
10. X-contact relief relay, Selector lever sensors control unit	437
11. Starter motor relay, X contact relief relay 2, Starter motor relay 2	438
12. Fuse 4 in fuse holder A, Fuse 10 in fuse holder A, Fuse 18 in fuse holder A, Fuse 32 in fuse holder A, Fuse 33 in fuse holder A, Fuse 39 in fuse holder A, Fuse 42 in fuse holder A	439
13. Operating unit in steering wheel, Tiptronic switch in steering wheel to shift down, Multifunction buttons on left in steering wheel, Airbag coil connector and return ring with slip ring, Horn plate	440
14. Operating unit in steering wheel, Tiptronic switch in steering wheel to shift up, Multifunction buttons on left in steering wheel, Multifunction buttons on right in steering wheel	441
15. Immobiliser reader coil, Rev. counter, Speedometer, Control unit in dash panel insert, Immobiliser control unit, Dash panel insert	442
034 - Air conditioning system , CCRA	443-453
1. Air conditioning system , CCRA	443
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	444
3. Ignition/starter switch, Onboard supply control unit	445
4. Onboard supply control unit	446
5. Onboard supply control unit	447
6. X-contact relief relay	448
7. Fresh air blower switch, Air conditioning system switch, Fresh air and air recirculation flap switch, Air conditioning system control unit, Air conditioning system switch illumination bulb, Fresh air blower series resistor with overheating fuse, Fresh air blower, Fresh air and air recirculation flap control motor	449
8. Air conditioning system control unit	450
9. High-pressure sender, Air conditioning system control unit	451
10. Radiator fan control unit, Air conditioning system magnetic clutch, Radiator fan	452
11. Immobiliser reader coil, Control unit in dash panel insert, Immobiliser control unit, Dash panel insert	453
035 - Airbag systems	454-460
1. Airbag systems	454
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	455
3. Ignition/starter switch, Onboard supply control unit	456
4. Onboard supply control unit	457
5. Control unit in dash panel insert, Onboard supply control unit, Dash panel insert, Airbag warning lamp	458
6. Onboard supply control unit	459
7. Airbag coil connector and return ring with slip ring, Airbag control unit, Driver side airbag igniter, Front passenger side airbag igniter 1	460
036 - Anti-lock brake system (ABS)	461-470
1. Anti-lock brake system (ABS)	461
2. Batterv. Starter. Alternator. Voltage regulator. Onboard supply control unit	462

3. Ignition/starter switch, X-contact relief relay, Onboard supply control unit	463
4. Onboard supply control unit	464
5. Handbrake warning switch, Onboard supply control unit	465
6. Onboard supply control unit	466
7. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, Front left speed sensor, ABS control unit, Front right ABS inlet valve, Front right ABS outlet valve, Front left ABS inlet valve, Front left ABS outlet valve	467
8. ABS control unit, ABS return flow pump relay, ABS solenoid valve relay, ABS return flow pump	468
9. Brake light switch, Brake pedal switch, ABS control unit, Rear right ABS inlet valve, Rear left ABS inlet valve, Rear right ABS outlet valve, Rear left ABS outlet valve	469
10. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, ABS warning lamp, Tyre Pressure Loss Indicator warning lamp	470
037 - 1.6l engine , CCRA	471-491
1. 1.6l engine , CCRA	471
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	472
3. Ignition/starter switch, Onboard supply control unit, Fuel supply relay	473
4. X-contact relief relay, Onboard supply control unit	474
5. Onboard supply control unit	475
6.	476
7.	477
8. Engine control unit	478
9. Engine control unit	479
10. Engine control unit	480
11. Brake light switch, Clutch pedal switch, Engine control unit	481
12. Intake air temperature sender, Intake manifold pressure sender, Cold start device relay, Engine control unit, Fuel pump for cold start	482
13. Fuel pump relay, Engine control unit	483
14. Speedometer sender, Engine control unit, Ignition transformer, Spark plug connector, Spark plugs	484
15. Engine speed sender, Hall sender, Knock sensor 1, Coolant temperature sender, Engine control unit	485
16. Engine control unit, Cold start valve, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Activated charcoal filter solenoid valve 1	486
17. Accelerator position sender, Accelerator position sender 2, Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Engine control unit	487
18. Lambda probe, Lambda probe after catalytic converter, Engine control unit	488
19. Radiator fan control unit, Radiator fan series resistor, Radiator fan	489
20. Fuel gauge sender, Fuel gauge, Fuel system pressurisation pump, Coolant shortage indicator sender, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Heater warning lamp	490
21. Oil pressure switch, Brake fluid level warning contact, Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Oil pressure warning lamp, Exhaust emissions warning lamp, Reserve fuel warning lamp, Brake system warning lamp	491
038 - 1.6l engine , CCRA,(2U4)	492-516
1. 1.6l engine , CCRA,(2U4)	492
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	493
3. Ignition/starter switch, X-contact relief relay, Onboard supply control unit	494
4. Handbrake warning switch, Onboard supply control unit	495
5. Reversing light switch, Onboard supply control unit	496
6. Onboard supply control unit	497
7. Onboard supply control unit	498
8. Onboard supply control unit	499
9.	500
10.	501
11. Brake light switch, Clutch pedal switch, Engine control unit	502
12. Starter motor relay, X contact relief relay 2, Engine control unit, Starter motor relay 2	503
13. Fuel pump relay, Engine control unit, Fuel supply relay	504
14. Speedometer sender, Engine control unit, Ignition transformer, Spark plug connector, Spark plugs	505
15. Engine speed sender, Hall sender, Knock sensor 1, Coolant temperature sender, Engine control unit	506
16. Intake air temperature sender, Intake manifold pressure sender, Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	507
17. Accelerator position sender, Accelerator position sender 2, Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Engine control unit	508
18. Clutch pedal switch for engine start. Lambda probe. Lambda probe after catalytic converter.	509

Engine control unit, Activated charcoal filter solenoid valve 1	
19. Engine control unit	510
20. Engine control unit	511
21. Engine control unit	512
22. Heater control unit, Fuel pre-heating heater element, Fuel preheating element 2, Fuel preheating element 3, Fuel preheating element 4	513
23. Radiator fan control unit, Radiator fan series resistor, Radiator fan	514
24. Immobiliser reader coil, Fuel gauge sender, Fuel gauge, Fuel system pressurisation pump, Coolant shortage indicator sender, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Heater warning lamp	515
25. Oil pressure switch, Brake fluid level warning contact, Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Oil pressure warning lamp, Exhaust emissions warning lamp, Reserve fuel warning lamp, Brake system warning lamp	516
039 - 2.0l engine , CFEA	517-537
1. 2.0l engine , CFEA	517
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	518
3. Ignition/starter switch, Blocking diode, X-contact relief relay, Onboard supply control unit	519
4. Onboard supply control unit, Fuel supply relay	520
5. Engine speed sender, Hall sender, Intake air temperature sender, Knock sensor 1, Coolant temperature sender, Intake manifold pressure sender, Engine control unit	521
6. Accelerator position sender, Accelerator position sender 2, Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Engine control unit	522
7. Brake light switch, Electric drive main relay, Engine control unit	523
8. Engine control unit, Cold start valve, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Activated charcoal filter solenoid valve 1	524
9. Cruise control system switch, Cruise control system (CCS) SET button, Lambda probe, Lambda probe after catalytic converter, Engine control unit	525
10. Engine control unit	526
11. Brake fluid level warning contact, Clutch pedal switch, Fuel pump relay, Engine control unit	527
12. Cold start device relay, Engine control unit, Fuel pump for cold start	528
13. Speedometer sender, Engine control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug connector, Spark plugs	529
14. Oil pressure switch, Fuel gauge, Dash panel insert, Oil pressure warning lamp, Oil level warning lamp, Coolant temperature warning lamp (too cold), Exhaust emissions warning lamp, Brake system warning lamp, Electronic power control fault lamp	530
15. Fuel gauge sender, Rev. counter, Fuel system pressurisation pump, Ambient temperature sensor, Speedometer, Coolant shortage indicator sender, Dash panel insert, Alternator warning lamp, Cruise control system warning lamp, Coolant shortage warning lamp	531
16. Radiator fan control unit	532
17. Radiator fan control unit	533
18. High-pressure sender, Air conditioning system magnetic clutch, Air conditioner compressor regulating valve, Radiator fan, Right radiator fan	534
19.	535
20.	536
21.	537
040 - Interactive system	538-548
1. Interactive system	538
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	539
3. Ignition/starter switch, Onboard supply control unit	540
4. X-contact relief relay, Onboard supply control unit	541
5. Onboard supply control unit	542
6. Onboard supply control unit, Control unit for interactive system, Radio	543
7. Onboard supply control unit, Control unit for interactive system	544
8. Onboard supply control unit	545
9. Multifunction indicator, Control unit in dash panel insert, Dash panel insert	546
10. Control unit in dash panel insert, Dash panel insert, Dash panel insert illumination bulb	547
11. Headlight dipper and flasher switch, Parking light switch, Multifunction display call-up button	548
041 - Window wash/wipe system	549-557
1. Window wash/wipe system	549
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	550
3. Ignition/starter switch, Onboard supply control unit	551
4. Intermittent wiper regulator, X-contact relief relay, Onboard supply control unit	552
5. Onboard supply control unit, Rear window wiper motor, Windscreen and rear window washer pump	553
6. Heated rear window button. Onboard supply control unit. Heated rear window switch illumination	554

bulb, Heated rear window	
7. Onboard supply control unit, Windscreen wiper motor	555
8. Onboard supply control unit	556
9. Control unit in dash panel insert, Onboard supply control unit, Dash panel insert	557
042 - System for lowering passenger side mirror	558-570
1. System for lowering passenger side mirror	558
2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit	559
3. Ignition/starter switch, X-contact relief relay, Onboard supply control unit	560
4. Onboard supply control unit	561
5. Onboard supply control unit	562
6. Onboard supply control unit	563
7. Mirror adjustment switch, Mirror adjustment changeover switch, Onboard supply control unit, Mirror adjustment switch illumination bulb	564
8. Onboard supply control unit, Driver side turn signal repeater bulb, Driver side mirror adjustment motor 2, Driver side mirror adjustment motor	565
9. Potentiometer for horizontal adjustment of front passenger side mirror, Potentiometer for vertical adjustment of front passenger side mirror, Mirror memory control unit, Front passenger side mirror adjustment motor 2, Front passenger side mirror adjustment motor	566
10. Mirror memory control unit	567
11. Mirror memory control unit	568
12. Reversing light switch, Left reversing light bulb, Right reversing light bulb	569
13. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp	570
801 - -Fitting Locations: Earth points - 3	571-579
1. Earth points	571-579
1.1 Engine compartment earth points	571-572
1.2 Vehicle interior earth points	573-574
1.3 Earth points in the rear vehicle area (Hatch)	575-576
1.4 Earth points in the rear vehicle area (Sedan)	577-579
802 - Fitting Locations <i>f</i> Fuses - 3	580-590
1. Fuse Locations	580-590
1.1 Fuse holder -SA-	581-585
1.1.1 Fuse colours	581
1.1.2 Fuse holder A -SA-, as of July 2011	582-585
1.2 Battery fuse holder -S-	586-587
1.2.1 Fuse cable colours	586
1.2.2 Battery fuse holder -S-, as of April, 2011	587
1.3 Battery fuse holder -S-	588-590
1.3.1 Fuse colours	588
1.3.2 Battery fuse holder -S-, as of April, 2011	589-590
803 - Fitting Locations <i>f</i> Relays - 3	591-593
1. Relays	591-593
1.1 Relay plate to the left, behind the dashboard	591-593
1.1.1 Relay descriptions:	591-593
804 - Fitting locations - Control units - 3	594-640
1. Control Units	594-640
1.1 Engine control unit -J623-	596-597
1.1.2 Connector description:	596-597
1.2 Radiator fan control unit -J293-	598-599
1.2.2 Connector description:	598-599
1.3 Automated manual gearbox control unit -J217-	600-601
1.3.2 Connector description:	600-601
1.4 Air conditioning control unit -J301-	602-603
1.4.2 Connector description:	602-603
1.5 Climatronic control unit -J255-	604-605
1.5.2 Connector description:	604-605
1.6 Central control unit for Convenience system -J393-	606-607
1.6.2 Connector description:	606-607
1.7 Steering wheel control unit -E221-	608-609
1.7.2 Connector description:	608-609
1.8 Instrument cluster indicator control unit -J285-	610-612
1.8.2 Connector description:	610-612
1.9 Airbag control unit -J234-	613-614
1.9.2 Connector description:	613-614
1.10 ABS control unit (38-pin) -J104-	615-616
1.10.2 Connector description:	615-616

1.11 Parking assist control unit (Sedan) -J446-	617-618
1.11.2 Connector description:	617-618
1.12 Parking assist control unit (Hatch) -J446-	619-620
1.12.2 Connector description:	619-620
1.13 Air conditioner regulator and control unit -J127-	621-622
1.13.2 Connector Description:	621-622
1.14 Interactive system control unit -J879-	623-624
1.14.2 Connector description:	623-624
1.15 Cleaning and lighting function control unit -J917-	625-626
1.15.2 Connector description:	625-626
1.16 Power steering control unit -J500-	627-628
1.16.2 Connector description:	627-628
1.17 Sunroof movement control unit -J245-	629-630
1.17.2 Connector description:	629-630
1.18 Mirror memory control unit -J267-	631-632
1.18.2 Connector description:	631-632
1.19 Onboard network control unit -J519-	633-638
1.19.2 Connector description:	633-638
1.20 Ultrasound sensor control unit -J347-	639-640
1.20.2 Connector description:	639-640