



Contents

1	Engine list	1
2	Service work	2
2.1	Information about flexible or fixed service	2
2.2	Service tables	6
3	General information	18
3.1	Raising vehicle with lifting platform or trolley jack	18
3.2	Stickers	20
3.3	Entries in service schedule	21
3.4	Connecting vehicle diagnostic tester	22
3.5	Vehicle identification number	25
3.6	Vehicle data sticker	26
3.7	Severe operating conditions	27
3.8	Countries with hot climate	28
3.9	Country overview for diesel not compliant with EN 590	29
3.10	Country overview for petrol not compliant with EN 228	30
3.11	Engine code and engine number	31
3.12	Countries with high levels of dust	31
3.13	Identification plate	32
3.14	Shortened intervals for spark plug replacement	33
4	Descriptions of work:	38
4.1	Removable towing bracket: checking and cleaning if necessary	40
4.2	Swivel joints and suspension link mountings: inspecting	42
4.3	Automatic headlight control and static cornering light: checking function	43
4.4	Automatic gearbox 09G: changing ATF	45
4.5	Front passenger front airbag: checking key switch and "ON/OFF function"	45
4.6	Battery: checking battery terminal clamps for secure seating	47
4.7	Battery: checking with battery tester with printer VAS 6161	51
4.8	Status of battery: reading, sending diagnosis protocol online	51
4.9	Tyres: checking condition, wear pattern, tyre pressure and tread depth	51
4.10	Brake and clutch system: changing brake fluid	61
4.11	Brake system and shock absorbers: inspecting for leaks and damage	67
4.12	Brake pads/linings: checking thickness and condition of brake discs, front and rear	67
4.13	Brake fluid level: checking	71
4.14	Diesel particulate filter: checking	73
4.15	Doors: greasing door arrestor	73
4.16	Electric window regulators: checking positioning	74
4.17	Fault memory of all systems: reading with vehicle diagnostic tester, correcting possible faults according to repair guidelines	75
4.18	Boots: inspecting	75
4.19	Gearbox mounting: renewing	75
4.20	Interior and exterior body: inspecting for corrosion with doors and flaps open	76
4.21	Poly V-belt: renewing	76
4.22	Poly V-belt: checking condition	77
4.23	Cooling system: checking frost protection and coolant level	78
4.24	Diesel fuel filter: renewing	81
4.25	Air filter: cleaning housing and renewing filter element	86
4.26	Multi-purpose additive for diesel fuel: adding	99
4.27	Multi-purpose additive for petrol fuel: adding	101
4.28	Engine and components in engine compartment: inspecting for leaks and damage (from above and below)	102
4.29	Engine cover panel "top": removing and installing	103
4.30	Engine cover panel (noise insulation) "bottom": removing and installing	106
4.31	Engine oil level: checking	106
4.32	Engine oil: draining or extracting, renewing oil filter and replenishing engine oil	108



4.33	Engine oil: capacities and specifications	125
4.34	Panorama sliding sunroof: checking function, cleaning and lubricating guide rails and cleaning wind deflector	126
4.35	Road test: performing (driving behaviour, noises, air conditioner etc.)	132
4.36	Wheel securing bolts: tightening to specified torque	133
4.37	Radio code: reading using vehicle diagnostic tester	137
4.38	Radio/navigation system: entering PIN of anti-theft coding and storing local radio stations to station buttons	137
4.39	Tyre pressure monitoring: performing basic setting	138
4.40	Tyre repair set: checking	139
4.41	Window wash/wipe system and headlight washer system: checking function	140
4.42	Wiper blade protection: removing	145
4.43	Headlight adjustment: checking halogen headlights	149
4.44	Headlight adjustment: checking gas discharge headlights	153
4.45	Headlight adjustment: checking fog lights	158
4.46	Sliding sunroof drains: checking for blockage and cleaning as needed	160
4.47	Service interval display: resetting	161
4.48	Service interval display: recoding	163
4.49	Track rod ends: checking clearance, firm seating and boots	164
4.50	Dust and pollen filter: cleaning housing and renewing filter element	165
4.51	Transportation mode: switching off	165
4.52	Transport locks: removing blocking pieces from springs on front axle	166
4.53	Clock and date: setting	167
4.54	Underbody: inspecting for damage to underbody sealant, underbody panels, routing of lines, plugs	168
4.55	Toothed belt: renewing (petrol engines)	168
4.56	Camshaft drive toothed belt: renewing (diesel engines)	168
4.57	Camshaft drive toothed belt: checking (4-cylinder petrol engine without change interval)	169
4.58	Spark plugs: renewing	170
4.59	Gas system test	192
4.60	Additional service measures on autogas system	198
4.61	LPG tank and lines: renewing	224
5	Exhaust emissions test	225
5.1	Exhaust emissions test for petrol engines	225
5.2	Exhaust emissions test for diesel engines	227
6	Glossary	230