



## Contents

|                                                                                       |            |
|---------------------------------------------------------------------------------------|------------|
| <b>00 - Technical data</b>                                                            | <b>1</b>   |
| 1 Checklist for evaluating running gear of accident vehicles                          | 1          |
| 2 General information                                                                 | 3          |
| <b>40 - Front suspension</b>                                                          | <b>4</b>   |
| 1 Evaluating accident vehicles                                                        | 4          |
| 2 Repairing front wheel suspension                                                    | 5          |
| 2.1 Overview - front axle                                                             | 5          |
| 2.2 Raising wheel suspension to unladen position                                      | 6          |
| 3 Subframe, anti-roll bar, suspension links                                           | 9          |
| 3.1 Assembly overview: subframe, anti-roll bar, suspension links                      | 9          |
| 3.2 Repairing thread in longitudinal member                                           | 11         |
| 3.3 Fixing position of subframe                                                       | 11         |
| 3.4 Removing and installing subframe                                                  | 15         |
| 3.5 Checking swivel joint                                                             | 17         |
| 3.6 Removing and installing swivel joint                                              | 18         |
| 3.7 Installation position of swivel joints                                            | 22         |
| 3.8 Removing and installing suspension link                                           | 22         |
| 3.9 Renewing front bonded rubber bush for suspension link                             | 25         |
| 3.10 Renewing rear bonded rubber bush for suspension link                             | 28         |
| 3.11 Removing and installing anti-roll bar                                            | 30         |
| 3.12 Removing and installing rubber bush for anti-roll bar                            | 33         |
| 4 Assembly overview: wheel bearing                                                    | 35         |
| 4.1 Pulling out and pulling in wheel hub with wheel bearing                           | 37         |
| 4.2 Removing and installing wheel bearing housing                                     | 43         |
| 5 Assembly overview: suspension strut                                                 | 47         |
| 5.1 Removing and installing suspension strut                                          | 48         |
| 5.2 Repairing front suspension strut                                                  | 55         |
| 6 Removing and installing drive shafts                                                | 59         |
| 6.1 Removing and installing drive shaft with constant velocity joint                  | 59         |
| 6.2 Removing and installing drive shaft with triple roller joint AAR 2000 (bolted-on) | 61         |
| 7 Repairing drive shafts - overview of drive shaft's                                  | 65         |
| 7.1 Heat shields for drive shafts                                                     | 65         |
| 8 Assembly overview: drive shaft with VL90 or VL100 constant velocity joint           | 67         |
| 8.1 Dismantling and assembling drive shaft with VL90 or VL100 constant velocity joint | 69         |
| 8.2 Checking outer constant velocity joint                                            | 76         |
| 8.3 Checking inner constant velocity joint                                            | 77         |
| 9 Assembly overview: drive shaft with VL107 constant velocity joint                   | 81         |
| 9.1 Dismantling and assembling drive shaft with VL107 constant velocity joint         | 83         |
| 10 Assembly overview: drive shaft with triple roller joint AAR 2000/108               | 90         |
| 10.1 Dismantling and assembling drive shaft with triple roller joint AAR 2000/108     | 92         |
| <b>42 - Rear suspension</b>                                                           | <b>103</b> |
| 1 Evaluating accident vehicles                                                        | 103        |
| 2 Repairing rear axle                                                                 | 104        |
| 2.1 Overview - rear axle                                                              | 104        |
| 2.2 Rear axle in unladen position                                                     | 105        |
| 3 Assembly overview: axle body, drum brake                                            | 109        |
| 3.1 Removing and installing rear axle                                                 | 111        |
| 3.2 Removing and installing bonded rubber bush                                        | 117        |
| 3.3 Removing and installing coil spring                                               | 125        |



|           |                                                                                    |            |
|-----------|------------------------------------------------------------------------------------|------------|
| <b>4</b>  | <b>Assembly overview: axle body, disc brake</b>                                    | <b>127</b> |
| <b>5</b>  | <b>Assembly overview: rear left vehicle level sender G76, front-wheel drive</b>    | <b>130</b> |
| 5.1       | Removing and installing rear left vehicle level sender G76                         | 130        |
| <b>6</b>  | <b>Assembly overview: shock absorber</b>                                           | <b>132</b> |
| 6.1       | Removing and installing shock absorbers                                            | 133        |
| <b>7</b>  | <b>Assembly overview: wheel bearings, drum brake</b>                               | <b>136</b> |
| 7.1       | Removing and installing wheel hub with wheel bearing, vehicles with drum brakes    | 137        |
| <b>8</b>  | <b>Assembly overview: wheel bearings, disc brake</b>                               | <b>140</b> |
| 8.1       | Removing and installing wheel hub with wheel bearing, vehicles with disc brakes    | 140        |
| <b>44</b> | <b>- Wheels, tyres, vehicle geometry</b>                                           | <b>144</b> |
| <b>1</b>  | <b>Evaluating accident vehicles</b>                                                | <b>144</b> |
| <b>2</b>  | <b>Specified torque for wheel bolts</b>                                            | <b>145</b> |
| <b>3</b>  | <b>Removing and fitting tyres with run-flat properties to wheel rims</b>           | <b>146</b> |
| 3.1       | Notes on safety and prerequisites                                                  | 146        |
| 3.2       | Fittings instructions                                                              | 146        |
| 3.3       | Pressing tyre off wheel rim                                                        | 147        |
| 3.4       | Removing tyre from wheel                                                           | 148        |
| 3.5       | Fitting tyre to wheel rim                                                          | 151        |
| <b>4</b>  | <b>Tyre pressure monitor display</b>                                               | <b>154</b> |
| <b>5</b>  | <b>Wheel alignment</b>                                                             | <b>156</b> |
| 5.1       | General                                                                            | 156        |
| 5.2       | Test prerequisites                                                                 | 158        |
| 5.3       | Test preparations                                                                  | 158        |
| 5.4       | Wheel alignment specifications                                                     | 159        |
| 5.5       | Transverse vehicle inclination "zero position"                                     | 160        |
| 5.6       | Overview - wheel alignment procedure                                               | 160        |
| 5.7       | Correcting front axle camber                                                       | 162        |
| 5.8       | Check rear axle camber                                                             | 163        |
| 5.9       | Check rear axle toe                                                                | 163        |
| 5.10      | Adjusting toe at front axle                                                        | 163        |
| 5.11      | Checking left and right-hand wheel lock                                            | 164        |
| 5.12      | Vehicle data sticker                                                               | 165        |
| <b>6</b>  | <b>Wheels, tyres</b>                                                               | <b>167</b> |
| 6.1       | Models with breakdown set                                                          | 167        |
| 6.2       | Tyre sealant                                                                       | 167        |
| 6.3       | Removing a tyre                                                                    | 167        |
| 6.4       | Fitting a new tyre                                                                 | 168        |
| 6.5       | Tyre sealant disposal                                                              | 169        |
| <b>7</b>  | <b>Instructions for changing or fitting wheels</b>                                 | <b>170</b> |
| 7.1       | Fitting wheels                                                                     | 171        |
| <b>8</b>  | <b>Protecting wheel centring seat against corrosion</b>                            | <b>173</b> |
| <b>9</b>  | <b>Vibration due to wheels/tyres - causes and rectification</b>                    | <b>174</b> |
| 9.1       | Causes of vibration                                                                | 174        |
| 9.2       | Balancing wheels                                                                   | 174        |
| 9.3       | Conducting a road test before balancing wheels                                     | 175        |
| 9.4       | Balancing wheels on stationary wheel balancing machine                             | 175        |
| 9.5       | Vibration control system VAS 6230                                                  | 177        |
| 9.6       | Finish balancer                                                                    | 178        |
| 9.7       | Radial and lateral run-out of wheels and tyres                                     | 179        |
| 9.8       | Checking radial and lateral run-out on wheels and tyres with tyre gauge V.A.G 1435 | 179        |
| 9.9       | Checking radial and lateral run-out on wheel rim                                   | 180        |
| 9.10      | Matching                                                                           | 181        |



|           |                                                          |            |
|-----------|----------------------------------------------------------|------------|
| 9.11      | Flat spots caused by storage or handling                 | 182        |
| <b>48</b> | <b>Steering</b>                                          | <b>184</b> |
| <b>1</b>  | <b>Steering wheel</b>                                    | <b>184</b> |
| 1.1       | Assembly overview - steering wheel                       | 184        |
| 1.2       | Removing and installing steering wheel                   | 184        |
| <b>2</b>  | <b>Steering column</b>                                   | <b>187</b> |
| 2.1       | Assembly overview - steering column                      | 187        |
| 2.2       | Removing and installing steering column                  | 189        |
| 2.3       | Handling and transporting steering column                | 201        |
| 2.4       | Removing and installing intermediate steering shaft      | 203        |
| 2.5       | Repairing steering column                                | 204        |
| 2.6       | Removing and installing power steering control unit J500 | 205        |
| <b>3</b>  | <b>Steering rack</b>                                     | <b>217</b> |
| 3.1       | Assembly overview - steering rack                        | 217        |
| 3.2       | Removing and installing steering rack                    | 217        |
| 3.3       | Repairing steering rack                                  | 222        |
| 3.4       | Removing and installing track rod                        | 223        |
| 3.5       | Removing and installing track rod ball joint             | 228        |
| 3.6       | Adjusting steering rack                                  | 230        |
| <b>4</b>  | <b>Sensors</b>                                           | <b>231</b> |
| 4.1       | Removing and installing steering angle sender G85        | 231        |