



Contents

27 - Starter, current supply, CCS	1
1 Battery	1
1.1 Battery A - disconnect and connect	2
1.2 Battery A - remove and install	15
1.3 Battery A console - remove and install	26
1.4 Tightening torques - battery	28
2 Starting motor	29
2.1 Starter B - remove and install	29
2.2 Starter B - (Manufacturer Valeo) - disassemble and assemble	35
2.3 Starter B - (Manufacturer Bosch) - disassemble and assemble	40
2.4 Tightening torques - Starter	54
3 Alternator	55
3.1 Securing battery positive wire to alternator	55
3.2 Checking poly V-belt	55
3.3 Voltage regulator for alternator	55
3.4 Checking alternator C	58
3.5 Alternator, vehicles with 1.0 l TSI engine	58
3.6 Alternator, 1.4 l 55 kW injection engine	72
3.7 Alternator, 1.4 l 63 kW FSI engine	79
3.8 Alternator, 1.6 l 77 kW injection engine	85
90 - Gauges, instruments	92
1 Combined Instrument	92
1.1 Locating defects and indicating faults	92
1.2 Combined instrument K - replace	93
1.3 Combined instrument K - remove and install	95
1.4 Combined instrument K - description of rear part	97
1.5 Combined instrument K - connector pinout	98
1.6 Combined instrument K - control light symbols	98
2 Indication of Service Interval	102
2.1 Service interval indication - reset to zero	102
3 Cigarette lighter and 12V socket	103
3.1 Cigarette lighter U1 and 12V socket U5 - general overview of assembly	103
3.2 Cigarette lighter U1 and 12V socket U5 - remove and install	103
92 - Windscreen wash/wipe system	107
1 Windscreen wiper system	107
1.1 Windscreen wiper system - assembly overview	108
1.2 Windscreen wiper blade - remove and install	109
1.3 Windscreen wiper blade and arm set - remove and install	112
1.4 Windscreen wiper mechanism - remove and install	114
1.5 Windscreen wiper motor V - disassemble and assemble	115
1.6 Windscreen wiper blade resting position - adjust	117
1.7 Blade application angle on the windscreen - adjust	119
1.8 Tightening torque - Windscreen wiper system	120
1.9 Rain sensor G213 - remove and install	121
1.10 Rain sensor and sunlight penetration photosensor G397 - remove and install	123
2 Windscreen washer system	126
2.1 Windscreen washer system - assembly overview	126
2.2 Reservoir for the windscreen and rear window washer system (version 1) - remove and install	127
2.3 Reservoir for the windscreen and rear window washer system (version 2) - remove and install	129



2.4	Windscreen and rear window washer pump V59 - remove and install	131
2.5	Tightening torque - windscreen and rear window washer system	132
2.6	Windscreen washer system spray nozzles - replace	132
2.7	Windscreen washer system spray nozzles - adjust	133
3	Rear window wiper system	135
3.1	Rear window wiper and washer system - assembly overview	135
3.2	Rear window wiper arm - remove and install	136
3.3	Rear window wiper motor V12 - remove and install	137
3.4	Tightening torques - rear window wiper system	138
3.5	Rear window wiper blade resting position - adjust	138
3.6	Rear window wiper blade - remove and install	139
4	Rear window washer system	141
4.1	Rear window washer system - assembly overview	141
4.2	Rear window washer system spray nozzle - replace	142
4.3	Rear window washer system spray nozzle - adjust	143
94	Lights, bulbs, switches - exterior	145
1	Headlights	145
1.1	Assembly overview - headlight	145
1.2	Removing and installing headlight	153
1.3	Adjusting headlights	155
1.4	Adjusting headlight installation position	156
1.5	Removing and installing front turn signal bulb M5/M7	157
1.6	Installing repair kit for headlight housing	163
1.7	Converting headlights from driving on right to driving on left	165
1.8	Converting headlights from driving on left to driving on right	171
1.9	Removing and installing headlight range control motor V48/V49	176
1.10	Removing and installing headlight dipped beam bulb M29/M31	186
1.11	Removing and installing headlight main beam bulb M30/M32	192
1.12	Removing and installing gas discharge bulb L13/L14	198
1.13	Removing and installing side light bulb M1/M3	200
1.14	Removing and installing daytime running light bulb L174/L175	204
1.15	Removing and installing headlight screen adjustment solenoid N395/N396	204
1.16	Removing and installing bulbs for cornering light M51/M52	205
1.17	Removing and installing headlight starter for gas discharge light J426/J427	206
1.18	Removing and installing LED modules for daytime running light and side light L176/L177	208
1.19	Removing and installing starter unit for gas discharge bulb	208
1.20	Removing and installing output module 1 for LED headlight A27/A31	209
1.21	Removing and installing control unit for daytime running light and side light J860/J861	210
2	Fog lights (►07/11)	212
2.1	Fog lights - remove and install	212
2.2	Left fog light lamp L22 and Right fog light lamp L23 - replace	213
3	Side mounted repeater turn signals	215
3.1	Removing and installing side mounted repeater turn signal	215
4	Taillights	217
4.1	Tail lights - assembly overview	217
4.2	Removing and installing bulb carrier	217
4.3	Removing and installing tail light	218
5	Number plate light	220
5.1	Removing and installing number plate light X4/X5	220
5.2	Removing and installing bulb for number plate light X4/X5	221
6	High level brake light	223
6.1	Assembly overview - high-level brake light	223
6.2	Removing and installing high-level brake light	223
6.3	Removing and installing high-level brake light bulb M25	226



7	Light switches on the instrument panel	227
7.1	Light switch E1 - remove and install	227
7.2	Headlight reach adjustment control E102 and/or Instrument switch and lighting adjustment E20 - remove and install	228
8	Automatic headlight range control	230
8.1	Assembly overview - automatic headlight range control	230
8.2	Removing and installing headlight range control unit J431	230
9	Switch set	232
9.1	Indicator and wiper/washer switches - remove and install	232
9.2	Connectors pinout in the switch set for turn lights and window wipers/washers	234
10	Steering column switch	235
10.1	Removing and installing steering column switch	235
10.2	Removing and installing airbag coil connector and return ring with slip ring F138	239
11	Ignition/starter switch and lock cylinder.	242
11.1	Removing and installing lock cylinder	242
11.2	Ignition/starter switch D	244
11.3	Removing and installing ignition key withdrawal lock solenoid N376	246
11.4	Steering lock housing	247
12	Auxiliary parking system	250
12.1	Locating defects and indicating faults	250
12.2	Auxiliary parking system - assembly general view	250
12.3	Control unit for Park Assist steering J446 (Hatch) - remove and install	252
12.4	Warning buzzer for rear parking aid H15 (Hatch) - remove and install	253
12.5	Control unit for Park Assist steering J446 (Sedan) - remove and install	254
12.6	Warning buzzer for rear parking aid H15 (Sedan) - remove and install	255
12.7	Parking aid sensor - remove and install	255
96	Lights, bulbs, switches - interior	259
1	Lights and internal switches	259
1.1	Interior monitoring deactivation switch E267 (version 1) - remove and install	259
1.2	Interior monitoring deactivation switch E267 (version 2) - remove and install	260
2	Lights and switches in the engine compartment	262
2.1	Contact switch for bonnet F266 - remove and install	262
3	Switched on the instrument panel	263
3.1	Dashboard switches - remove and install	263
4	Front door lights and switches	265
4.1	Front and rear window drive switches - remove and install	265
4.2	Right front window drive switch E41 - remove and install	266
4.3	Rear-view mirror adjustment switch E43 with switch for rear-view mirror adjustment E48 - remove and install	266
4.4	Front internal lighting switch (door contact) E459 - remove and install	267
5	Rear door lights and switches	268
5.1	Power window drive switch on left rear door E52 and/or Power window drive switch on right rear door E54 - remove and install	268
6	Lights and switches in luggage compartment	270
6.1	Luggage compartment lighting switch F5 - remove and install	270
6.2	Luggage compartment lighting - remove and install	270
6.3	Luggage Compartment lighting fixture W3 - replace	271
7	Roof lining lights and switches	272
7.1	Internal front light W1	272
7.2	Front internal light W1 with reading light	274
7.3	Make-up mirror lighting - remove and install	282
7.4	Internal rear light W43	283
8	Horns	286



8.1	Treble tone horn H2 - remove and install	286
8.2	Treble tone horn H2 and Bass tone horn H7 - remove and install	288
8.3	Horn actuator H	289
9	Immobilizer	290
9.1	Immobilizer control unit J362 - replace	290
9.2	Immobilizer reading coil D2 - remove and install	290
9.3	Ignition key - variable code transponder	290
9.4	Ignition key - adapt to immobilizer	290
9.5	Ignition key - replace battery	291
10	Alarm system	292
10.1	Locating defects and indicating faults	292
10.2	Anti-theft alarm system - activate and deactivate	293
10.3	Ultra-sound sensor for alarm system G209 - remove and install	293
10.4	Alarm system horn H8 - remove and install	295
97 - Wiring		297
1	Relay carriers, fuse holders, electronics boxes	297
1.1	Overview of fitting locations - relay carriers, fuse holders, electronics boxes	297
1.2	Removing and installing electronics box (E-box)	298
1.3	Removing and installing bracket for electronics box	300
1.4	Removing and installing fuse holder C SC	301
1.5	Removing and installing relay and fuse carrier 1 SR1	303
2	Control units	306
2.1	Overview of fitting locations - control units	306
2.2	Removing and installing onboard supply control unit J519	307
2.3	Removing and installing data bus diagnostic interface J533	309
3	Connectors	310
3.1	Repairing electrical wiring harnesses and plug-in connections	310
4	Releasing and dismantling connector housings	311
5	Repairing aerial cables	312
6	Optical fibre conductor	313
7	Vehicle diagnosis, testing and information systems	314