



Contents

| | |
|---|----|
| 00 - Technical data | 1 |
| 1 Repair instructions | 1 |
| 1.1 General repair instructions | 1 |
| 1.2 Notes on repair of CAN bus wiring | 1 |
| 1.3 Transmitting power and aerial fitting locations | 1 |
| 91 - Communication | 3 |
| 1 Infotainment system | 3 |
| 1.1 Layout - infotainment system | 3 |
| 1.2 Overview of fitting locations - infotainment system | 5 |
| 1.3 Removing and installing display unit for front information display and operating unit control unit J685 | 6 |
| 2 Sound system | 8 |
| 2.1 Overview of fitting locations – sound system | 8 |
| 2.2 Removing and installing front treble loudspeakers R20/R22 | 8 |
| 2.3 Removing and installing rear bass loudspeakers R15/R17 | 9 |
| 2.4 Removing and installing front bass loudspeakers R21/R23 | 12 |
| 3 Aerial systems | 14 |
| 3.1 Overview of fitting locations - aerial systems | 14 |
| 3.2 Removing and installing aerial amplifiers R24/R83 | 14 |
| 3.3 Removing and installing roof aerial RX5 | 16 |
| 3.4 Removing and installing aerials R11/R93/R183 | 17 |
| 4 Radio | 18 |
| 4.1 Overview - Radio | 18 |
| 4.2 Removing and installing radio display unit for front information display and operating unit control unit J685 | 18 |
| 5 Telephone system | 20 |
| 5.1 Mobile telephone preparation | 20 |
| 5.2 Overview of fitting locations - telephone system | 21 |
| 5.3 Removing and installing aerial amplifier for mobile telephone R86 | 22 |
| 5.4 Removing and installing telephone microphone R38 | 23 |
| 6 Multifunction steering wheel | 25 |
| 6.1 Layout multi-function steering wheel | 25 |
| 6.2 Overview - multifunction steering wheel | 25 |
| 6.3 Removing and installing steering wheel multifunction buttons E441/E440 | 26 |
| 6.4 Removing and installing Tiptronic switch in steering wheel E439/E438 | 30 |
| 7 Connection for external multimedia devices | 31 |
| 7.1 Overview of fitting locations – connection for external multimedia devices | 31 |
| 7.2 Removing and installing connection for external multimedia devices | 32 |
| 7.3 Removing and installing interface for external multimedia devices R215 | 33 |