



Contents

50 - Body - front	1
1 Lock carrier	1
1.1 Assembly overview – lock carrier	1
1.2 Removing and installing lock carrier	2
1.3 Moving to and back from service position	5
1.4 Releasing and engaging pressure hose with plug-in connector	9
2 Wings	11
2.1 Assembly overview - wing	11
2.2 Assembly overview – insulation and foam elements	12
2.3 Removing and installing wing	13
2.4 Removing and installing wing bracket	16
3 Bulkhead	19
3.1 Assembly overview - plenum chamber bulkhead	19
3.2 Assembly overview - plenum chamber bulkhead	20
3.3 Assembly overview - plenum chamber cover	21
3.4 Removing and installing plenum chamber bulkhead	22
3.5 Removing and installing plenum chamber cover	23
55 - Bonnet, rear lid	27
1 Bonnet (hood)	27
1.1 Assembly overview - bonnet	27
1.2 Assembly overview - Bowden cable	28
1.3 Assembly overview – bonnet release lever	29
1.4 Removing and installing bonnet	30
1.5 Adjusting bonnet	33
1.6 Adjusting lid lock	34
1.7 Adjusting striker pin	34
1.8 Removing and installing bonnet lock	35
1.9 Removing and installing bonnet release lever	40
1.10 Removing and installing striker pin	41
1.11 Removing and installing hinges	42
1.12 Removing and installing insulation	44
1.13 Removing and installing support rod	46
1.14 Detaching Bowden cable	47
2 Rear lid	49
2.1 Assembly overview - rear lid	49
2.2 Assembly overview – hinges	50
2.3 Assembly overview - gas strut	51
2.4 Removing and installing rear lid	52
2.5 Removing and installing stop buffer	55
2.6 Adjusting rear lid	56
2.7 Adjusting striker pin	58
2.8 Adjusting adjusting buffer	60
2.9 Removing and installing rear lid lock	61
2.10 Removing and installing operating mechanism	63
2.11 Removing and installing hinges	65
2.12 Removing and installing striker pin	67
2.13 Removing and installing rear lid seal	69
2.14 Removing and installing gas strut	70
2.15 Releasing gas from gas strut	72
3 Tank flap unit	73
3.1 Assembly overview - tank flap unit	73



3.2	Removing and installing tank flap unit	73
3.3	Removing and installing fuel tank flap	76
57	- Front doors, door components, central locking	78
1	Door	78
1.1	Assembly overview - door	78
1.2	Removing and installing inner door seal	80
1.3	Removing and installing outer door seal	82
1.4	Removing and installing door	84
1.5	Installing after renewing A-pillar	86
1.6	Adjusting door	88
1.7	Adjusting striker pin	90
1.8	Removing and installing door arrester	92
2	Door components	94
2.1	Assembly overview - door components	94
2.2	Assembly overview - door handle and door lock	97
2.3	Assembly overview - insulation	98
2.4	Removing and installing window regulator motor	99
2.5	Removing and installing window regulator	101
2.6	Removing and installing inner door cover	104
2.7	Removing and installing striker pin	107
2.8	Removing and installing lock cylinder cover cap	108
2.9	Removing and installing lock cylinder	109
2.10	Removing and installing cap without lock cylinder	112
2.11	Removing and installing door handle	115
2.12	Removing and installing mounting bracket	117
2.13	Removing and installing door lock	119
2.14	Removing and installing window channel	123
2.15	Removing and installing window slot inner seal	126
2.16	Removing and installing window slot outer seal	127
3	Central locking	131
3.1	Overview of fitting locations - central locking	131
3.2	Removing and installing ignition key battery	133
3.3	Adapting keys with remote control	135
3.4	Removing and installing tank filler flap locking motor V155	135
58	- Rear doors, door components	137
1	Door	137
1.1	Assembly overview - door	137
1.2	Removing and installing inner door seal	139
1.3	Removing and installing outer door seal	141
1.4	Removing and installing door	141
1.5	Installing after renewing B-pillar	144
1.6	Adjusting door	146
1.7	Adjusting striker pin	149
1.8	Removing and installing door arrester	150
2	Door components	153
2.1	Assembly overview - door components	153
2.2	Assembly overview - door handle and door lock	154
2.3	Assembly overview - insulation	155
2.4	Removing and installing window regulator motor	156
2.5	Removing and installing window crank	158
2.6	Removing and installing window crank mechanism	159
2.7	Removing and installing window regulator	161
2.8	Removing and installing inner door cover	163



2.9	Removing and installing striker pin	164
2.10	Removing and installing cap	165
2.11	Removing and installing door handle	168
2.12	Removing and installing mounting bracket	170
2.13	Removing and installing door lock	172
2.14	Removing and installing window channel	175
2.15	Removing and installing window slot inner seal	178
2.16	Removing and installing window slot outer seal	178
60	- Sunroof	181
1	Sliding sunroof	181
1.1	Function	181
1.2	Assembly overview - sliding sunroof	183
1.3	Assembly overview - sunroof roller blind	185
1.4	Assembly overview - sliding sunroof frame and front trim	186
1.5	Removing and installing sliding sunroof frame	187
1.6	Removing and installing wind deflector	198
1.7	Removing and installing glass panel	199
1.8	Removing glass panel when drive is defective	203
1.9	Adjusting glass panel	205
1.10	Removing and installing guide plate	207
1.11	Removing and installing front trim for sliding sunroof	212
1.12	Removing and installing sliding sunroof adjustment control unit J245	222
1.13	Removing and installing glass panel seal	224
1.14	Removing and installing interior seal	225
1.15	Removing and installing cover	226
1.16	Removing and installing sunroof switch	228
1.17	Removing and installing sunroof roller blind	228
1.18	Removing and installing tension bow	232
1.19	Adapting sliding sunroof adjustment control unit J245	235
1.20	Operating without current	236
2	Water drain hoses	237
2.1	Assembly overview - water drainage hoses	237
2.2	Cleaning water drainage hoses	237
63	- Bumpers	240
1	Bumper, front	240
1.1	Assembly overview - bumper cover	240
1.2	Assembly overview - impact bar	245
1.3	Assembly overview - add-on parts	246
1.4	Removing and installing bumper cover	255
1.5	Installing number plate carrier	274
1.6	Repairing bumper cover	275
1.7	Installing brackets for parking aid system	276
2	Bumper, rear	281
2.1	Assembly overview - bumper cover	281
2.2	Assembly overview - impact bar	286
2.3	Assembly overview - add-on parts	287
2.4	Removing and installing bumper cover	291
2.5	Installing number plate carrier	304
2.6	Repairing bumper cover	305
2.7	Installing brackets for parking aid system	306
64	- Glazing	311
1	Repair instructions	311
1.1	Minimum curing periods for bonded windows	311



1.2	Installation instructions for bonded windows	311
1.3	Preparing old undamaged windows for fitting	313
1.4	Preparing new windows for installing	313
1.5	Preparing body flange for fitting	314
1.6	Cleaning off excess adhesive	315
2	Windscreen	316
2.1	Assembly overview - windscreen	316
2.2	Removing and installing windscreen	317
3	Rear windscreen	322
3.1	Assembly overview - rear window	322
3.2	Removing and installing rear window	322
3.3	Removing broken rear window	327
4	Side window	328
4.1	Assembly overview - rear side windows	328
4.2	Removing and installing rear side window	329
4.3	Removing broken rear side window	338
5	Door windows	339
5.1	Assembly overview - front door window	339
5.2	Assembly overview - rear door window	339
5.3	Removing and installing front door window	340
5.4	Removing and installing rear door window	345
66	Exterior equipment	350
1	Radiator grille and front trim	350
1.1	Assembly overview - radiator grille	350
1.2	Removing and installing radiator grille	351
2	Spoiler	355
2.1	Assembly overview - spoiler	355
2.2	Removing and installing spoiler	358
2.3	Removing adapter	371
2.4	Removing and installing side piece of spoiler	375
3	Mouldings, trims, extensions	385
3.1	Assembly overview - side member trim	385
3.2	Assembly overview - water deflector	388
3.3	Assembly overview - B-pillar trim	389
3.4	Removing and installing front door cover	390
3.5	Removing and installing adapter for front door cover	392
3.6	Removing and installing rear door cover	394
3.7	Removing and installing adapter for rear door cover	397
3.8	Removing and installing entry moulding	399
3.9	Removing and installing side member trim	403
3.10	Removing and installing retaining strip for side member trim	412
3.11	Removing and installing water deflector	420
3.12	Removing and installing A-pillar trim	423
3.13	Removing and installing B-pillar trim	424
3.14	Removing and installing C-pillar trim on door	426
3.15	Wing trim panel	428
3.16	Removing and installing front wheel arch trim	430
3.17	Removing and installing rear wheel arch trim	434
3.18	Removing and installing wheel arch trim of rear door	438
4	Noise insulation	442
4.1	Assembly overview - noise insulation	442
5	Underbody cladding	445
5.1	Assembly overview - underbody cladding	445



5.2	Assembly overview - tunnel cross-piece	445
6	Roof moulding and roof railing	447
6.1	Assembly overview - roof railing	447
6.2	Removing and installing roof railing	447
7	Exterior mirror	450
7.1	Assembly overview - exterior mirror	450
7.2	Removing and installing exterior mirror	451
7.3	Removing and installing mirror glass	459
7.4	Removing and installing mirror adjustment unit	461
7.5	Removing and installing mirror cover	462
7.6	Removing and installing mirror trim	463
7.7	Removing and installing assembly bracket	465
8	Wheel housing liner	467
8.1	Assembly overview - front wheel housing liner	467
8.2	Assembly overview - rear wheel housing liner	468
8.3	Removing and installing front wheel housing liner	468
8.4	Removing and installing rear wheel housing liner	470
9	Lettering and emblems	474
9.1	Dimensions - lettering and emblems on rear lid	474
9.2	Dimensions - lettering, rear door	477
9.3	Dimensions - lettering and emblems, sides	478
9.4	Removing and installing badges at front	480
9.5	Removing and installing lettering and emblems	490
10	Special add-on parts	492
10.1	Repair instructions	492
10.2	Assembly overview - special add-on parts	495
11	Towing bracket	500
11.1	Assembly overview - towing bracket	500
12	Heat shields	501
12.1	Overview of fitting locations - heat shields	501
12.2	Removing and installing underbody heat shield	501
12.3	Removing and installing heat shield for centre exhaust system	502
12.4	Removing and installing heat shield for rear silencer	503