

001 - Dual headlight	1-4
1. Dual headlight	1
2. Control unit in dash panel insert, Left side light bulb, Front left headlight, Front left turn signal bulb, Left headlight dipped beam bulb, Left headlight main beam bulb, Left headlight range control motor	2
3. Light switch, Bonnet contact switch, Dipped beam relay, Onboard supply control unit	3
4. Front right headlight	4
002 - Airbag systems	5-7
1. Airbag systems	5
2. Driver side belt switch, Steering column combination switch, Airbag control unit, Airbag igniter on driver side	6
3. Airbag control unit, Airbag igniter 1 on front passenger side, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1, Diagnostic connection	7
003 - Central locking	8-11
1. Central locking	8
2. Onboard supply control unit, Tank filler flap locking motor	9
3. Onboard supply control unit, Front passenger door lock unit, Rear right door lock unit	10
4. Onboard supply control unit, Driver door lock unit, Rear left door lock unit	11
004 - Anti-theft alarm system, interior monitor	12-13
1. Anti-theft alarm system, interior monitor	12
2. Interior monitoring deactivation switch, Anti-theft alarm sensor, Onboard supply control unit	13
005 - Cruise control system (CCS)	14-15
1. Cruise control system (CCS)	14
2. Steering column combination switch, Blocking diode, Onboard supply control unit	15
006 - 1.4l petrol engine , CLPA,CLPB	16-29
1. 1.4l petrol engine , CLPA,CLPB	16
2. Battery, Starter, Alternator, Ignition/starter switch	17
3. Onboard supply control unit	18
4. Onboard supply control unit, Gearbox	19
5. Fuel supply relay	20
6. Engine/motor control unit, Fuel supply relay	21
7. Brake fluid level warning contact, Accelerator position sender, Accelerator position sender 2, Engine/motor control unit	22
8. Clutch pedal switch, Lambda probe, Main relay, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Lambda probe heater	23
9. Brake light switch, Engine/motor control unit, Injector, cylinder 1	24
10. Engine/motor control unit, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Spark plug 1, Spark plug 2	25
11. Throttle valve module, Engine/motor control unit, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug 3, Spark plug 4	26
12. Engine speed sender, Intake air temperature sender, Knock sensor 1, Coolant temperature sender, Intake manifold pressure sender, Engine/motor control unit	27
13. Engine speed sender, Hall sender, Engine/motor control unit, Diagnostic connection	28
14. Oil pressure switch, Fuel gauge sender, Fuel system pressurisation pump, Coolant shortage indicator sender, Control unit in dash panel insert	29
007 - 1.6l petrol engine , CLSA	30-43
1. 1.6l petrol engine , CLSA	30
2. Battery, Starter, Alternator, Ignition/starter switch	31
3. Onboard supply control unit, Gearbox	32
4. Onboard supply control unit	33
5. Fuel supply relay	34
6. Brake fluid level warning contact, Engine/motor control unit	35
7. Clutch pedal switch, Accelerator position sender, Accelerator position sender 2, Engine/motor control unit, Activated charcoal filter solenoid valve 1	36
8. Lambda probe, Main relay, Engine/motor control unit, Lambda probe heater	37
9. Brake light switch, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	38
10. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug 1, Spark plug 2, Spark plug 3, Spark plug 4	39
11. Knock sensor 1, Coolant temperature sender, Throttle valve module, Engine/motor control unit	40
12. Engine speed sender, Hall sender, Intake air temperature sender, Intake manifold pressure sender, Clutch position sender, Engine/motor control unit	41
13. Fuel gauge sender, Fuel system pressurisation pump, Control unit in dash panel insert, Engine/motor control unit, Diagnostic connection	42
14. Oil pressure switch, Coolant shortage indicator sender, Control unit in dash panel insert	43

008 - 1.0l petrol engine , CHZC	44-59
1. 1.0l petrol engine , CHZC	44
2. Battery, Starter, Alternator, Ignition/starter switch	45
3. Onboard supply control unit	46
4. Brake fluid level warning contact, Onboard supply control unit, Engine/motor control unit	47
5. Accelerator position sender, Accelerator position sender 2, Engine/motor control unit	48
6. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Lambda probe, Radiator outlet coolant temperature sender, Lambda probe after catalytic converter, Engine/motor control unit, Lambda probe heater, Lambda probe 1 heater after catalytic converter	49
7. Brake light switch, Main relay, Engine/motor control unit	50
8. Intake manifold sender, Oil pressure sender, Charge pressure sender, Engine/motor control unit	51
9. Engine speed sender, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1, Valve for oil pressure control	52
10. Hall sender, Coolant temperature sender, Hall sender 3, Engine/motor control unit, Charge pressure positioner	53
11. Fuel pressure sender, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3	54
12. Knock sensor 1, Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Spark plug 1, Spark plug 2, Spark plug 3	55
13. Intake manifold pressure sender, Engine/motor control unit, Fuel pressure regulating valve, Charge air cooling pump	56
14. Clutch position sender, Throttle valve module, Engine/motor control unit, Vacuum pump	57
15. Fuel pump control unit	58
16. Coolant shortage indicator sender, Control unit in dash panel insert, Fuel pump control unit	59
009 - Trailer coupling	60-62
1. Trailer coupling	60
2. Trailer detector control unit, Trailer socket	61
3. Trailer detector control unit	62
010 - Anti-lock brake system (ABS) , CLPA,CLPB,CLSA	63-65
1. Anti-lock brake system (ABS) , CLPA,CLPB,CLSA	63
2. ABS control unit	64
3. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, Front left speed sensor, ABS control unit	65
011 - Radio navigation system	66-69
1. Radio navigation system	66
2. Control unit with display for radio and navigation, Front left loudspeaker, Front left door loudspeaker, Front right loudspeaker, Front right door loudspeaker	67
3. Control unit with display for radio and navigation	68
4. Control unit with display for radio and navigation, Rear left door loudspeaker, Rear right door loudspeaker	69
012 - 6-speed automatic gearbox , CLPA,CLPB,CLSA	70-74
1. 6-speed automatic gearbox , CLPA,CLPB,CLSA	70
2. Reversing switch, Multifunction switch, Gearbox oil temperature sender, Automatic gearbox control unit, Gearbox, Solenoid valve 1, Solenoid valve 2	71
3. Gearbox input speed sender, Gearbox output speed sender, Automatic gearbox control unit, Gearbox, Automatic gearbox pressure regulating valve 1, Automatic gearbox pressure regulating valve 3, Automatic gearbox pressure regulating valve 4, Automatic gearbox pressure regulating valve 5, Automatic gearbox pressure regulating valve 7	72
4. Selector lever, Automatic gearbox control unit, Gearbox, Automatic gearbox pressure regulating valve 2	73
5. Starter, Selector lever, Starter inhibitor relay, Automatic gearbox control unit, Onboard supply control unit, Ignition key withdrawal lock solenoid	74
013 - Air conditioning system with manual regulation , CLPA,CLPB,CLSA	75-78
1. Air conditioning system with manual regulation , CLPA,CLPB,CLSA	75
2. High-pressure sender, Air conditioning system control unit	76
3. Evaporator output temperature sender, Air conditioning system control unit, Fresh air blower series resistor with overheating fuse, Fresh air blower, Fresh air and air recirculation flap control motor	77
4. Air conditioning system relay, Air conditioning system control unit, Engine/motor control unit, Air conditioner compressor regulating valve	78
014 - Air conditioning system with manual regulation , CHZC	79-82
1. Air conditioning system with manual regulation , CHZC	79
2. High-pressure sender, Air conditioning system control unit	80
3. Evaporator output temperature sender, Air conditioning system control unit, Fresh air blower series resistor with overheating fuse, Fresh air blower, Fresh air and air recirculation flap control motor	81

4. Air conditioning system control unit, Air conditioner compressor regulating valve	82
015 - Radiator fan , CHZC	83-84
1. Radiator fan , CHZC	83
2. Engine/motor control unit, Radiator fan	84
016 - Radiator fan , CLPA,CLPB,CLSA	85-86
1. Radiator fan , CLPA,CLPB,CLSA	85
2. Radiator fan control unit, Air conditioning system control unit, Engine/motor control unit, Radiator fan	86
017 - Data bus network	87-92
1. Data bus network	87
2. Onboard supply control unit, Diagnostic connection	88
3. Steering column combination switch, Onboard supply control unit	89
4. ABS control unit, Automatic gearbox control unit, Engine/motor control unit	90
5. Airbag control unit, Control unit in dash panel insert, Air conditioning system control unit, Trailer detector control unit	91
6. Rain sensor, Power steering control unit, Control unit with display for radio and navigation	92
018 - Fog light	93-94
1. Fog light	93
2. Left fog light bulb, Right fog light bulb	94
019 - Fog lights with static cornering light	95-96
1. Fog lights with static cornering light	95
2. Light switch, Onboard supply control unit, Left fog light bulb, Right fog light bulb	96
020 - Fuse assignment	97-103
1. Fuse assignment	97
2. Battery, Starter, Alternator, Fuse holder A, Fuse 1 on fuse holder A, Fuse 3 on fuse holder A, Fuse 4 on fuse holder A	98
3. Fuse holder A, Fuse 5 on fuse holder A, Fuse 6 on fuse holder A	99
4. Fuse holder B, Fuse 1 on fuse holder C, Fuse 2 on fuse holder B, Fuse 3 on fuse holder B, Fuse 5 on fuse holder C, Fuse 7 on fuse holder B, Fuse 8 on fuse holder B, Fuse 9 on fuse holder B, Fuse holder C	100
5. Fuse holder B, Fuse 9 on fuse holder B, Fuse 17 on fuse holder B, Fuse 19 on fuse holder B, Fuse 20 on fuse holder B, Fuse 28 on fuse holder B, Fuse 34 on fuse holder B, Fuse 35 on fuse holder B, Fuse 36 on fuse holder B	101
6. Light switch, Fuse holder B, Fuse 36 on fuse holder B, Fuse 37 on fuse holder B, Fuse 39 on fuse holder B, Fuse 40 on fuse holder B, Fuse 54 on fuse holder B, Fuse 55 on fuse holder B, Fuse 57 on fuse holder B, Fuse 58 on fuse holder B, Fuse 59 on fuse holder B	102
7. Fuse holder B, Fuse holder D, Fuse 1 on fuse holder D, Fuse 2 on fuse holder D, Fuse 3 on fuse holder D	103
021 - Earthing concept	104-116
1. Earthing concept	104
2. Hazard warning lights button, Heated rear window button, Tyre Pressure Loss Indicator button, Parking brake contact switch, Treble horn, Air conditioning system control unit, Left fog light bulb, Right fog light bulb	105
3. Power steering control unit, Control unit with display for radio and navigation, Onboard supply control unit, Fresh air blower	106
4. Button for TCS and electronic stabilisation program, Selector lever, Operating unit for window regulator in driver door, Front passenger door lock unit	107
5. Steering column combination switch, Fuel delivery unit, Ambient temperature sensor, Coolant shortage indicator sender, Air conditioning system relay, Control unit in dash panel insert, Fuel pump control unit, Cigarette lighter, Rear left door lock unit, Rear right door lock unit	108
6. Light switch, Bonnet contact switch, Clutch position sender, X-contact relief relay, Starter inhibitor relay, Automatic gearbox control unit, Dipped beam relay, Front left headlight, Front right headlight, Driver side reading light	109
7. Brake light switch, Brake fluid level warning contact, Alarm horn, Engine/motor control unit, Alarm horn relay, Gearbox, Vacuum pump	110
8. Trailer detector control unit, Left tail light, Right tail light, Trailer socket, Left number plate light, Right number plate light	111
9. Rear lid handle release button, Rear lid lock unit, High-pressure sender, Left turn signal repeater bulb, Right turn signal repeater bulb, High-level brake light bulb, Air conditioner compressor regulating valve, Windscreen wiper motor, Radiator fan, Rear window wiper motor, Heated rear window	112
10. Anti-theft alarm sensor, ABS control unit, Diagnostic connection	113
11. Ignition coil 2 with output stage, Ignition coil 3 with output stage, Charge air cooling pump	114
12. Coolant temperature sender, Ignition coil 1 with output stage, Ignition coil 4 with output stage, Charge pressure positioner	115
13. Intake manifold sender. Charge pressure sender. Hall sender. Intake air temperature sender. Fuel	116

pressure sender, Hall sender 3	
022 - Convenience system	117-120
1. Convenience system	117
2. Alarm horn, Onboard supply control unit, Alarm horn relay	118
3. Window regulator switch in front passenger door, Treble horn, Front passenger side window regulator motor	119
4. Operating unit for window regulator in driver door, Driver side window regulator motor	120
023 - Basic equipment	121-139
1. Basic equipment	121
2. Fuse holder B	122
3. Fuse holder B	123
4. Power steering control unit, Onboard supply control unit	124
5. Hazard warning lights button, Heated rear window button, Onboard supply control unit, Driver side reading light	125
6. Onboard supply control unit, Windscreen wiper motor, Heated rear window	126
7. Rear lid handle release button, Rear lid lock unit, Onboard supply control unit	127
8. Onboard supply control unit, Left turn signal repeater bulb, Right turn signal repeater bulb	128
9. Steering column combination switch, Onboard supply control unit	129
10. Steering column combination switch, Onboard supply control unit	130
11. Light switch, Onboard supply control unit	131
12. Light switch, Driver side interior locking button for central locking system, Onboard supply control unit	132
13. Onboard supply control unit, Left tail light, Right tail light	133
14. Onboard supply control unit, Rear window wiper motor, Windscreen and rear window washer pump, Left number plate light, Right number plate light	134
15. Reversing light switch, Onboard supply control unit, High-level brake light bulb	135
16. Ambient temperature sensor, Control unit in dash panel insert	136
17. Immobiliser reader coil, Parking brake contact switch, Control unit in dash panel insert	137
18. X-contact relief relay, Diagnostic connection	138
19. Cigarette lighter	139
024 - Anti-lock brake system (ABS) with electronic stabilisation program (ESP) , CHZC,CLPA,CLPB, CLSA	140-144
1. Anti-lock brake system (ABS) with electronic stabilisation program (ESP) , CHZC,CLPA,CLPB,CLSA	140
2. Rear right speed sensor, ABS control unit	141
3. Front right speed sensor, Rear left speed sensor, Front left speed sensor, ABS control unit	142
4. Button for TCS and electronic stabilisation program, Tyre Pressure Loss Indicator button, ABS control unit	143
5. Steering column combination switch	144
802 - - Fitting Locations: Fuses - 3	
1. Fuses	145-157
1.1 Fuse holder A -SA-, From August2017	145-147
1.1.1 Fitting Location Fuse holder A -SA-, From August 2017	145-146
1.1.2 Fuse Assignment Fuse holder A -SA-, From August 2017	147
1.2 Fuse holder B -SB-, From August2017	148-152
1.2.1 Fitting Location Fuse holder B -SB-, From August 2017	148
1.2.2 Fuse Assignment Fuse holder B -SB-, From August 2017	149-152
1.3 Fuse holder C -SC-, From August2017	153-154
1.3.1 Fitting Location Fuse holder C -SC-, From August 2017	153-154
1.4 Fuse holder D -SD-, From August2017	155-157
1.4.1 Fitting Location Fuse holder D -SD-, From August 2017	155
1.4.2 Fuse Assignment Fuse holder D -SD-, From August 2017	156-157
803 - - Fitting Locations: Relays - 3	
1. Relays	158-160
1.1 Relay carrier (15 slot), from August 2017	158-160
1.1.1 Relay carrier (15 slot), from August 2017	160
804 - - Fitting Locations: Front part of vehicle - 3	
1. Front part of vehicle	161-166
1.1 ABS control unit -J104-, from August2017	161-162
1.2 Engine control unit -J623-, fromAugust 2017	163-165
1.2.1 Engine control unit -J623-, CHZC,-T94- and -T60-	164
1.2.2 Engine control unit -J623-, CLPA,CLPB, CLSA, -T80- and -T52-	165
1.3 Radiator fan control unit -J293-, from August 2017	166
805 - - Fitting Locations: Middle part of vehicle - 3	
1. Middle part of vehicle	167-172
1.1 Onboard supply control unit -J519-, from August 2017	167-168
1.2 Control unit in dash panel Insert -J285-. from Auauast 2017	169

1.3 Airbag control unit -J234-, from August 2017	170
1.4 Air conditioning system control unit -J301-, from August 2017	171
1.5 Fuel pump control unit -J538-, from August 2017	172
1.6 Power steering control unit -J500-, from August 2017	172
830 - Connector views: parts with prefix A to D - 3	173-174
1. Connector views: parts with prefix A to D	173-174
1.1 Starter -B-	173
1.2 Alternator -C-	173
1.3 Immobilizer reader coil -D2-	173-174
831 - Connector views: parts with prefix E - 3	175-178
1. Connectors views: parts with prefix E	175-178
1.1 Window regulator switch in front passenger door -E107-	175
1.2 Rear lid handle release button -E234-	176
1.3 Driver side belt switch -E24-	176
1.4 TCS and ESP button -E256-	177
1.5 Driver side interior locking button for central lockingsystem -E308-	177
1.6 Selector lever -E313-	178
1.7 Operating unit for window regulator in driver door -E512-	178
832 - Connector views: parts with prefix F - 3	179-182
1. Connector views: parts with prefix F	179-182
1.1 Oil pressure switch -F1-	179
1.2 Rear lid lock unit -F256-	179
1.3 Bonnet contact switch -F266-	180
1.4 Parking brake contact switch -F321-	180
1.5 Brake fluid level warning contact -F34-	181
1.6 Reversing light switch -F4-	181-182
833 - Connector views: parts with prefix G - 3	183-196
1. Connector views: parts with prefix G	183-196
1.1 Fuel gauge sender -G-/ Fuel system pressurisation pump -G6-	184
1.2 Oil pressure sender -G10-	184
1.3 Ambient temperature sensor -G17-	184
1.4 Accelerator position sender 2 -G185-/ Accelerator position sender -G79-	185
1.5 Rain sensor -G213-	185
1.6 Fuel pressure sender -G247-	186
1.7 Evaporator output temperature sender -G263-	186
1.8 Engine speed sender -G28-	187
1.9 Hall sender 3 -G300-	187
1.10 Coolant shortage indicator sender -G32-	188
1.11 Hall sender -G40-	188
1.12 Intake air temperature sender -G42-/ Intake manifold pressure sender -G71-	189
1.13 Rear right speed sensor -G44-	189
1.14 Front right speed sensor -G45-	190
1.15 Rear left speed sensor -G46-	190
1.16 Front left speed sensor -G47-	191
1.17 Clutch position sender -G476-	191
1.18 Knock sensor 1 -G61-	192
1.19 Coolant temperature sender -G62-	193
1.20 Radiator outlet coolant temperature sender -G83-	194
1.21 Lambda probe 1 before catalytic converter GX10	194
1.22 Charge pressure sender GX26	195
1.23 Lambda probe 1 after catalytic converter GX7	195
1.24 Intake manifold sender GX9	196
834 - Connector views: parts with prefix H to I - 3	197
1. Connector views: parts with prefix H to I	197
1.1 Treble horn -H2-	197
1.2 Alarm horn -H12-	197
836 - Connector views: parts with prefix K to M - 3	198-201
1. Connector views: parts with prefix K to M	198-201
1.1 Left fog light bulb -L22-	198
1.2 Right fog light bulb -L23-	198
1.3 Additional brake light bulb -M25-	199
1.4 Front left headlight -MX1-	199
1.5 Front right headlight -MX2-	200
1.6 Left tail light -MX3-	200
1.7 Right tail light -MX4-	201
837 - Connector views: parts with prefix N - 3	202-214

1. Connector views: parts with prefix N	202-214
1.1 Ignition coil 2 with output stage -N127-	202
1.2 Airbag igniter 1 on front passenger side -N131-	203
1.3 Driver seat belt tensioner igniter 1 -N153-	204
1.4 Front passenger seat belt tensioner igniter 1 -N154-	204
1.5 Inlet camshaft control valve 1 -N205-	204
1.6 Fresh air blower series resistor with overheatingfuse -N24-	205
1.7 Fuel pressure regulating valve -N276-	205
1.8 Air conditioner compressor regulating valve -N280-	206
1.9 Ignition coil 3 with output stage -N291-	206
1.10 Ignition coil 4 with output stage -N292-	207
1.11 Injector, cylinder 1 -N30-	208
1.12 Injector, cylinder 2 -N31-	208
1.13 Exhaust camshaft control valve 1 -N318-	209
1.14 Injector, cylinder 3 -N32-	210
1.15 Injector, cylinder 4 -N33-	210
1.16 Ignition key withdrawal lock solenoid -N376-	211
1.17 Valve for oil pressure control -N428-	211
1.18 Ignition coil 1 with output stage -N70-	212
1.19 Activated charcoal filter solenoid valve 1 -N80-	213
1.20 Gearbox -NX1-	213-214
839 - Connector views: parts with prefix R - 3	215-218
1. Connector views: parts with prefix R	215-218
1.1 Front left loudspeaker -R2-	215
1.2 Front right loudspeaker -R3-	215
1.3 Rear left door loudspeaker -RX15-	216
1.4 Rear right door loudspeaker -RX16-	216
1.5 Front left door loudspeaker -RX2-	217
1.6 Front right door loudspeaker -RX3-	217-218
840 - Connector views: parts with prefix S to U - 3	219-222
1. Connector views: parts with prefix S to U	219-222
1.1 Coupling station on engine -T14-	219
1.2 Coupling station on gearbox	219
1.3 Coupling station for alternator and air-conditionercompressor	220
1.4 Coupling point in engine compartment, left	221
1.5 Cigarette lighter -U1-	221
1.6 Trailer socket -U10-	222
1.7 Diagnostic connection -U31-	222
841 - Connector views: parts with prefix V - 3	223-231
1. Connector views: parts with prefix V	223-231
1.1 Wiper motor -V-	223
1.1.1 Connector -T4i-	224
1.2 Rear window wiper motor -V12-	224
1.3 Driver side window regulator motor -V147-	224
1.4 Front passenger side window regulator motor -V148-	225
1.5 Fresh air and air recirculation flap control motor -V154-	225
1.6 Tank filler flap locking motor -V155-	226
1.7 Charge air cooling pump -V188- , 3-cylinder engine	226
1.8 Vacuum pump -V22- , 3-cylinderengine	227
1.9 Charge pressure positioner -V465- , 3-cylinder engine	227
1.10 Windscreen and rear window washer pump -V59-	228
1.11 Radiator fan -V7-	228
1.12 Driver door lock unit -VX21-	229
1.13 Front passenger door lock unit -VX22-	230
1.14 Rear left door lock unit -VX23-	230
1.15 Rear right door lock unit -VX24-	230-231
842 - Connector views: parts with prefix W to Z - 3	232-233
1. Connector views: parts with prefix W to Z	232-233
1.1 Driver side reading light -W19-	232
1.2 Left number plate light -X4-	232
1.3 Right number plate light -X5-	233
1.4 Automatic anti-dazzle interior mirror -Y7-	233