



Contents

01 - Self-diagnosis	1
1 Vehicle diagnosis, testing and information systems	1
1.1 Connecting vehicle diagnosis, testing and information system VAS 5051A	2
2 Immobilizer self-diagnosis	4
2.1 Performing immobilizer self-diagnosis	4
2.2 Fault table	9
2.3 Reading data block	11
2.4 Coding immobilizer control unit J362	16
3 Guided functions for immobilizer	18
3.1 Observe additional information and prerequisites for "online request with GeKo-VW"	18
3.2 Online system test	19
3.3 Adaptation of ignition keys	19
3.4 Adaption (matching) after changing engine control unit	20
3.5 Adapting immobilizer	20
4 Self-diagnosis of dash panel insert	21
4.1 Performing self-diagnosis of dash panel insert	21
4.2 Fault table	26
4.3 Final control diagnosis	29
4.4 Code control unit	31
4.5 Read data block	33
4.6 Adaption	37
5 Data bus diagnostic interface	45
5.1 Performing self-diagnosis of data bus diagnostic interface J533	45
5.2 Fault table	49
5.3 Coding data bus diagnostic interface J533	50
5.4 Reading data block	51
27 - Starter, current supply, CCS	55
1 Battery	55
1.1 Fundamentals for batteries	55
1.2 Battery handling instructions	55
1.3 Visual check	56
1.4 Checking battery via magic eye	56
1.5 Batteries with magic eye and no cell sealing plugs	57
1.6 Batteries with magic eye and sealed cell plugs	57
1.7 Batteries with no magic eye	61
1.8 Charging battery	64
1.9 Battery load test	66
2 Removing and installing battery	68
2.1 Removing and installing battery	68
3 Disconnecting and reconnecting batteries	70
3.1 Disconnecting battery	70
3.2 Fuse holder on battery	70
3.3 Connecting battery	71
3.4 Installing fuse holder on battery	72
3.5 Steps after connecting battery	72
4 Starter	74
4.1 Removing and installing starter (1.4 l petrol engine)	74
4.2 Removing and installing starter (1.6 l, 1.8 l petrol engines and diesel engines)	75
5 Alternator	78
5.1 Assembly overview	78
5.2 Poly-V-belt drives	86



5.3	Checking V-belt	87
5.4	Checking poly-V-belt	88
5.5	Removing and installing poly-V-belt	88
5.6	Compact alternator with poly-V-belt drive	93
5.7	Checking alternator carbon brushes	94
5.8	Removing and installing voltage regulator for alternator	94
5.9	Installing poly-V-belt pulley with freewheel	94
90	- Gauges, instruments	97
1	Dash panel insert	97
1.1	Renewing dash panel insert	97
1.2	Removing and installing dash panel insert	97
1.3	Description of back of dash panel insert	98
1.4	Pin assignment of connections on dash panel insert	100
1.5	Warning lamp symbols in dash panel insert	101
1.6	Description of instruments	103
2	Service interval display	104
2.1	Resetting service interval display	104
92	- Windscreen wash/wipe system	105
1	Windscreen wiper system	105
1.1	Assembly overview - windscreen wiper system	105
1.2	Removing and installing windscreen wiper system	105
1.3	Removing and installing wiper rubber blade	110
2	Windscreen washer and headlight washer system	111
2.1	Assembly overview - windscreen washer and headlight washer system	111
2.2	Adjusting windscreen washer system jets	111
2.3	Adjusting headlight washer system jets	112
2.4	Removing windscreen washer system spray jets	113
2.5	Removing headlight washer system spray jets	113
2.6	Removing windscreen washer and headlight washer system reservoir	113
3	Rear window wipe/wash system	115
3.1	Assembly overview - rear window wiper system	115
3.2	Adjusting rear window wiper park position	115
3.3	Adjusting washer jet	116
3.4	Removing rear window wiper	117
94	- Lights, bulbs, switches - exterior	119
1	Headlight	119
1.1	Assembly overview - headlight	119
1.2	Removing and installing headlight	120
1.3	Replacing headlight bulb	120
1.4	Removing and installing headlight range control motor	121
1.5	Adjusting headlights	121
2	Front fog lights	122
2.1	Removing and installing fog light	122
2.2	Removing and installing fog light bulb	122
3	Front turn signals	123
3.1	Removing and installing front turn signal	123
3.2	Removing and installing turn signal bulb	123
4	Side mounted repeater turn signals	124
4.1	Removing and installing side mounted repeater turn signal	124
5	Tail lights	125
5.1	Assembly overview - tail light (Polo Classic)	125
5.2	Assembly overview - tail light (Polo Variant)	126



5.3	Removing and installing tail light bulb holder (Polo Variant)	127
5.4	Removing and installing tail light bulb holder (Polo Classic)	127
6	Number plate lights	128
6.1	Removing and installing number plate light	128
6.2	Replacing number plate light bulb	128
7	Additional brake lights	129
7.1	Additional brake light (Polo Classic)	129
7.2	Additional brake light (Polo Variant)	129
8	Steering column switch and ignition and starter switch	131
8.1	Assembly overview - steering column	131
8.2	Removing and installing steering column switch	132
8.3	Pin assignment on steering column switch	134
8.4	Removing and installing steering lock housing	134
8.5	Removing and installing lock cylinder	136
8.6	Removing and installing ignition / starter switch	137
8.7	Pin assignment for ignition switch	137
96	- Lights, bulbs, switches - interior	138
1	Immobilizer	138
1.1	Assembly overview - immobilizer	138
1.2	Removing and installing immobilizer control unit	139
1.3	Immobilizer reader coil D2	139
1.4	Transponder	139
2	Interior lights and switches	140
2.1	Assembly overview - switches in dash panel	140
2.2	Removing and installing light switch E1	140
2.3	Removing and installing headlight range control regulator E102 with switches and instruments illumination regulator E20	141
2.4	Removing and installing switches in centre of dash panel	142
2.5	Removing and installing hazard warning light switch E3	142
2.6	Interior light	143
2.7	Removing and installing glove compartment light W6	144
2.8	Removing and installing sliding sunroof adjustment regulator E139	144
2.9	Removing and installing mirror adjustment switch E43 with mirror adjustment change-over switch E48	145
2.10	Removing and installing door contact switch	145
2.11	Removing and installing luggage compartment light switch	146
2.12	Removing and installing luggage compartment light W3	146
97	- Wiring	147
1	Removing and installing relay plate, coupling station and fuse holder	147
1.1	Removing and installing relay carrier	147
1.2	Removing and installing coupling station behind relay carrier	149
1.3	Removing and installing fuse holder in front left footwell	150
2	Wiring harness and connector repairs	152
2.1	Notes on safety	152
2.2	General notes concerning repairs to vehicle electrical system	152
2.3	Notes on repairs to wiring harness and connectors	152
2.4	Supplementary notes on repair of CAN bus wiring	153
2.5	Wiring harness repair set V.A.G 1978	153
3	Renewal of aerial wiring	155
3.1	General description	155
3.2	Assembly overview - aerial wire	155
3.3	Installing a new aerial wire	155