



Contents

00 - Technical data	1
1 Vehicle identification data	1
1.1 Type plate and vehicle identification number	1
1.2 Vehicle data plate	1
2 Body dimensions	2
2.1 Body - front	2
2.2 Body - centre	5
2.3 Body - rear	9
2.4 Floor group	11
3 Body panel gaps/shut lines	14
3.1 Body - front	14
3.2 Body - centre	15
3.3 Body - rear	16
4 Straightening jig	17
4.1 Overview	17
5 Galvanized body parts	25
50 - Body - front	26
1 Renewing wishbone support	26
1.1 Removing	26
2 Renewing upper wheel housing longitudinal member	28
2.1 Removing	28
3 Renewing front wheel housing	30
3.1 Removing	30
4 Renewing front wheel housing - partial renewal	32
4.1 Removing	32
5 Renewing front longitudinal member	34
5.1 Removing	34
6 Renewing front longitudinal member	36
6.1 Removing	36
51 - Body - centre	38
1 Renewing roof	38
1.1 Removing	38
2 Renewing roof (estate)	40
2.1 Removing	40
2.2 Renewing T-pins for roof moulding	42
3 Renewing front roof cross member	44
3.1 Removing	44
4 Renewing rear roof cross member	46
4.1 Removing	46
5 Renewing rear roof cross member (estate)	48
5.1 Removing	48
6 Renewing outer side panel - partial renewal	50
6.1 Removing	50
7 Renewing outer side panel - partial renewal (estate)	53
7.1 Removing	53
8 Renewing inner side panel (estate)	56
8.1 Includes: D-pillar	56
9 Renewing A-pillar	59



9.1	Removing	59
10	Renewing B-pillar	62
10.1	Removing	62
11	Renewing outer side member	65
11.1	Removing	65
12	Renewing outer side panel - partial renewal	68
12.1	Removing	68
13	Renewing inner side member - partial renewal	70
13.1	Removing	70
14	Renewing floor panel	72
14.1	Removing	72
53 - Body - rear		78
1	Renewing rear cross panel	78
1.1	Removing	78
2	Renewing rear cross panel (estate)	81
2.1	Removing	81
3	Renewing tail light mounting	85
3.1	Removing	85
4	Renewing tail light mounting (estate)	87
4.1	Removing	87
5	Renewing intermediate piece	89
5.1	Removing	89
6	Renewing intermediate piece (estate)	92
6.1	Includes: bracket for tensioning strap and cross member	92
7	Renewing luggage compartment floor, part section	96
7.1	Removing	96
8	Renewing web plate (estate)	99
8.1	Includes: cross member	99
9	Renewing rear longitudinal member - partial renewal	101
9.1	Removing	101
10	Renewing rear longitudinal member	103
10.1	Includes: web plate	103
11	Renewing side panel	105
11.1	Removing	105
12	Renewing side panel (estate)	108
12.1	Removing	108
13	Renewing rear wheel housing	111
13.1	Removing	111
14	Renewing rear wheel housing (estate)	114
14.1	Removing	114
15	Renewing outer wheel housing liner	118
15.1	Removing	118
16	Renewing wheel housing liner (estate)	120
16.1	Removing	120
17	Renewing mounting plate (estate)	122
17.1	Removing	122
18	Renewing rear cross member (estate)	124
18.1	Removing	124