



Contents

00 - Technical data	1
1 Gearbox identification	1
1.1 Gearbox identification	1
1.2 Code letters, gearbox allocation, ratios, capacities	2
2 Transmission layout	3
2.1 Transmission layout	3
3 Calculating overall ratio (i)	5
3.1 Calculating overall ratio (i)	5
4 General repair instructions	5
4.1 General repair instructions	5
30 - Clutch	7
1 Servicing clutch control	7
1.1 Servicing clutch control	7
1.2 Assembly overview - Pedal cluster	8
1.3 Removing and installing over-centre spring	11
1.4 Removing and installing clutch pedal	13
1.5 Assembly overview - Hydraulic system	14
1.6 Removing and installing master cylinder	17
1.7 Bleeding clutch system	18
2 Servicing clutch release mechanism	19
2.1 Servicing clutch release mechanism	19
3 Servicing clutch	22
3.1 Servicing clutch	22
34 - Controls, Housing	26
1 Servicing gear selector mechanism	26
1.1 Servicing gear selector mechanism	26
1.2 Installation position of gear selector mechanism	26
1.3 Removing and installing gear selector cables	29
1.4 Removing and installing gear stick housing	35
1.5 Installing gear stick gaiter to gear stick knob	38
1.6 Removing and installing gear stick	39
1.7 Adjusting gear selector mechanism	43
2 Removing and installing gearbox	46
2.1 Removing and installing gearbox	46
3 Checking gearbox oil	58
3.1 Checking gearbox oil	58
4 Dismantling and assembling gearbox	60
4.1 Dismantling and assembling gearbox	60
4.2 Removing and installing cover for gearbox housing and 5th gear	61
4.3 Removing and installing gearbox housing and selector mechanism	64
4.4 Removing and installing input shaft, output shaft (pinion shaft), differential and selector forks	67
4.5 Dismantling and assembling sequence	70
5 Servicing gearbox housing and clutch housing	87
5.1 Servicing gearbox housing and clutch housing	87
6 Dismantling and assembling gearbox selector mechanism	96
6.1 Dismantling and assembling gearbox selector mechanism	96
7 Dismantling and assembling selector forks	101
7.1 Dismantling and assembling selector forks	101



35 - Gears, Shafts	107
1 Dismantling and assembling input shaft	107
1.1 Dismantling and assembling input shaft	107
2 Adjusting input shaft	118
2.1 Adjusting input shaft	118
2.2 Table of adjustment shims	119
2.3 Carrying out check measurement	121
3 Dismantling and assembling output shaft (pinion shaft)	122
3.1 Dismantling and assembling output shaft (pinion shaft)	122
4 Adjusting output shaft	146
4.1 Adjusting output shaft	146
5 Dismantling and assembling reverse shaft	149
5.1 Dismantling and assembling reverse shaft	149
39 - Final drive, Differential	153
1 Renewing flanged shaft oil seals (gearbox installed)	153
1.1 Renewing flanged shaft oil seals (gearbox installed)	153
1.2 Renewing oil seals on gearboxes without springs behind flanges	153
1.3 Renewing oil seal on gearboxes with springs behind flanges	154
2 Dismantling and assembling differential	157
2.1 Dismantling and assembling differential	157
3 Adjustment overview	173
3.1 Adjustment overview	173
4 Adjusting differential	173
4.1 Adjusting differential	173