



## Contents

<b>01 - Self diagnosis</b> .....	<b>1</b>
<b>1 Self diagnosis</b> .....	<b>1</b>
1.1 Self diagnosis .....	1
1.2 Function .....	1
1.3 Technical data of self diagnosis .....	1
1.4 Connecting fault reader V.A.G 1551 and selecting engine electronics control unit .....	2
1.5 Coding Simos control unit .....	3
1.6 Interrogating and erasing fault memory .....	4
1.7 Fault table .....	5
1.8 Final control diagnosis .....	12
1.9 Read measured value block .....	15
1.10 Display group overview .....	15
<b>24 - Mixture preparation, Injection</b> .....	<b>20</b>
<b>1 Simos injection and ignition system</b> .....	<b>20</b>
1.1 Simos injection and ignition system .....	20
1.2 Fitting locations overview .....	20
1.3 Servicing injection part .....	23
1.4 Dismantling and assembling intake manifold - upper part .....	30
1.5 Dismantling and assembling intake manifold - lower part .....	33
1.6 Dismantling and assembling air cleaner .....	34
1.7 Safety precautions .....	35
1.8 Rules for cleanliness .....	35
1.9 Technical data .....	36
1.10 Idling check .....	36
1.11 Performing basic setting .....	37
1.12 Checking Lambda probe and Lambda control .....	38
1.13 Checking Lambda probe heating .....	42
1.14 Checking engine operating mode .....	44
1.15 Checking intake manifold change-over valve .....	45
1.16 Checking air mass meter .....	46
1.17 Checking throttle valve control part .....	48
1.18 Checking coolant temperature sender .....	55
1.19 Checking intake air temperature sender .....	57
1.20 Checking engine speed sender .....	60
1.21 Checking speed signal .....	61
1.22 Checking control unit voltage supply .....	63
1.23 Matching engine electronic control unit to electronic immobilizer .....	65
1.24 Checking air conditioner and air conditioner compressor signals .....	66
1.25 Checking starter signal .....	67
1.26 Checking injectors .....	67
1.27 Checking fuel pressure regulator and holding pressure .....	70
1.28 Checking intake air system for leaks (unmetered air) .....	72
<b>28 - Ignition system</b> .....	<b>73</b>
<b>1 Simos injection and ignition system</b> .....	<b>73</b>
1.1 Simos injection and ignition system .....	73
1.2 Servicing ignition part .....	73
1.3 Safety precautions .....	77
1.4 Test data, spark plugs .....	77
1.5 Checking position of distributor .....	77
1.6 Removing and installing distributor .....	78
1.7 Checking ignition timing control .....	82
1.8 Checking Hall sender .....	82



**Caddy 1996 , Polo Classic 1996 >  
Simos injection and ignition system - Edition 11.1995**

---

1.9	Checking knock sensor . . . . .	83
1.10	Checking ignition transformer and output stage . . . . .	85