



Contents

01 - Self diagnosis	1
1 Self diagnosis	1
1.1 Self diagnosis	1
1.2 Function	1
1.3 Technical data of self diagnosis	1
1.4 Connecting fault reader V.A.G 1551 and selecting engine electronics control unit	2
1.5 Interrogating fault memory	3
1.6 Fault table	4
1.7 Erasing fault memory	6
1.8 Final control diagnosis	7
1.9 Reading measured value block	10
23 - Mixture preparation, Injection	12
1 Servicing fuel injection system	12
1.1 Servicing fuel injection system	12
1.2 Safety precautions	12
1.3 Rules for cleanliness	12
1.4 Fitting locations overview	13
1.5 Servicing injection pump	15
1.6 Servicing fuel filter	20
1.7 Checking fuel system for leaks	21
1.8 Removing and installing injection pump	22
1.9 Checking and adjusting injection pump timing	27
1.10 Checking and adjusting idling speed, idling speed boost and governed speed	30
1.11 Idling speed boost actuator	32
1.12 Checking commencement of injection valve	32
1.13 Checking engine temperature sender	33
1.14 Resistance figures for engine temperature sender	33
1.15 Checking idling speed boost valve	34
1.16 Checking full throttle stop valve	34
1.17 Residual volume basic setting	35
1.18 Removing and installing injectors	36
1.19 Servicing injectors	37
1.20 Checking injector nozzle valve tip for damage, injection pressure and for leakage	38
28 - Glow plug system	40
1 Checking glow plug system	40
1.1 Checking glow plug system	40
1.2 Checking glow plug current consumption	40
1.3 Checking glow plugs	41
1.4 Glow plugs with burned electrodes	41