



Contents

00 - Technical data	1
1 Brake allocation via PR No.	1
1.1 Front brakes	1
1.2 Rear brakes	2
2 Technical data for brakes	4
2.1 Brake master cylinder and brake servo	4
2.2 Front brakes	4
2.3 Rear brakes	5
3 Brake test	7
3.1 General	7
3.2 Test for vehicles with front-wheel drive	7
45 - Anti-lock brake system	8
1 General notes for anti-lock brake system (ABS)	8
1.1 ABS Mark 60	8
1.2 ABS Bosch 5.7	9
1.3 Bosch 8.0 from model year 2005	10
2 Notes for repair work on anti-lock brake system	12
3 Connecting VAS 5051 and selecting functions	13
4 Electrical/electronic components and locations	15
4.1 ABS Mark 60 (ABS, ABS/EDL/TCS)	15
4.2 ABS Bosch 5.7 (ABS/EDL/TCS/ESP)	16
4.3 ABS Mark 8.0 (ABS, ABS/TCS)	18
4.4 ABS Bosch 8.0 (ABS/EDL/TCS/ESP)	19
5 Fault display via warning lamps	21
6 Assembly overview - hydraulic unit, brake servo/brake master cylinder	23
6.1 ABS Mark 60	23
6.2 ABS/EDL/TCS/ESP Bosch 5.7	33
6.3 Bosch 8.0 ABS, ABS/TCS	42
6.4 Bosch 8.0 ABS/EDL/TCS/ESP	50
7 Removing and installing parts of ABS system on front and rear axle	58
7.1 Removing and installing parts of ABS system on front axle	58
7.2 Removing and installing parts of anti-lock brake system on rear axle (vehicles with drum brakes)	65
7.3 Removing and installing parts of anti-lock brake system on rear axle (vehicles with disc brakes)	68
8 Removing and installing parts of ESP system	72
8.1 Removing and installing yaw rate sender G202 and lateral acceleration sender G200	72
8.2 Removing and installing steering angle sender G85	73
46 - Brakes - mechanism	74
1 Repairing front brakes	74
1.1 Repairing front brakes, brake caliper FS II	74
1.2 Removing and installing brake pads, brake caliper FS II	75
1.3 Removing and installing brake caliper FS II	77
1.4 Repairing front brakes, FS III brake caliper	80
1.5 Removing and installing brake pads, brake caliper FS III	81
1.6 Removing and installing brake caliper FS III	83
1.7 Repairing front brakes, brake caliper C 54-II	86
1.8 Removing and installing brake pads, brake caliper C 54-II	87
1.9 Removing and installing brake caliper C 54-II	89
1.10 Repairing front brakes, FN 3 brake caliper	91



1.11	Removing and installing brake pads, brake caliper FN 3	93
1.12	Removing and installing brake caliper FN 3	96
2	Repairing rear brakes (drum brakes)	98
2.1	Removing and installing rear brakes	98
2.2	Resetting brake	100
2.3	Repairing rear brakes	100
2.4	Removing and installing brake shoes	101
3	Repairing rear brakes (disc brakes)	104
3.1	Removing and installing brake pads/linings	106
3.2	Removing and installing brake caliper	108
4	Assembly overview - handbrake lever	111
4.1	Removing and installing handbrake cable (drum brakes)	111
4.2	Adjusting handbrake	113
4.3	Removing and installing handbrake cable (disc brakes)	113
4.4	Adjusting handbrake	115
5	Assembly overview - brake pedal	117
5.1	Separating brake pedal from brake servo	117
5.2	Removing and installing pedal cluster	119
5.3	Removing and installing brake pedal	119
5.4	Removing and installing brake light switch F and brake pedal switch F47	121
47 - Brakes - hydraulics		123
1	Repairing front brake caliper	123
1.1	Repairing brake caliper FS II	123
1.2	Removing and installing piston for brake caliper FS II	123
1.3	Repairing brake caliper FS III	125
1.4	Removing and installing piston for brake caliper FS III	126
1.5	Repairing brake caliper C 54-II	128
1.6	Removing and installing piston for brake caliper C 54-II	129
1.7	Repairing brake caliper FN 3	131
1.8	Removing and installing piston for brake caliper FN 3	132
2	Repairing rear brake caliper	136
2.1	Removing and installing rear brake caliper piston	137
3	Pressurised leak test	139
3.1	Test prerequisites:	139
4	Assembly overview - brake pressure regulator	140
5	Checking and adjusting brake pressure regulator	141
5.1	Checking and adjusting pressure	141
6	Bleeding brake system	143
6.1	Bleeding brake system using brake filling and bleeding unit VAS 5234 or V.A.G 1869	143
6.2	Changing brake fluid	145
7	Assembly overview - brake servo/brake master cylinder	146
7.1	Overview - vacuum pump for brake servo (diesel vehicles)	147
7.2	Checking non-return valve:	149
8	Removing and installing brake master cylinder	150
8.1	Removing	150
8.2	Installing	151
9	Removing and installing brake servo	152
9.1	Removing	152
9.2	Installing	154
10	Repairing brake lines	155
10.1	Assembly overview - flanging tool	155
10.2	Work instructions	156