



Contents

00 - Technical data	1
1 Checklist for evaluating running gear of accident vehicles	1
2 General information	3
40 - Front suspension	4
1 Appraisal of accident vehicles	4
2 Servicing front suspension	5
2.1 Overview - front axle	5
2.2 Raising wheel suspension to unladen position	6
3 Assembly overview: subframe made of aluminium, anti-roll bar, suspension links	9
3.1 Repairing threads in longitudinal member	11
3.2 Fixing position of subframe	12
3.3 Checking swivel joint	14
3.4 Removing and installing swivel joint	14
3.5 Installation position of swivel joints	17
3.6 Removing and installing suspension link	17
3.7 Removing and installing suspension bracket	19
3.8 Renewing bonded rubber bush for suspension bracket	21
3.9 Removing and installing subframe	24
3.10 Removing and installing anti-roll bar, vehicles with power steering	27
3.11 Removing and installing rubber bush for anti-roll bar	29
4 Assembly overview: subframe made of steel, anti-roll bar, suspension links	33
4.1 Repairing threads in longitudinal member	35
4.2 Fixing position of subframe	35
4.3 Checking swivel joint	37
4.4 Removing and installing swivel joint	38
4.5 Installation position of swivel joints	40
4.6 Removing and installing suspension link	41
4.7 Renewing front bonded rubber bush for suspension link	46
4.8 Renewing rear bonded rubber bush for suspension link	49
4.9 Removing and installing subframe	51
4.10 Removing and installing anti-roll bar	53
4.11 Removing and installing rubber bush for anti-roll bar	55
5 Assembly overview: wheel bearing	58
5.1 Removing and installing front wheel hub with wheel bearing, 13" running gear	60
5.2 Removing and installing front wheel hub with wheel bearing, 14" and 15" running gear	65
6 Assembly overview: suspension strut	71
6.1 Vehicle data sticker	72
6.2 Removing and installing suspension strut	72
6.3 Repairing front coil spring suspension strut	78
7 Removing and installing drive shafts	81
7.1 Removing and installing drive shaft with constant velocity joint	81
7.2 Removing and installing drive shaft with triple roller joint AAR 2000 (bolted on)	84
7.3 Removing and installing drive shafts with triple roller joint AAR 2000i (inserted)	86
8 Repairing drive shaft - overview of drive shafts	91
8.1 Heat shields for drive shafts	93
9 Assembly overview: drive shaft with VL90 or VL100 constant velocity joint	94
9.1 Dismantling and assembling drive shaft with VL90 or VL100 constant velocity joint	96
9.2 Checking outer constant velocity joint	100
9.3 Checking inner constant velocity joint	101
10 Assembly overview: drive shaft with VL107 constant velocity joint	104



10.1	Dismantling and assembling drive shaft with VL107 constant velocity joint	106
11	Assembly overview: drive shaft with triple roller joint AAR 2000/100 (bolted-on)	111
11.1	Dismantling and assembling drive shaft with triple roller joint	113
12	Assembly overview: drive shaft with triple roller joint AAR 2000/108 (bolted-on)	119
12.1	Dismantling and assembling drive shaft with triple roller joint	120
13	Assembly overview: drive shaft with triple roller joint AAR 2000i (inserted)	121
13.1	Dismantling and assembling drive shaft with triple roller joint AAR2000i	123
42 - Rear suspension		128
1	Appraisal of accident vehicles	128
2	Repairing rear axle	129
2.1	Rear axle in unladen position	129
2.2	Removing and installing rear axle	131
2.3	Assembly overview - rear axle beam, drum brake	135
2.4	Assembly overview - axle beam (disc brakes)	138
2.5	Removing and installing bonded rubber bush	140
2.6	Removing and installing spring	143
2.7	Removing and installing shock absorber	144
2.8	Assembly overview - shock absorber on vehicle with front-wheel drive	145
3	Repairing wheel bearing, drum brake	148
3.1	Assembly overview - wheel bearing	148
3.2	Removing and installing wheel bearing/hub unit on vehicles with drum brakes	149
4	Repairing wheel bearing (disc brake)	152
4.1	Assembly overview - wheel bearing	152
4.2	Removing and installing wheel bearing/wheel hub on vehicles with disc brakes	153
44 - Wheels, tyres, vehicle geometry		156
1	Appraisal of accident vehicles	156
2	Specified torque for wheel bolts	157
3	Fitting wheel and tyre	158
3.1	General information	158
3.2	Fittings instructions	158
4	Removing and fitting tyres with run-flat properties to wheel rims	160
4.1	Notes on safety and prerequisites	160
4.2	Fittings instructions	160
4.3	Pressing tyre off wheel rim	161
4.4	Removing tyre from wheel	162
4.5	Fitting tyre to wheel rim	163
5	Tyre Pressure Loss Indicator (TPLI)	166
6	Vehicle alignment check	168
6.1	General information	168
6.2	Conditions for testing	169
6.3	Test preparations	170
6.4	Vehicle data sticker	170
6.5	Wheel alignment specifications	170
6.6	Transverse vehicle inclination "zero position"	172
6.7	Overview - wheel alignment procedure	172
6.8	Adjusting camber at front wheels, subframe made of aluminium	173
6.9	Correcting front axle camber, subframe made of steel	174
6.10	Check rear axle camber	176
6.11	Check rear axle toe	176
6.12	Adjusting front axle toe	176
6.13	Checking left and right-hand wheel lock	176
7	Wheels, tyres	178



7.1	Models with breakdown set	178
7.2	Tyre sealant	178
7.3	Removing a tyre	178
7.4	Fitting a new tyre	179
7.5	Tyre sealant disposal	179
8	Instructions for changing or fitting wheels	180
8.1	Fitting wheels	181
9	Protecting wheel centring seat against corrosion	182
10	Vibration due to wheels/tyres - causes and rectification	183
10.1	Causes of rough running	183
10.2	Balancing wheels	183
10.3	Conducting a road test before balancing wheels	183
10.4	Balancing wheels on stationary wheel balancing machine	184
10.5	Vibration control system VAS 6230	186
10.6	Finish balancer	186
10.7	Radial and lateral runout of wheels and tyres	187
10.8	Checking radial and lateral runout on wheels and tyres with tyre gauge V.A.G 1435	187
10.9	Checking radial and lateral run-out on wheel rim	188
10.10	Matching	189
10.11	Flat spots caused by storage or handling	190
48	Steering	192
1	Appraisal of accident vehicles	192
2	Electrical/electronic components and locations	193
3	Steering column	194
3.1	Removing and installing steering column	194
3.2	Checking steering column for damage	198
3.3	Removing and installing steering lock housing	199
3.4	Assembly overview - cross member for steering column	200
3.5	Removing and installing locking cable for ignition with key removal lock	201
3.6	Checking ignition key removal lock	202
3.7	Removing and installing mounting bracket	202
3.8	Removing and installing strut	203
4	Repairing mechanical (manual) steering rack	205
4.1	Assembly overview - mechanical (manual) steering rack	205
4.2	Removing and installing mechanical (manual) steering rack	206
4.3	Dismantling and assembling mechanical steering rack	210
4.4	Removing and installing track rod	212
4.5	Checking play, security and boots of track rod ends	213
4.6	Checking and adjusting left track rod length	213
4.7	Allocation of track rod ball joints	214
4.8	Determining centre position of steering rack	214
4.9	Adjusting steering rack	214
5	Repairing electrohydraulic power steering (TRW)	216
5.1	Assembly overview - power steering rack (TRW)	216
5.2	Removing and installing power steering rack (TRW)	217
5.3	Removing and installing power steering sensor G250 (TRW)	224
5.4	Dismantling and assembling power steering rack (TRW)	227
5.5	Removing and installing track rod (TRW)	229
5.6	Checking play, tightness and bellows of track rod ball joints (TRW)	230
5.7	Checking and adjusting length of left track rod (TRW)	230
5.8	Allocation of track rod ball joints (TRW)	231
5.9	Determining centre position of rack (TRW)	231
5.10	Adjusting steering rack (TRW)	232
5.11	Checking delivery pressure of motor/pump unit (TRW)	232



5.12	Removing and installing motor/pump unit (TRW)	235
5.13	Assembly overview - motor/pump unit (TRW)	239
5.14	Renewing reservoir of motor/pump unit (TRW)	240
6	Repairing electrohydraulic power steering (Koyo)	244
6.1	Assembly overview - power steering rack (Koyo)	244
6.2	Removing and installing power steering rack (Koyo)	245
6.3	Removing and installing power steering sensor G250 (Koyo)	251
6.4	Dismantling and assembling power steering rack (Koyo)	254
6.5	Removing and installing track rod (Koyo)	256
6.6	Checking play, tightness and bellows of track rod ball joints (Koyo)	257
6.7	Checking and adjusting length of left track rod (Koyo)	257
6.8	Allocation of track rod ball joints (Koyo)	258
6.9	Determining centre position of rack (Koyo)	258
6.10	Adjusting steering rack (Koyo)	259
6.11	Checking delivery pressure of motor/pump unit (Koyo)	259
6.12	Removing and installing motor/pump unit (Koyo)	261
6.13	Assembly overview - motor/pump unit (Koyo)	265
6.14	Renewing reservoir of motor/pump unit (Koyo)	266
7	Bleeding steering system, checking for leaks and checking fluid level	270
7.1	Bleeding steering system	270
7.2	Checking steering system for leaks	270
7.3	Checking hydraulic fluid level of power steering	271