



Contents

27 - Starter, current supply, CCS	1
1 Battery	1
1.1 Types of battery	1
1.2 Warning notices and safety regulations	1
1.3 Battery terminal connection	1
2 Checking battery	2
3 Charging battery	3
4 Disconnecting and reconnecting batteries	4
4.1 Disconnecting battery	4
4.2 Connecting battery	5
5 Removing and installing battery	8
5.1 Removing battery	8
5.2 Installing battery	8
5.3 Removing and installing battery console (vehicles as of 04.05)	9
6 Specified torques: battery	13
7 Starter	14
7.1 Checking starter B	14
7.2 Removing and installing starter, manual gearbox	14
7.3 Removing and installing starter, automatic gearbox	28
8 Specified torques: starter	32
9 Alternator, vehicles up to 03.05	33
9.1 Securing battery positive wire to alternator	33
9.2 Checking poly V-belt	33
9.3 Checking alternator C	33
9.4 Alternator, 1.2 l 40 kW or 47 kW injection engine	34
9.5 Alternator, 1.4 l 55 kW or 74 kW injection engine	38
9.6 Alternator, 1.4 l 63 kW FSI engine	44
9.7 Alternator, 1.6 l 77 kW injection engine	49
9.8 Alternator, 1.4 l 51 kW or 55 kW TDI engine	54
9.9 Alternator, 1.9 l 47 kW SDI engine	59
9.10 Alternator, 1.9 l 74 kW or 96 kW TDI engine	63
9.11 Removing and installing poly V-belt pulley on alternator	68
9.12 Voltage regulator for alternator	72
10 Alternator, vehicles as of 04.05	76
10.1 Securing battery positive wire to alternator	76
10.2 Checking poly V-belt	76
10.3 Checking alternator C	76
10.4 Alternator, 1.2 l 40 kW or 47 kW injection engine	76
10.5 Alternator, 1.4 l 55 kW or 74 kW injection engine	76
10.6 Alternator, 1.4 l 63 kW FSI engine	76
10.7 Alternator, 1.6 l 77 kW injection engine	76
10.8 Alternator, 1.8 l 110 kW turbo engine	81
10.9 Alternator, 1.4 l 51 kW, 55 kW or 59 kW TDI engine	87
10.10 Alternator, 1.9 l 47 kW SDI engine	92
10.11 Alternator, 1.9 l 74 kW or 96 kW TDI engine	92
10.12 Removing and installing poly V-belt pulley on alternator	98
10.13 Voltage regulator for alternator	98
11 Alternator, vehicles as of 06.06	99
11.1 Securing battery positive wire to alternator	99
11.2 Checking poly V-belt	99
11.3 Checking alternator C	99



11.4	Alternator, 1.2 l 40 kW or 47 kW injection engine	99
11.5	Alternator, 1.4 l 55 kW or 74 kW injection engine	99
11.6	Alternator, 1.4 l 59 kW injection engine with air conditioning system	99
11.7	Alternator, 1.4 l 59 kW injection engine with air no conditioning system	104
11.8	Alternator, 1.6 l 77 kW injection engine	109
11.9	Alternator, 1.8 l 110 kW turbo engine	109
11.10	Alternator, 1.4 l 51 kW or 59 kW TDI engine	109
11.11	Alternator, 1.9 l 74 kW or 96 kW TDI engine	109
11.12	Removing and installing poly V-belt pulley on alternator	109
11.13	Voltage regulator for alternator	109
12	Alternator, vehicles with diesel particulate filter	111
12.1	Securing battery positive wire to alternator	111
12.2	Checking poly V-belt	111
12.3	Checking alternator C	111
12.4	Alternator, 1.4 l 51 kW TDI engine with air conditioning system	111
12.5	Alternator, 1.4 l 51 kW TDI engine with no air conditioning system	116
12.6	Alternator, 1.4 l 59 kW TDI engine with air conditioning system	122
12.7	Alternator, 1.4 l 59 kW TDI engine with no air conditioning system	127
12.8	Alternator, 1.9 l 74 kW TDI engine with air conditioning system	132
12.9	Alternator, 1.9 l 74 kW TDI engine with no air conditioning system	137
12.10	Removing and installing poly V-belt pulley on alternator	143
12.11	Voltage regulator for alternator	143
13	Cruise control system (CCS)	144
13.1	Activating and deactivating cruise control system (CCS)	144
90 - Gauges, instruments		145
1	Dash panel insert	145
1.1	Renewing dash panel insert	145
1.2	Removing and installing dash panel insert	146
1.3	Description of back of dash panel insert	147
1.4	Warning lamp symbols in dash panel insert	147
2	Service interval display	149
2.1	Resetting service interval display	149
92 - Windscreen wash/wipe system		150
1	Windscreen wiper system	150
1.1	Removing and installing windscreen wiper system	150
1.2	Adjusting wiper blade park position	155
1.3	Aerodynamic wiper	158
1.4	Removing and installing rain sensor G213	159
1.5	Fitting a new adhesive pad to the rain sensor (Valeo)	160
2	Windscreen washer system	165
2.1	Assembly overview - windscreen washer system	165
2.2	Removing and installing reservoir for windscreen and headlight washer system	167
2.3	Removing and installing windscreen and rear window washer pump V59	168
2.4	Removing and installing windscreen washer fluid level sender G33	169
2.5	Removing and installing windscreen washer jets	170
2.6	Cleaning spray jets for front windscreen washer system	170
2.7	Adjusting windscreen washer system washer jets	170
3	Rear window wiper system	171
3.1	Assembly overview - rear window wiper system	171
3.2	Removing and installing rear window wiper	171
3.3	Adjusting rear window wiper park position	172
4	Rear window washer system	174
4.1	Assembly overview - rear window washer system	174



4.2	Removing and installing spray jet	175
4.3	Cleaning spray jet	175
4.4	Adjusting washer jet	175
5	Headlight washer system	176
5.1	Assembly overview - headlight washer system	176
5.2	Removing and installing washer jet assembly	178
5.3	Removing and installing pop-up washer spray jet cylinder, vehicles up to 03.05	178
5.4	Removing and installing pop-up washer spray jet cylinder, vehicles as of 04.05	179
5.5	Removing and installing headlight washer system pump V11	180
5.6	Adjusting headlight washer system jets	180
5.7	Bleeding headlight washer system	180
6	Washer fluid line hose couplings	181
7	Hose repair	182
8	Specified torques for windscreen wash/wipe system	183
94	Lights, bulbs, switches - exterior	184
1	Headlight, vehicles up to 03.05	184
1.1	Assembly overview - headlight	184
1.2	Removing and installing headlight	185
1.3	Adjusting headlight installation position	187
1.4	Renewing headlight bulbs	188
1.5	Headlight range control motor	196
1.6	Repairing headlight retaining tabs	201
1.7	Converting headlights for use when driving on the left or right	203
1.8	Adjusting headlight	205
2	Headlight, vehicles as of 04.05	206
2.1	Assembly overview - headlight	206
2.2	Removing and installing headlight	208
2.3	Adjusting headlight installation position	209
2.4	Renewing headlight bulbs; headlight manufacturer: Hella	211
2.5	Renewing headlight bulbs; headlight manufacturer: Valeo	220
2.6	Headlight range control motor	228
2.7	Repairing headlight retaining tabs	234
2.8	Converting headlights for use when driving on the left or right	237
2.9	Adjusting headlight	239
3	Front fog light, vehicles up to 03.05	240
3.1	Fog lights (except Polo Fun)	240
3.2	Fog lights (Polo Fun only)	242
3.3	Adjusting fog light	244
4	Front fog light, vehicles as of 04.05	245
4.1	Fog lights (except Polo Cross/Dune)	245
4.2	Fog light Polo Cross (Polo Dune)	247
4.3	Adjusting fog light	248
5	Side mounted repeater turn signals, vehicles up to 03.05	249
5.1	Removing and installing side mounted repeater turn signal	249
6	Mirror turn signal bulb in exterior mirror, vehicles from 04.05	250
7	Tail lights, vehicles up to 03.05	251
7.1	Assembly overview - tail lights	251
7.2	Removing and installing tail light	252
7.3	Removing and installing bulb holder	253
8	Tail lights, vehicles as of 04.05	254
8.1	Assembly overview - tail lights	254
8.2	Removing and installing tail light	254
8.3	Removing and installing bulb holder	255



9	Additional brake light	257
9.1	Additional brake light (except Polo GTI, Polo Blue Motion)	257
9.2	Additional brake light (Polo GTI, Polo Blue Motion)	258
10	Number plate lights	260
10.1	Removing and installing number plate light X	260
11	Steering column switch	261
11.1	Removing and installing steering column switch	262
11.2	Removing and installing airbag coil connector and return ring with slip ring F138	264
11.3	Basic setting of steering angle sensor G85	265
12	Ignition/starter switch and lock cylinder	267
12.1	Removing and installing lock cylinder	267
12.2	Ignition/starter switch D	268
13	Steering lock housing	270
13.1	Removing and installing steering lock housing	270
14	Parking aid, vehicles as of 04.05	272
14.1	Assembly overview	272
14.2	Parking aid control unit J446	273
14.3	Parking aid warning buzzer H15	275
14.4	Rear parking aid senders	275
15	Specified torques: lights, bulbs, switches - exterior	278
15.1	Specified torques: headlight	278
15.2	Specified torques: fog light	278
15.3	Specified torques: tail light	278
15.4	Specified torques: additional brake light	278
15.5	Specified torques: steering column switch	278
96 -	Lights, bulbs, switches - interior	279
1	Interior lights and switches	279
1.1	Removing and installing interior monitoring deactivation switch E267	279
2	Lights and switches in engine compartment	280
2.1	Removing and installing bonnet contact switch F266	280
3	Lights and switches in dash panel	281
3.1	Removing and installing light switch E1	281
3.2	Removing and installing headlight range control adjuster E102 and switches and instruments lighting control E20	282
3.3	Removing and installing switches, lights and regulators in centre of dash panel	282
3.4	Removing and installing front passenger side airbag deactivation key switch E224	284
4	Lights and switches in front doors	285
4.1	Removing and installing switch module for driver side window lift	285
4.2	Removing and installing window lift switch in passenger door E107	285
4.3	Removing and installing switch module for driver side mirror adjustment	286
4.4	Removing and installing driver side interior locking switch E150	286
4.5	Removing and installing central locking deadlock function warning lamp K133	287
4.6	Removing and installing left door warning lamp M27 and right door warning lamp M28 ..	288
4.7	Removing and installing door contact switch	289
5	Lights and switches in rear doors	291
5.1	Removing and installing rear left window regulator switch in door E52	291
5.2	Removing and installing rear right window regulator switch in door E54	291
6	Lights and switches in luggage compartment	292
6.1	Removing and installing luggage compartment light switch F5	292
6.2	Removing and installing luggage compartment light W3	292
7	Lights and switches in roof trim	294
7.1	Front interior light W1	294
7.2	Front interior light W1 with reading lights and preparation for telephone	296



7.3	Front interior light W1 with reading lights and regulator for sunroof	300
7.4	Rear interior light W43	304
7.5	Removing and installing illuminated vanity mirror	305
8	Horn	308
8.1	Single tone horn	308
8.2	Dual tone horn	309
8.3	Horn plate H	311
9	Immobilizer	313
9.1	Immobilizer control unit J362	313
9.2	Immobilizer reader coil D2	313
9.3	Ignition key	313
10	Anti-theft alarm system (ATA)	315
10.1	Activating and deactivating anti-theft alarm system	315
10.2	Removing and installing interior monitoring deactivation switch E267	316
10.3	Anti-theft alarm ultrasonic sensor G209	316
10.4	Central locking and anti-theft alarm system aerial R47	318
10.5	Alarm horn H12	319
11	Specified torques: lights, bulbs, switches - interior	322
11.1	Specified torques: horn or dual tone horn H1	322
11.2	Specified torques: signal horn activation H	322
11.3	Specified torques: alarm horn H12	322
97 - Wiring		323
1	Vehicle diagnosis, testing and information systems	323
2	Fuse holder	324
2.1	Removing and installing fuse holder	324
2.2	Main fuse carrier, vehicles up to 03.05	324
2.3	Main fuse carrier, vehicles as of 04.05	329
3	Relay carrier	337
3.1	Removing and installing relay carrier	337
4	Potential distributor	339
4.1	Removing and installing voltage distributor	339
5	Connector points and compact connector	340
5.1	A-pillar coupling station	340
5.2	B-pillar coupling station	340
5.3	Compact connector at bulkhead	340
6	Control units	344
6.1	Onboard supply control unit J519	344
6.2	Data bus diagnostic interface J533	348
6.3	Convenience system central control unit J393	348
7	Specified torques: wires/cables	350
7.1	Specified torques: fuse holder	350
7.2	Specified torques: main fuse carrier	350
7.3	Specified torques: compact connector	350
8	Wiring harness and connector repairs	351