



## Contents

<b>68 - Interior equipment</b> .....	<b>1</b>
<b>1 Interior mirror</b> .....	<b>1</b>
1.1 Removing interior mirror .....	1
1.2 Installing interior mirror .....	1
1.3 Bonding retaining plate for interior mirror .....	1
1.4 Automatic anti-dazzle interior mirror .....	2
1.5 Removing and installing interior mirror on vehicles with a rain sensor .....	3
1.6 Bonding on interior mirror base with rain sensor .....	4
<b>2 Compartments, covers and trims</b> .....	<b>6</b>
2.1 Removing and installing upper part of centre console .....	6
2.2 Removing and installing lower part of centre console .....	8
2.3 Removing handbrake lever handle .....	9
2.4 Removing driver side compartment .....	9
2.5 Removing front passenger side compartment .....	10
2.6 Removing glove compartment .....	10
2.7 Removing sun visor .....	11
2.8 Removing middle sun visor .....	11
<b>3 Sill panel trims</b> .....	<b>12</b>
3.1 Removing and installing sill panel trim (4-door) .....	12
3.2 Removing and installing sill panel trim (2-door) .....	13
<b>4 Grab handles</b> .....	<b>15</b>
4.1 Removing roof grab handle .....	15
<b>69 - Passenger protection</b> .....	<b>16</b>
<b>1 Seat belts</b> .....	<b>16</b>
1.1 Safety regulations for belt tensioners .....	16
1.2 Disposal of belt tensioner units .....	16
1.3 Checking belt tensioner .....	16
1.4 Removing and installing seat belt with belt tensioner unit (4-door) .....	16
1.5 Removing and installing seat belt with belt tensioner unit (2-door) .....	19
1.6 Removing and installing belt height adjustment .....	21
1.7 Removing front belt end anchor (4-door) .....	22
1.8 Removing front belt anchor rail (2-door) .....	22
1.9 Removing front belt buckle .....	23
1.10 Removing and installing rear outer seat belts .....	23
1.11 Removing and installing belt buckle and belt guide of middle rear 3rd three-point seat belt .....	26
1.12 3. Removing and installing rear middle three-point seat belt .....	27
1.13 Removing and installing lap belt and double buckle .....	29
<b>2 Inspecting seat belts</b> .....	<b>30</b>
2.1 Points to check .....	30
<b>3 Airbag</b> .....	<b>33</b>
3.1 Overview - installation locations .....	33
3.2 Safety precautions when working on airbag .....	33
3.3 Additional safety precautions for the curtain airbag .....	34
3.4 Disposal of airbag units .....	34
3.5 Deactivating the airbag .....	34
3.6 Renewing airbag units following an accident .....	35
3.7 Removing and installing driver airbag unit .....	36
3.8 Removing and installing steering wheel .....	39
3.9 Removing and installing return spring with slip ring .....	40
3.10 Removing and installing front passenger airbag unit .....	41



3.11	Removing and installing airbag control unit (J234)	45
3.12	Removing and installing driver and front passenger side airbag	46
3.13	Removing and installing curtain airbag on driver and passenger side	48
3.14	Removing and installing crash sensor for side airbag for driver or front passenger	50
3.15	Removing and installing crash sensor for right curtain airbag	52
3.16	Removing and installing crash sensor for left curtain airbag	54
3.17	Adapting components	55
<b>70</b>	<b>- Trim, insulation</b>	<b>56</b>
<b>1</b>	<b>Dash panel</b>	<b>56</b>
1.1	Tools	56
1.2	Removing and installing dash panel	56
1.3	Removing and installing dash panel cross member	61
<b>2</b>	<b>Door trims</b>	<b>65</b>
2.1	Tools	65
2.2	Removing and installing front door trim on driver side	65
2.3	Removing and installing front door trim on passenger side	70
2.4	Removing and installing rear door trim	75
<b>3</b>	<b>Pillar and side trims</b>	<b>81</b>
3.1	Tools	81
3.2	Removing and installing upper A-pillar trim	81
3.3	Removing lower right A-pillar trim	83
3.4	Removing lower left A-pillar trim	84
3.5	Removing and installing lower B-pillar trim (4-door)	84
3.6	Removing and installing upper B-pillar trim	86
3.7	Removing and installing upper B-pillar trim (2-door)	88
3.8	Removing and installing upper C-pillar trim (4-door)	90
3.9	Removing and installing upper C-pillar trim (2-door)	92
3.10	Removing and installing lower C-pillar trim	95
3.11	Removing and installing rear seat trim	97
<b>4</b>	<b>Luggage compartment trims</b>	<b>100</b>
4.1	Tools	100
4.2	Removing and installing support for luggage compartment cover	100
4.3	Removing and installing luggage compartment floor trim	101
4.4	Removing and installing left luggage compartment side trim	102
4.5	Removing and installing right luggage compartment side trim	103
4.6	Removing and installing rear lock carrier cover	104
<b>5</b>	<b>Rear lid trim</b>	<b>107</b>
5.1	Removing and installing lower rear lid trim	107
5.2	Removing and installing upper rear lid trim	108
<b>6</b>	<b>Roof trims</b>	<b>111</b>
6.1	Removing and installing moulded headliner (vehicles without sunroof)	111
6.2	Removing and installing moulded headliner (vehicles with sunroof)	115
<b>7</b>	<b>Removing and installing roof insulation/reinforcement</b>	<b>120</b>
7.1	Removing	120
7.2	Installing	121
<b>72</b>	<b>- Seat frames</b>	<b>123</b>
<b>1</b>	<b>Front seats</b>	<b>123</b>
1.1	Tools	123
1.2	Removing and installing front seat	123
1.3	Removing and installing front seat trim (basic)	127
1.4	Removing and installing front seat trim (with parallel height adjustment)	129
1.5	Removing and installing drawer on driver and passenger side	130
1.6	Removing and installing front backrest	131



1.7	Removing and installing parallel height adjustment	133
1.8	Removing and installing cable and Bowden cable for locking backrest	134
1.9	Removing head restraint guides	137
<b>2</b>	<b>Rear seats</b>	<b>139</b>
2.1	Removing (divided) bench seat	139
2.2	Removing and installing (divided) backrest	139
2.3	Removing and installing (one-piece) backrest	141
<b>74</b>	<b>Seat - padding, covers</b>	<b>143</b>
<b>1</b>	<b>Front seat covers and padding</b>	<b>143</b>
1.1	Tools	143
1.2	Removing and installing front seat cover and padding	143
1.3	Removing and installing front backrest cover and padding	146
<b>2</b>	<b>Seat heater elements</b>	<b>149</b>
2.1	Removing seat heater element	149
2.2	Removing backrest heater element	149
<b>3</b>	<b>Rear seat covers and padding</b>	<b>151</b>
3.1	Tools	151
3.2	Removing and installing cover and padding for (one-piece) bench seat	151
3.3	Removing and installing cover and padding for (one-piece) backrest	152
3.4	Removing and installing covers and padding for (divided) backrest	153