



## Contents

<b>50 - Body - front</b> .....	<b>1</b>
<b>1 Lock carrier</b> .....	<b>1</b>
1.1 Tools .....	1
1.2 Assembly overview - lock carrier > 03.05 .....	1
1.3 Lock carrier - service position > 03.05 .....	3
1.4 Removal and installation of lock carrier > 03.05 .....	4
1.5 Assembly overview - lock carrier 04.05 > .....	6
1.6 Lock carrier - service position 04.05 > .....	7
1.7 Removal and installation of lock carrier 04.05 > .....	8
<b>2 Wing</b> .....	<b>11</b>
2.1 Assembly overview - front wing .....	11
2.2 Removal and installation of wing .....	12
2.3 Removal and installation of closing piece .....	14
2.4 Wing dimensions - Vehicles > 02.05 .....	14
2.5 Wing dimensions - Vehicles 03.05 > .....	16
<b>3 Noise insulation</b> .....	<b>17</b>
3.1 Assembly overview - noise insulation (petrol engine) .....	17
3.2 Assembly overview - noise insulation (diesel engine) .....	18
<b>4 Cross panel</b> .....	<b>19</b>
4.1 Tools .....	19
4.2 Materials .....	19
4.3 Assembly overview - cross panel .....	20
<b>55 - Bonnet, rear lid</b> .....	<b>21</b>
<b>1 Bonnet</b> .....	<b>21</b>
1.1 Tools .....	21
1.2 Assembly overview - bonnet .....	21
1.3 Removal and installation of bonnet .....	23
1.4 Adjusting bonnet .....	25
1.5 Removing gas-filled strut .....	25
1.6 Removal and installation of Bowden cable .....	26
1.7 Removal and installation of release lever .....	29
1.8 Assembly overview - bonnet lock .....	31
1.9 Removal and installation of lid lock .....	31
<b>2 Rear lid</b> .....	<b>33</b>
2.1 Tools .....	33
2.2 Assembly overview .....	33
2.3 Removing gas-filled strut .....	35
2.4 Releasing gas from gas-filled strut .....	35
2.5 Adjusting rear lid .....	35
2.6 Removal and installation of lid lock .....	37
<b>3 Tank flap unit</b> .....	<b>41</b>
3.1 Removal and installation of tank flap unit .....	41
<b>57 - Front doors, door components, central locking</b> .....	<b>43</b>
<b>1 Front door</b> .....	<b>43</b>
1.1 Tools .....	43
1.2 Assembly overview .....	43
1.3 Removal and installation of door .....	46
1.4 Adjusting door .....	46
1.5 Assembly overview - door handle and door lock .....	47
1.6 Removal and installation of lock cylinder housing .....	49



1.7	Removal and installation of door handle	50
1.8	Removal and installation of door lock	51
1.9	Removal and installation of locking knob for locking rod	55
1.10	Door seals	57
<b>2</b>	<b>Central locking</b>	<b>63</b>
2.1	Location overview - central locking components	63
2.2	Removal of control unit for convenience system	66
2.3	Adapting keys with remote control	66
2.4	Removal and installation of battery for folding key with remote control	66
<b>58</b>	<b>Rear doors, door components</b>	<b>69</b>
<b>1</b>	<b>Rear door</b>	<b>69</b>
1.1	Tools	69
1.2	Assembly overview	70
1.3	Removal and installation of door	71
1.4	Adjusting door	72
1.5	Assembly overview - door handle and door lock	72
1.6	Removal and installation of door handle	74
1.7	Removal and installation of door lock	76
1.8	Door seals	82
<b>60</b>	<b>Sunroof</b>	<b>88</b>
<b>1</b>	<b>Sliding/tilting sunroof</b>	<b>88</b>
1.1	Function	88
1.2	Assembly overview - sliding/tilting sunroof with glass panel	88
1.3	Removal of sliding/tilting sunroof glass panel	91
1.4	Installation of glass panel for sliding/tilting sunroof	92
1.5	Adjusting sliding/tilting sunroof glass panel (height adjustment)	92
1.6	Adjusting panel seal	94
1.7	Renewing panel seal	95
1.8	Removing wind deflector	96
1.9	Removal and installation of sun blind	96
1.10	Removing pre-selector switch for sliding/tilting sunroof (E 139)	96
1.11	Removal of drive for sliding/tilting sunroof	97
1.12	Adjusting drive for sliding/tilting sunroof (zero position)	97
1.13	Checking parallel running	97
1.14	Adjusting parallel running	98
1.15	Removing guide plate	98
1.16	Removal and installation of assembly unit	99
1.17	Removal of guide with cable	101
1.18	Cleaning water drain hoses	102
<b>63</b>	<b>Bumpers</b>	<b>104</b>
<b>1</b>	<b>Front bumper</b>	<b>104</b>
1.1	Tools	104
1.2	Repairing front bumper cover	104
<b>2</b>	<b>Front bumper &gt; 03.05</b>	<b>106</b>
2.1	Assembly overview - bumper cover > 03.05	106
2.2	Removal and installation of bumper cover > 03.05	107
2.3	Assembly overview - bumper carrier > 03.05	108
<b>3</b>	<b>Front bumper 04.05 &gt;</b>	<b>109</b>
3.1	Assembly overview - front bumper 04.05 >	109
3.2	Removal and installation of front bumper cover 04.05 >	110
3.3	Front bumper attachments 04.05 >	112
3.4	Front bumper attachments - Blue Motion and GT Rocket	112



3.5	Assembly overview - front bumper carrier 04.05 >	114
<b>4</b>	<b>Front bumper, Polo Fun</b>	<b>115</b>
4.1	Assembly overview - bumper cover, Polo Fun	115
4.2	Removal and installation of front bumper cover, Polo Fun	116
4.3	Assembly overview - bumper carrier, Polo Fun	117
<b>5</b>	<b>Front bumper, Cross Polo</b>	<b>118</b>
5.1	Assembly overview - bumper cover, Cross Polo	118
5.2	Removal and installation of bumper cover, Cross Polo	119
5.3	Assembly overview - bumper carrier, Cross Polo	120
<b>6</b>	<b>Front bumper, Polo GTI Cup Edition</b>	<b>121</b>
6.1	Assembly overview - bumper cover, Polo GTI Cup Edition	121
6.2	Removing and installing bumper cover, Polo GTI Cup Edition	122
6.3	Bumper cover attachments, Polo GTI Cup Edition	123
6.4	Assembly overview - bumper carrier, Polo GTI Cup Edition	124
6.5	Assembly overview - dimensions for number plate attachment	125
<b>7</b>	<b>Rear bumper</b>	<b>126</b>
7.1	Tools	126
7.2	Repairing rear bumper cover	126
<b>8</b>	<b>Rear bumper</b>	<b>127</b>
8.1	Assembly overview - rear bumper cover	127
8.2	Assembly overview - rear bumper cover, Blue Motion and GT Rocket	127
8.3	Removal and installation of rear bumper cover	129
8.4	Assembly overview - bumper carrier	130
<b>9</b>	<b>Rear bumper, Polo Fun</b>	<b>131</b>
9.1	Assembly overview - bumper cover, Polo Fun	131
9.2	Removal and installation of bumper cover, Polo Fun	132
9.3	Assembly overview - bumper carrier, Polo Fun	133
<b>10</b>	<b>Rear bumper, Cross Polo</b>	<b>134</b>
10.1	Assembly overview - bumper cover, Cross Polo	134
10.2	Removal and installation of bumper cover, Cross Polo	135
10.3	Assembly overview - bumper carrier, Cross Polo	136
10.4	Adapting bumper to wheel housing liner	137
<b>11</b>	<b>Rear bumper, Polo GTI Cup Edition</b>	<b>138</b>
11.1	Assembly overview - rear bumper cover, Polo GTI Cup Edition	138
11.2	Removing and installing rear bumper cover, Polo GTI Cup Edition	139
11.3	Rear bumper cover attachments, Polo GTI Cup Edition	140
11.4	Assembly overview - bumper carrier, Polo GTI Cup Edition	141
<b>12</b>	<b>Towing bracket</b>	<b>142</b>
12.1	Assembly overview - towing bracket	142
<b>64</b>	<b>- Glazing</b>	<b>143</b>
<b>1</b>	<b>Flush bonded windows</b>	<b>143</b>
1.1	Tools	143
1.2	Materials	144
1.3	Repairing windscreen	145
1.4	Assembly overview - windscreen	145
1.5	Removal and installation of plenum chamber cover	147
1.6	Removing windscreen	149
1.7	Installing windscreen	150
1.8	Preparing windscreen with viewing hole for chassis number for vehicles without chassis number	150
1.9	Assembly overview - side window (2-door)	151
1.10	Removal of undamaged side window (2-door)	151
1.11	Removal of damaged side window (2-door)	152



1.12	Installation of side window (2-door)	152
1.13	Assembly overview - side window (4-door)	153
1.14	Removal of undamaged side window (4-door)	153
1.15	Removal of damaged side window (4-door)	154
1.16	Installation of side window (4-door)	154
1.17	Assembly overview - rear window	155
1.18	Removal of undamaged rear window	155
1.19	Removal of broken rear window	157
1.20	Installation of rear window	157
1.21	Preparing old undamaged window for glazing	157
1.22	Preparing new window with precoating for glazing	158
1.23	Preparing new window without precoating for glazing	158
1.24	Preparing body flange for glazing	163
1.25	Installation instructions	164
1.26	Minimum curing period	164
1.27	Touching up paint damage	165
1.28	Cleaning off excess adhesive sealing material	165
<b>2</b>	<b>Screw-fastened windows</b>	<b>166</b>
2.1	Removal and installation of vent wing	166
2.2	Window seal	167
2.3	Adjusting vent wing	167
<b>3</b>	<b>Door windows</b>	<b>169</b>
3.1	Tools	169
3.2	Assembly overview - front door window	170
3.3	Removing front door window	171
3.4	Adjusting front door window	172
3.5	Removal and installation of front and rear assembly carriers	172
3.6	Assembly overview - rear door window	175
3.7	Removing rear door window	178
3.8	Fitting rear door window to window lifter	179
3.9	Removal and installation of assembly carrier	179
3.10	Electric window regulator with convenience function (automatic opening and closing) and force limitation mechanism	183
3.11	Overcoming resistance with excess force limitation	185
3.12	Removal and installation of window lifter motor in assembly carrier	185
<b>66</b>	<b>Exterior equipment</b>	<b>188</b>
<b>1</b>	<b>Removal and installation of wheel housing liner</b>	<b>188</b>
1.1	Front wheel housing liner	188
1.2	Rear wheel housing liner	190
<b>2</b>	<b>Exterior mirror</b>	<b>191</b>
2.1	Tools	191
2.2	Assembly overview - exterior mirror (with electric actuation) > 02.05	191
2.3	Assembly overview - exterior mirror (with manual actuation) > 02.05	193
2.4	Removing mirror housing > 02.05	193
2.5	Assembly overview - exterior mirror 03.05 >	194
2.6	Removal and installation of mirror glass 03.05 >	195
2.7	Removal and installation of mirror housing 03.05 >	196
2.8	Removal and installation of cover with side turn signal repeaters 03.05 >	197
2.9	Removal and installation of exterior mirror 03.05 >	197
<b>3</b>	<b>Radiator grille</b>	<b>199</b>
3.1	Tools	199
3.2	Assembly overview - radiator grille > 03.50	199
3.3	Removal and installation of radiator grille > 03.05	200
3.4	Assembly overview - radiator grille 04.05 >	201



3.5	Removal and installation of radiator grille 04.05 >	202
3.6	Radiator grille, Polo Blue Motion	204
<b>4</b>	<b>Mouldings and trims</b>	<b>207</b>
4.1	Tools	207
4.2	Renewing side protective strips	207
4.3	Assembly overview - side member extension, Polo GTI	209
4.4	Removing and installing side member extension, Polo GTI	210
4.5	Removing and installing retaining strip for side member extension	212
4.6	Assembly overview - wheel arch trims, Polo GTI Cup Edition and GT Rocket	214
<b>5</b>	<b>Roof edge spoiler</b>	<b>215</b>
5.1	Tools	215
5.2	Materials	215
5.3	Roof spoiler, Polo GTI and GT Rocket	216
5.4	Assembly overview - roof spoiler, Polo GTI Cup Edition	219
5.5	Roof spoiler, Polo Blue Motion	224
5.6	Preparing body kit component for bonding	227
5.7	Installation instructions	227
5.8	Minimum curing period	228
5.9	Touching up paint damage	228
5.10	Cleaning off excess adhesive sealing material	228
<b>6</b>	<b>Special attachments</b>	<b>229</b>
6.1	Safety requirements	229
6.2	Tools	229
6.3	Materials	229
6.4	Special attachments, Polo Fun	230
6.5	Special attachments, Cross Polo	235
6.6	Special attachments, Polo GTI Cup Edition	248
6.7	Special attachments, Polo Blue Motion	249
6.8	Special attachments Polo GT Rocket	250
6.9	Side member extension, Polo Blue Motion, GTI Cup Edition and GT Rocket	251
6.10	Preparing body kit component for bonding	254
6.11	Preparing body kit component for bonding	254
6.12	Installation instructions	254
6.13	Minimum curing period	255
6.14	Touching up paint damage	255
6.15	Cleaning off excess adhesive sealing material	255
<b>7</b>	<b>Roof rail</b>	<b>256</b>
7.1	Roof rail, Polo Fun	256
7.2	Roof rail, Cross Polo	258
<b>8</b>	<b>Lettering</b>	<b>261</b>
8.1	Tools	261
8.2	Attachment notes for lettering	261
8.3	Rear lettering dimensions	261
8.4	Side lettering	264