



Contents

80 - Heating	1
1 Repairing heating system	1
1.1 Passenger compartment heating	1
1.2 Removing fresh air blower V2	2
1.3 Removing and installing fresh air blower series resistor with overheating fuse N24	3
1.4 Removing and installing dust and pollen filter	4
1.5 Removing vents	5
1.6 Removing and installing rear footwell air duct	7
1.7 Removing and installing controls for heated and fresh air	8
1.8 Connectors on controls for heated and fresh air	9
1.9 Removing and installing flexible shafts	10
1.10 Checking ventilation	11
2 Removing and installing heater unit	12
3 Dismantling and assembling heater unit	14
3.1 Removing and installing air distribution flap actuator	15
3.2 Removing and installing temperature flap actuator	16
3.3 Removing and installing fresh air/air recirculation flap control motor V154	17
3.4 Assembly overview - heat exchanger	18
3.5 Removing and installing heat exchanger	19
3.6 Removing and installing auxiliary air heater element Z35	21
3.7 Checking auxiliary air heater element Z35	23
87 - Air conditioning system	27
1 Notes on repair work to vehicles with air conditioning and on handling refrigerant	27
1.1 Notes concerning odours in air conditioned vehicles	27
2 Air conditioning system with manual regulation "Climatic"	28
2.1 Air conditioning and heating - passenger compartment	28
2.2 Removing and installing heating and air conditioning controls, Climatic	30
2.3 Connections on controls for heating and air conditioning, Climatic	31
2.4 Removing and installing flexible shaft	32
2.5 Removing and installing temperature flap control motor V68	33
2.6 Climatic - engine compartment	34
2.7 Checking water drain valve	35
2.8 Checking high-pressure safety valve on air conditioner compressor	35
2.9 Removing and installing high-pressure sender G65	36
3 Automatic air conditioning system "Climatronic"	37
3.1 Procedure when checking and adjusting components	37
3.2 Function of operating and display unit for Climatronic air conditioning system E87 with Climatronic control unit J255	38
3.3 Removing and installing operating and display unit for Climatronic air conditioning system E87 with Climatronic control unit J255	39
3.4 Connectors on Climatronic control unit J255	40
3.5 Climatronic - passenger compartment	41
3.6 Removing and installing footwell vent temperature sender G192	43
3.7 Removing and installing evaporator out-flow temperature sender G263	44
3.8 Removing and installing centre vent temperature sender G191	44
3.9 Removing and installing sunlight penetration photosensor G107	45
3.10 Removing and installing fresh air intake duct temperature sensor G89	45
3.11 Removing and installing fresh air blower control unit J126	46
3.12 Making adapter cable for control motor actuation up to WEEK 49/2003	47
3.13 Making adapter cable for control motor actuation from WEEK 50/2003	47
3.14 Removing and installing air flow flap control motor V71	48
3.15 Removing and installing centre flap control motor V70	49



3.16	Removing and installing defroster flap control motor V107 and temperature flap control motor V68	50
3.17	Climatronic - engine compartment	52
4	Bracket for air conditioner compressor	54
4.1	Removing and installing bracket for air conditioner compressor, engine codes: ATD, AXR, ASZ, BMT and BLT	54
4.2	Removing and installing bracket for air conditioner compressor, engine codes: AMF, BAY, BMS, BNM, BNV and BWB	56
4.3	Removing and installing bracket for air conditioner compressor, engine codes: AUA, AUB, BBY, BBZ, BKY and BUD	58
4.4	Removing and installing poly V-belt pulley or air conditioning system magnetic clutch N25	60
5	Repair work on refrigerant circuit which may be performed only in appropriate workshops by specially trained mechanics	62
5.1	Required special tools, workshop equipment, testers, measuring instruments and auxiliary items	62
5.2	Removing and installing heater and air conditioning unit	63
5.3	Dismantling and assembling heater and air conditioner unit "Climatic"	65
5.4	Dismantling and assembling heater and air conditioning unit, "Climatronic"	67
5.5	Renewing refrigerant circuit components	68
5.6	Removing evacuating and charging valve, high-pressure side and low-pressure side	71
5.7	Removing dryer cartridge	73
5.8	Dismantling and assembling evaporator housing	77
5.9	Expansion valve, function and removal	78
5.10	Removing and installing condenser	79
5.11	Quick-release coupling	81
5.12	Removing and installing air conditioner compressor	83
5.13	Notes on installing air conditioner compressor	88
6	Capacities	90
6.1	Refrigerant R134a	90
6.2	Refrigerant oil	90